

How do I switch operating power on my PS125?

To change operating power between 100VAC and 200VAC you will need to disassemble the PS125 and change a wire jumper on the circuit board.

1. Remove the top, bottom, and end case from the unit (18 screws).
2. Move the jumper as shown below.

Warning: Shock Hazard. Change this jumper only when the unit is disconnected from power.

