

### Expanded RF Modification

1. Remove power and antenna.
2. Remove screws open case.
3. Locate RF board.
4. **Cut (white resistor) jumper** located between D31 and 'C' wire.
5. Reset the microprocessor.
6. Reassemble the radio.

### IC-745

### Expanded RF Modification

1. Remove Power and Antenna.
2. Remove screws open case.
3. Locate RF board on the side of the radio.
4. **Cut the light brown wire on J7 Pin 1.**
5. Reassemble the radio.

### IC-751

### Expanded RF Modification

#### OLDER VERSION

1. Remove Power and Antenna.
2. Remove screws open case.
3. Locate RF board on the side of the radio.
4. **Cut the black wire on J2 Pin 1.**
5. Reassemble the radio.

### Expanded RF Modification

#### NEW VERSION IC-751A

1. Remove Power and Antenna.
2. Remove screws open case.
3. Locate noise blanker board. (Near upper left hand of the front panel)
4. Locate and **cut resistor R34.** (far left end of the noise blanker board)
5. Reassemble the radio.

