

ICOM
22974

B5241F ← DIP ←

1
L30A

5
R55


3
L30B


6
J851
MKR


7
J852
MKR

HP201
HP151
HP401
HP481
HP483
HP601
HP701

L328
L358
L378

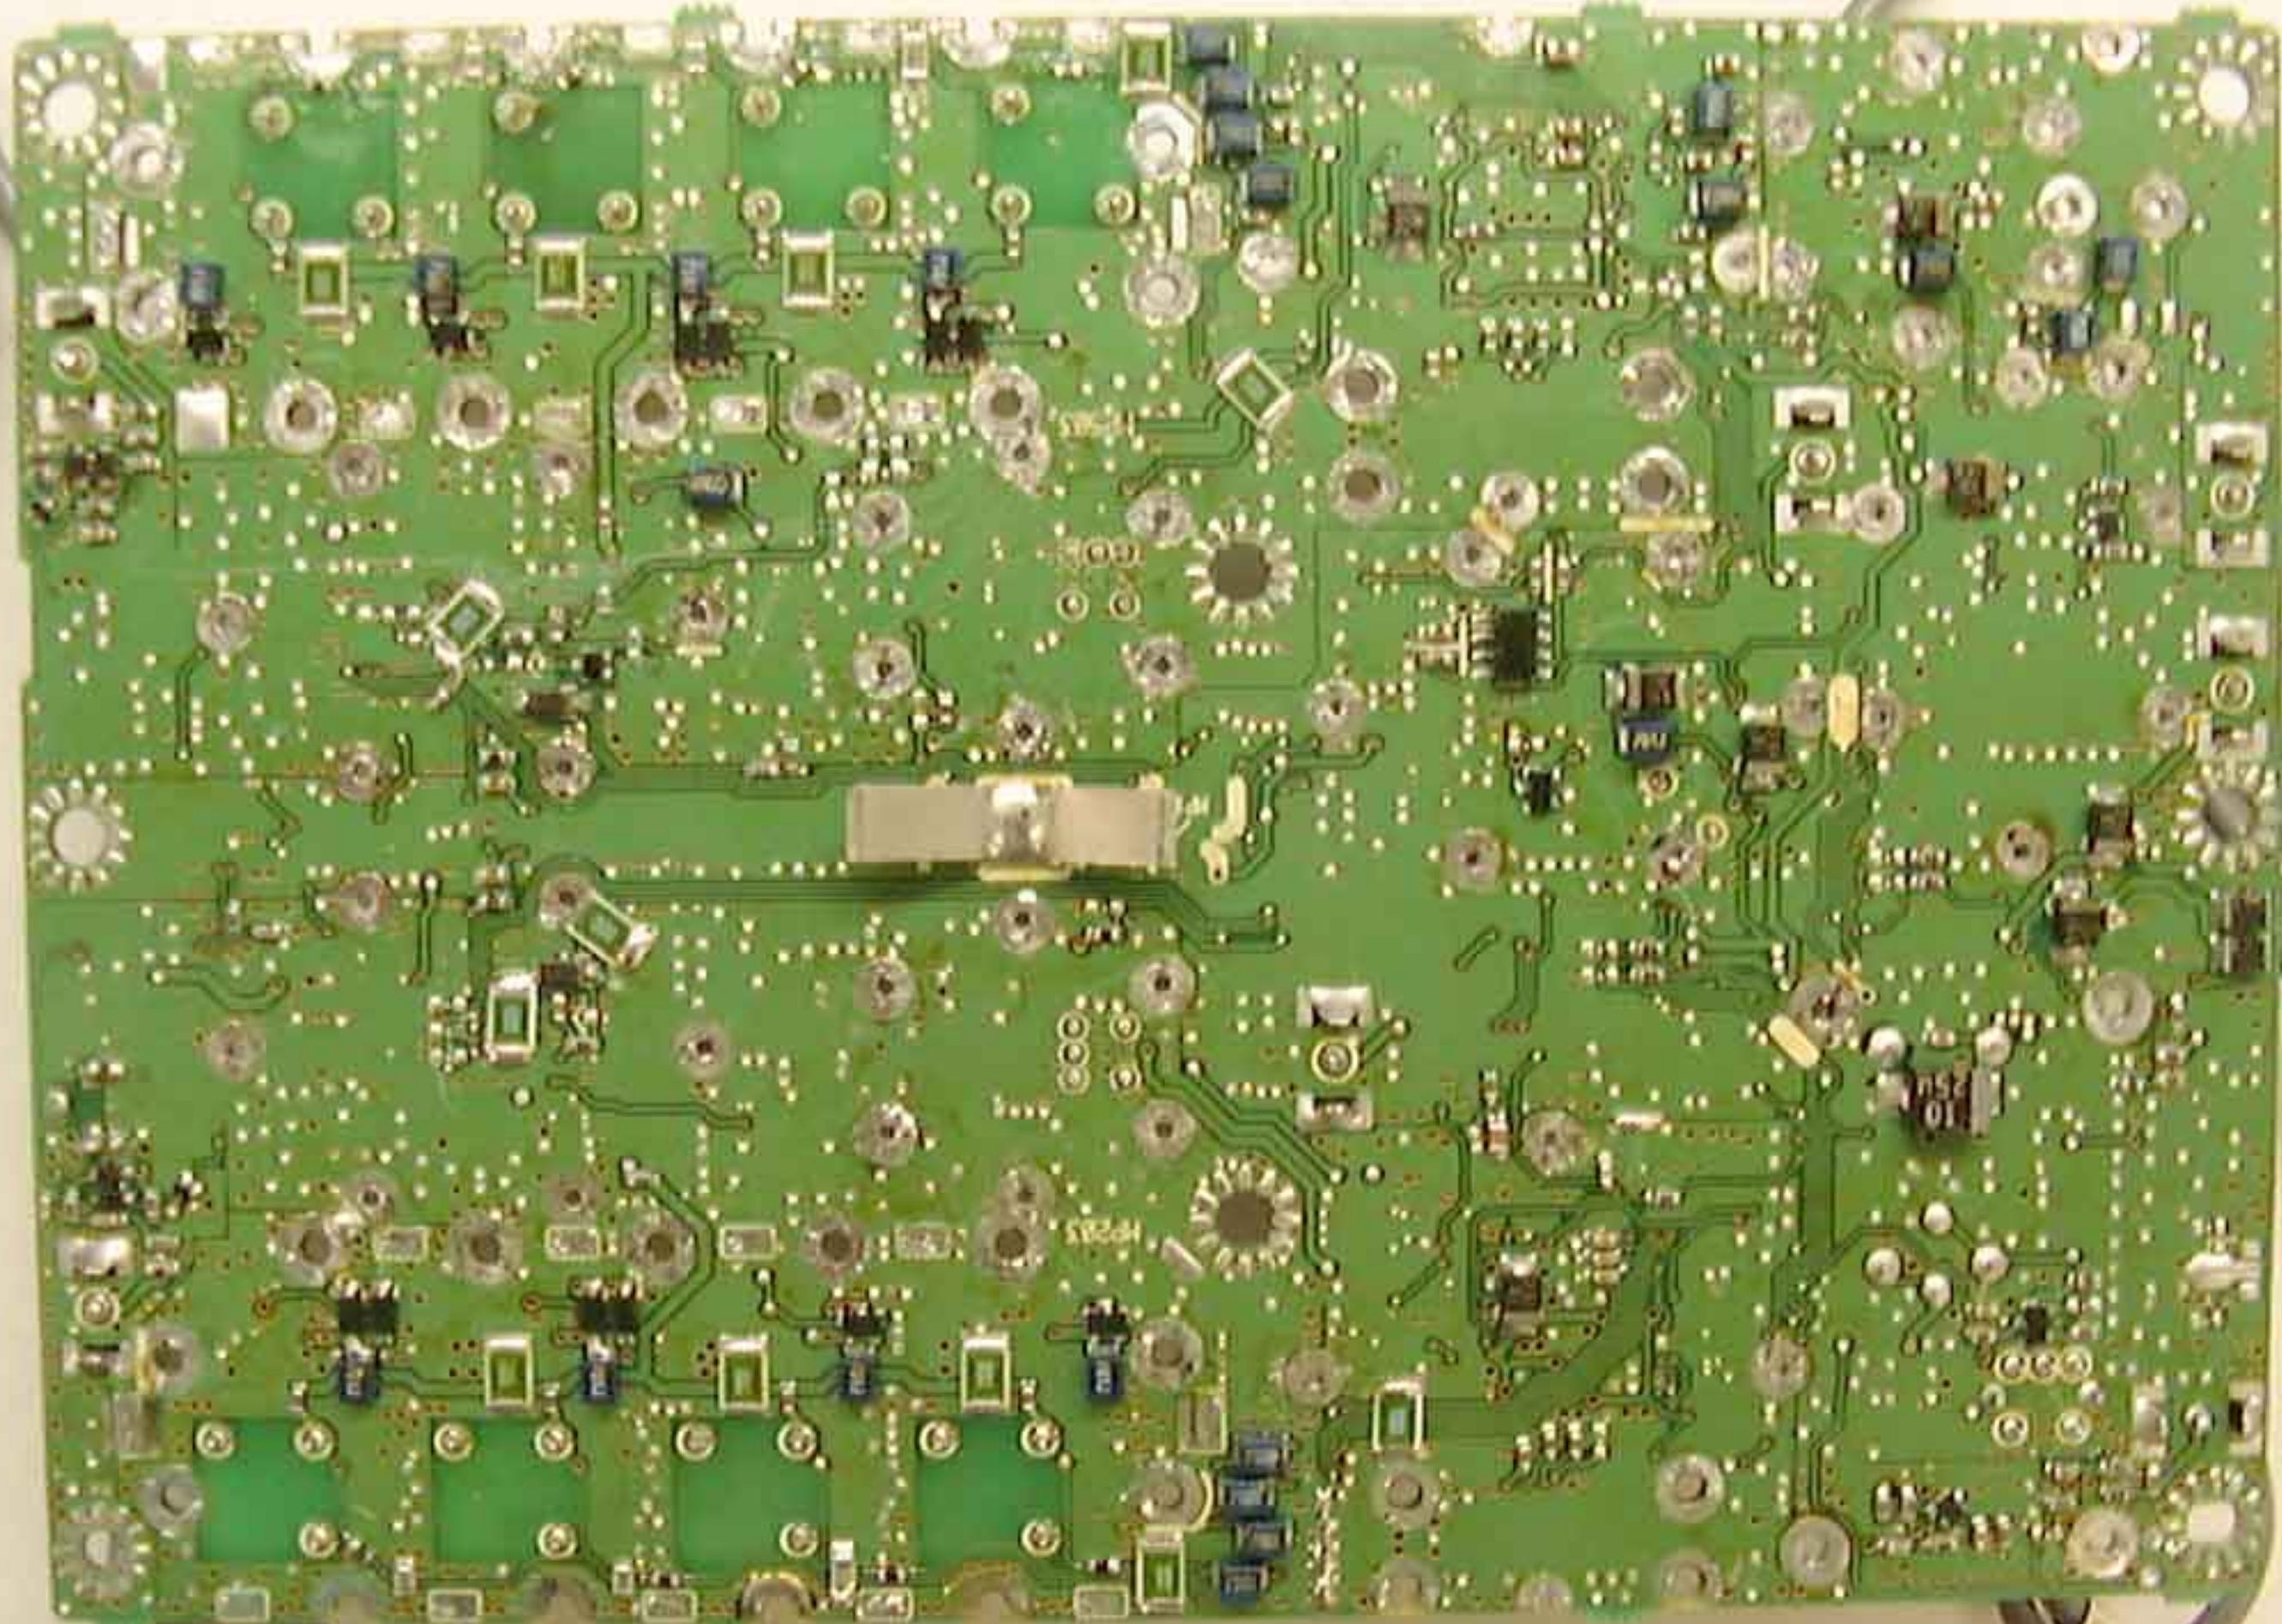


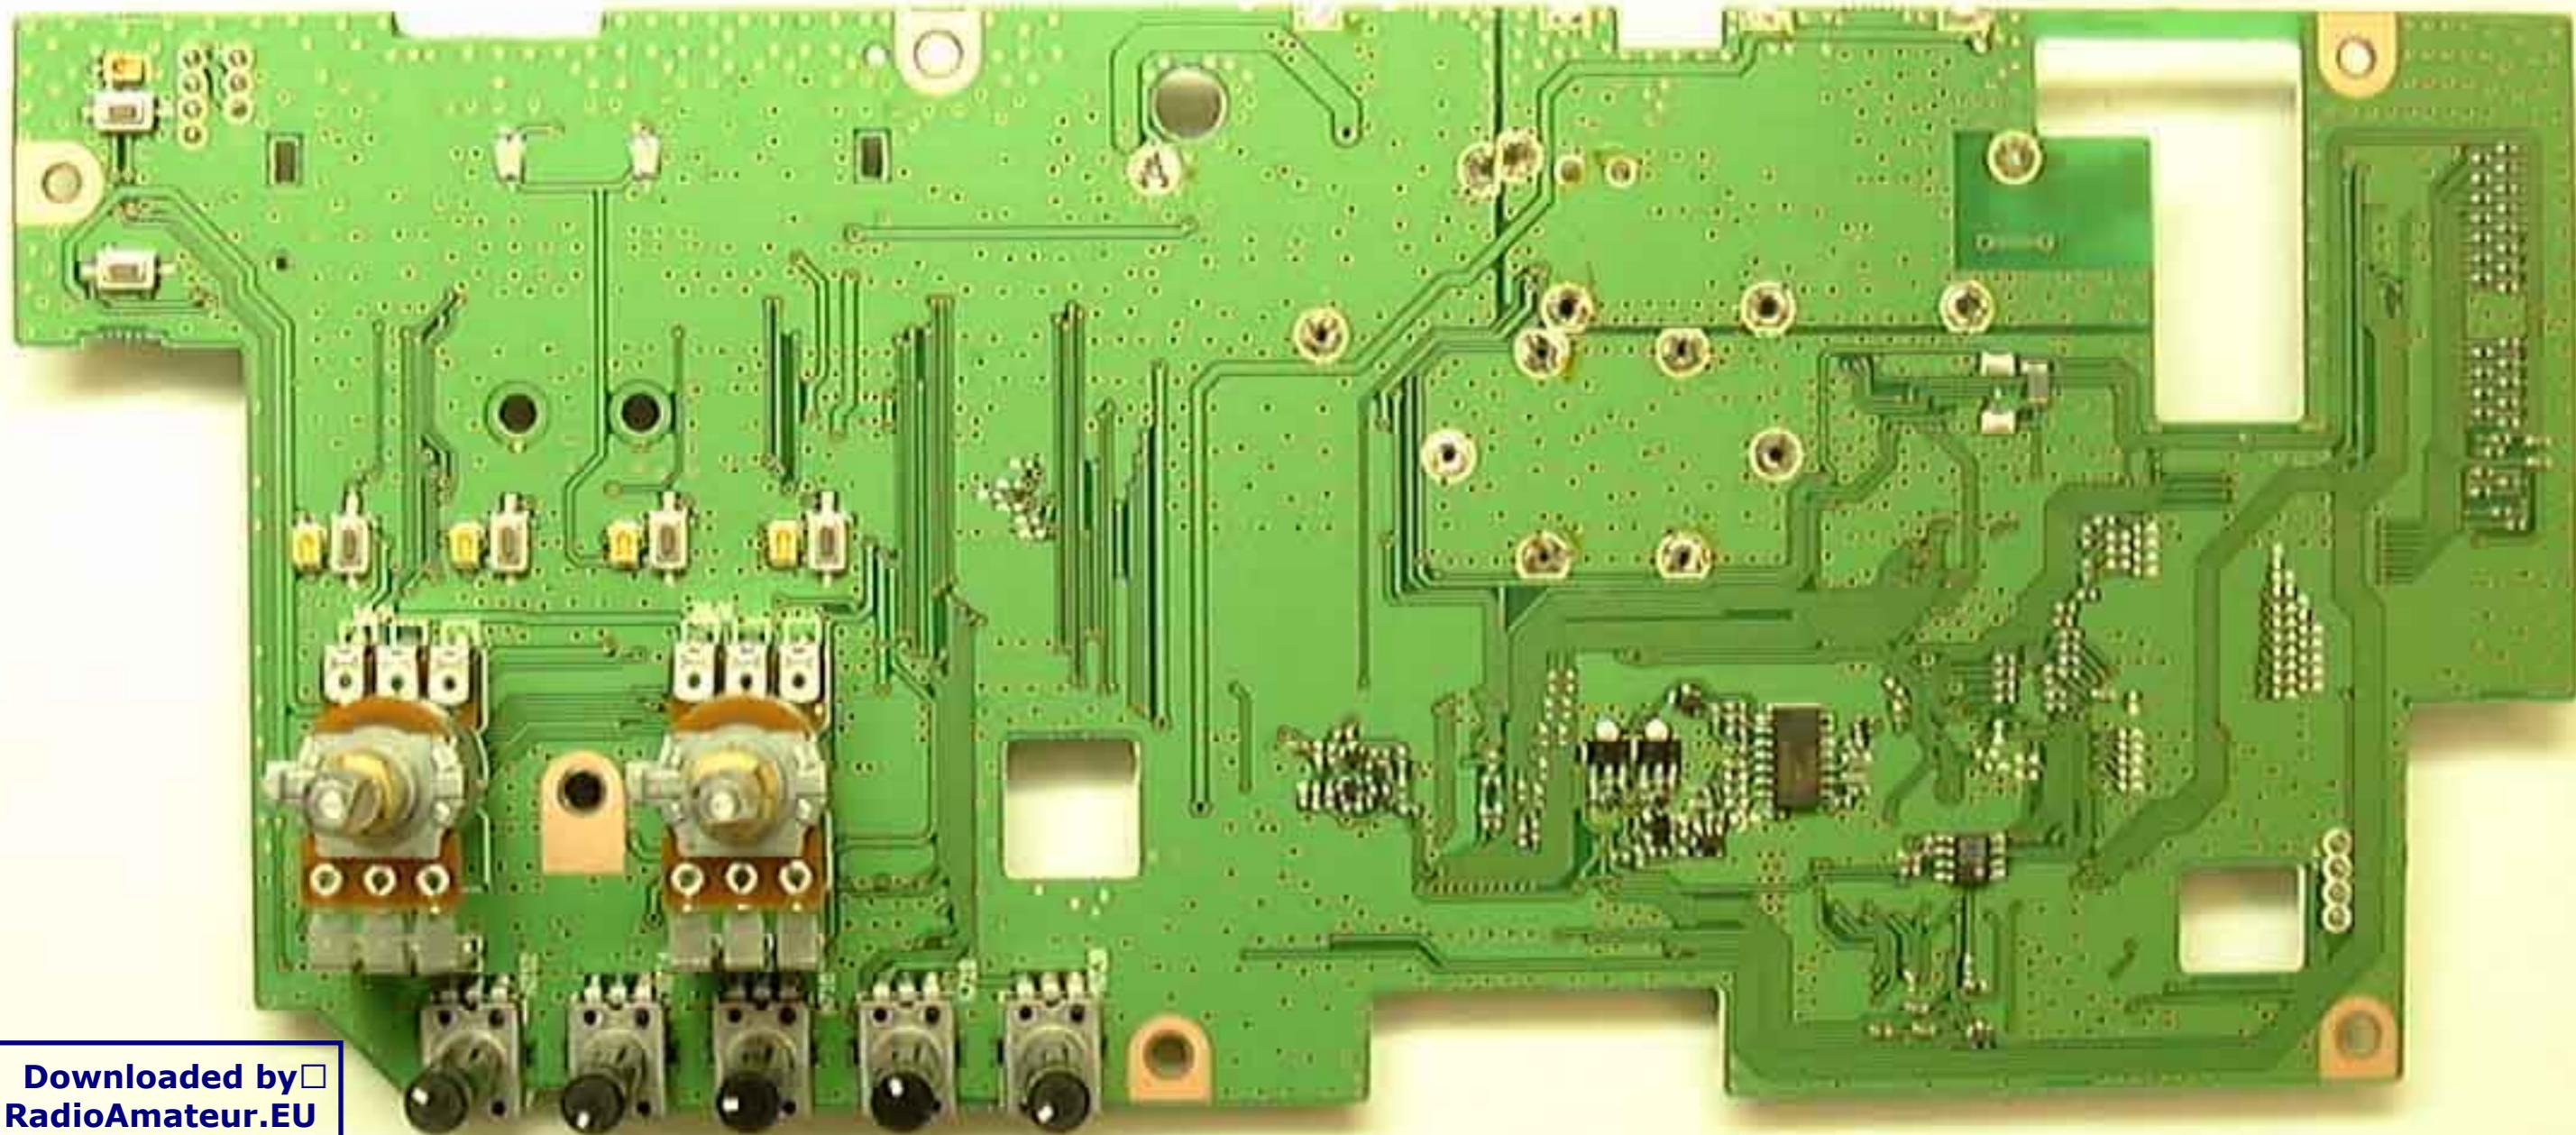

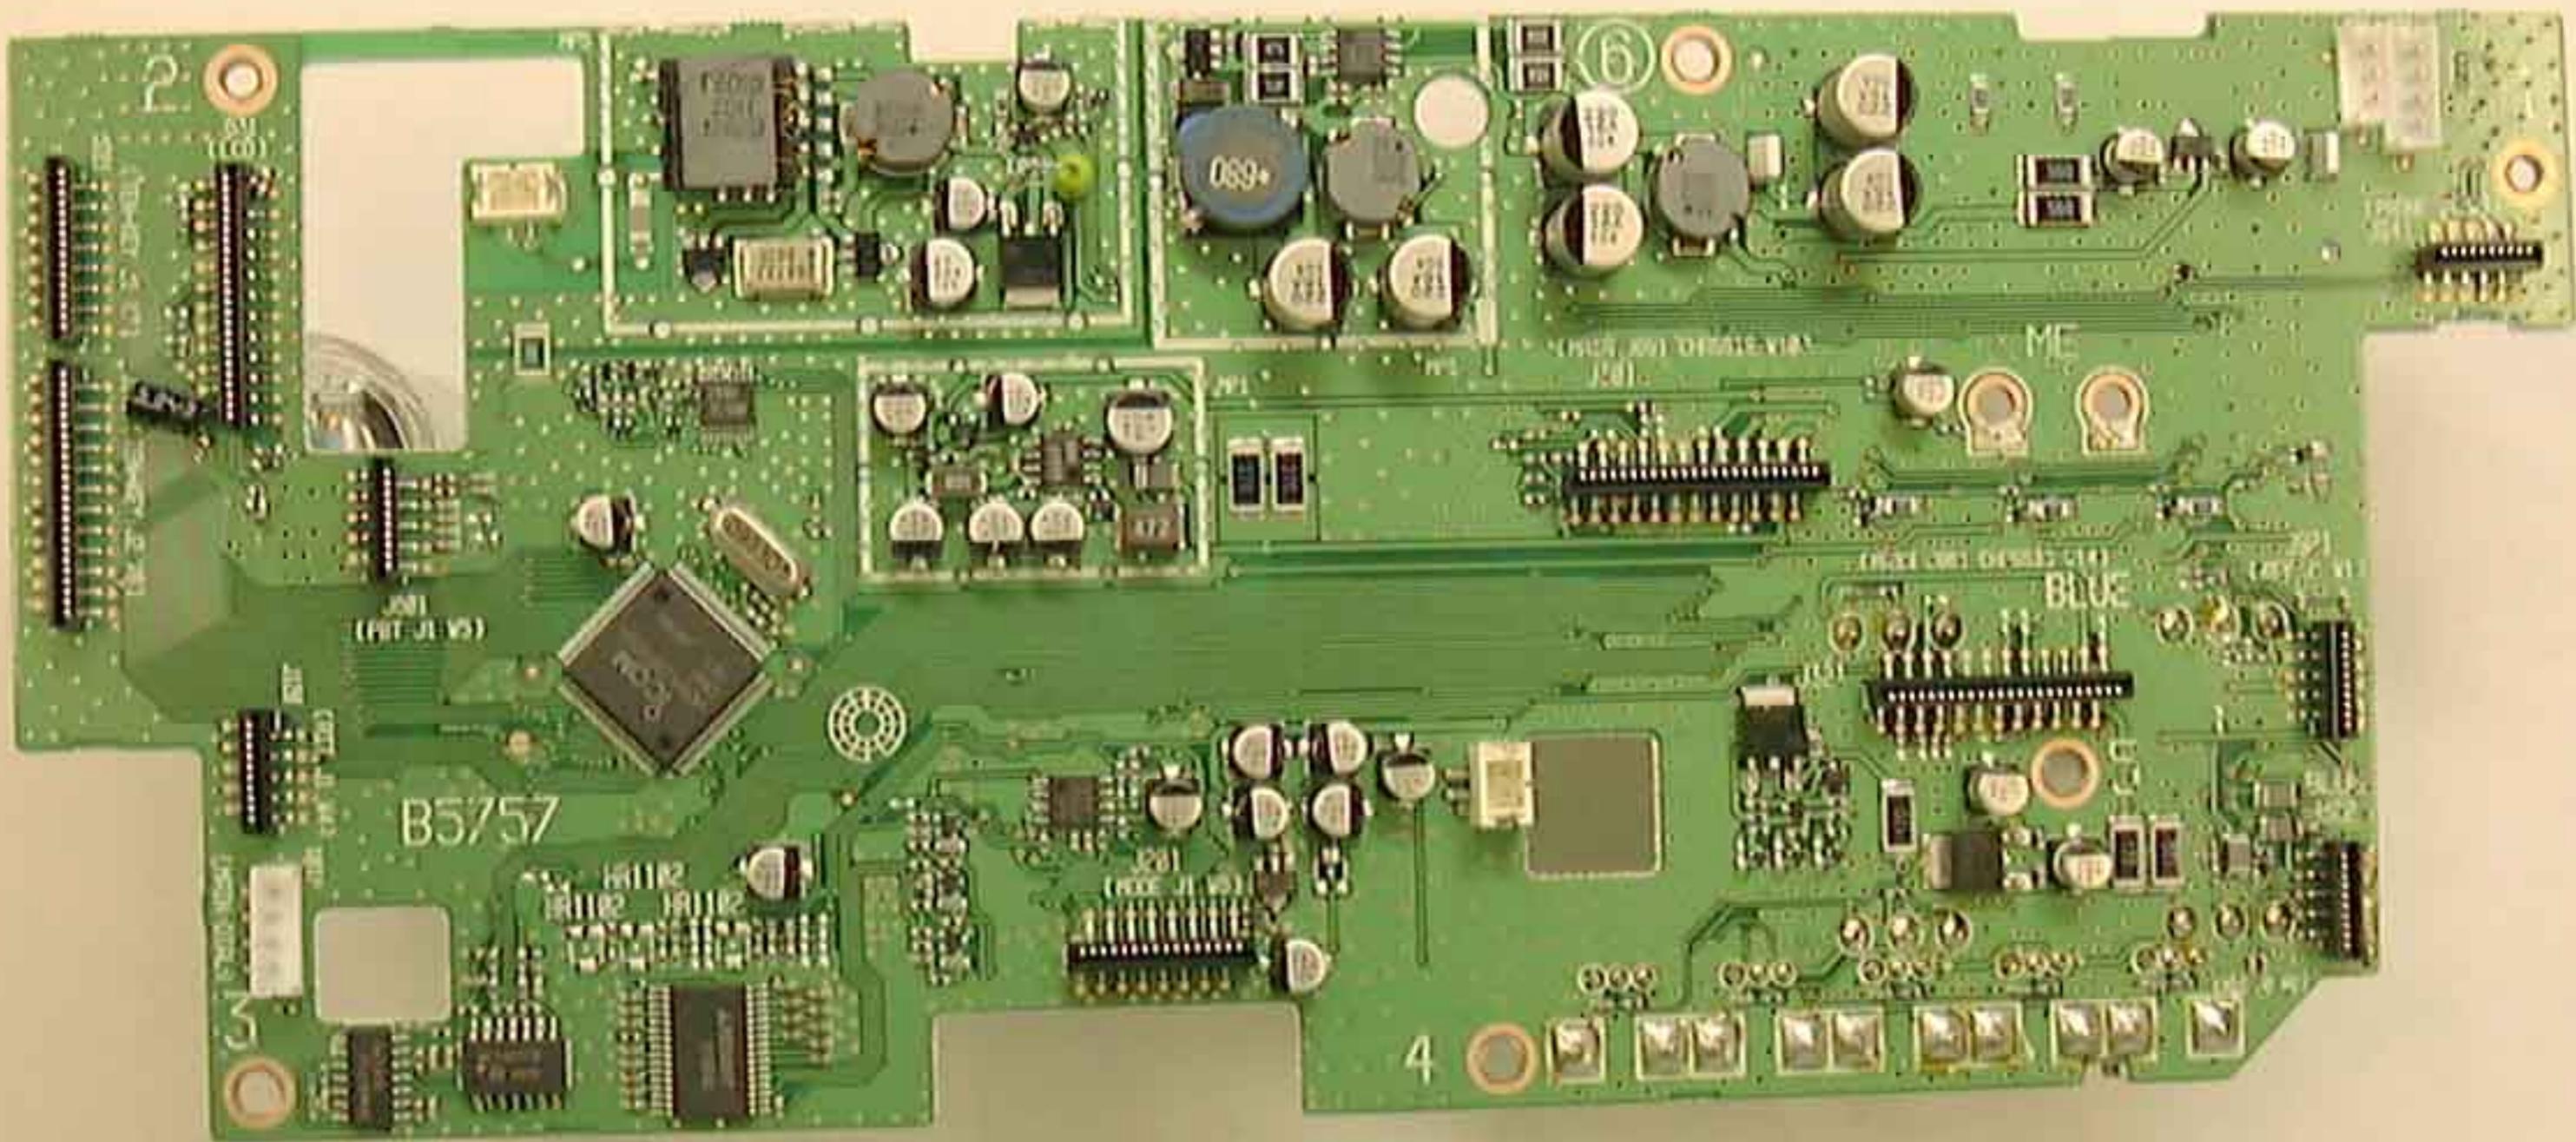






B57/32A

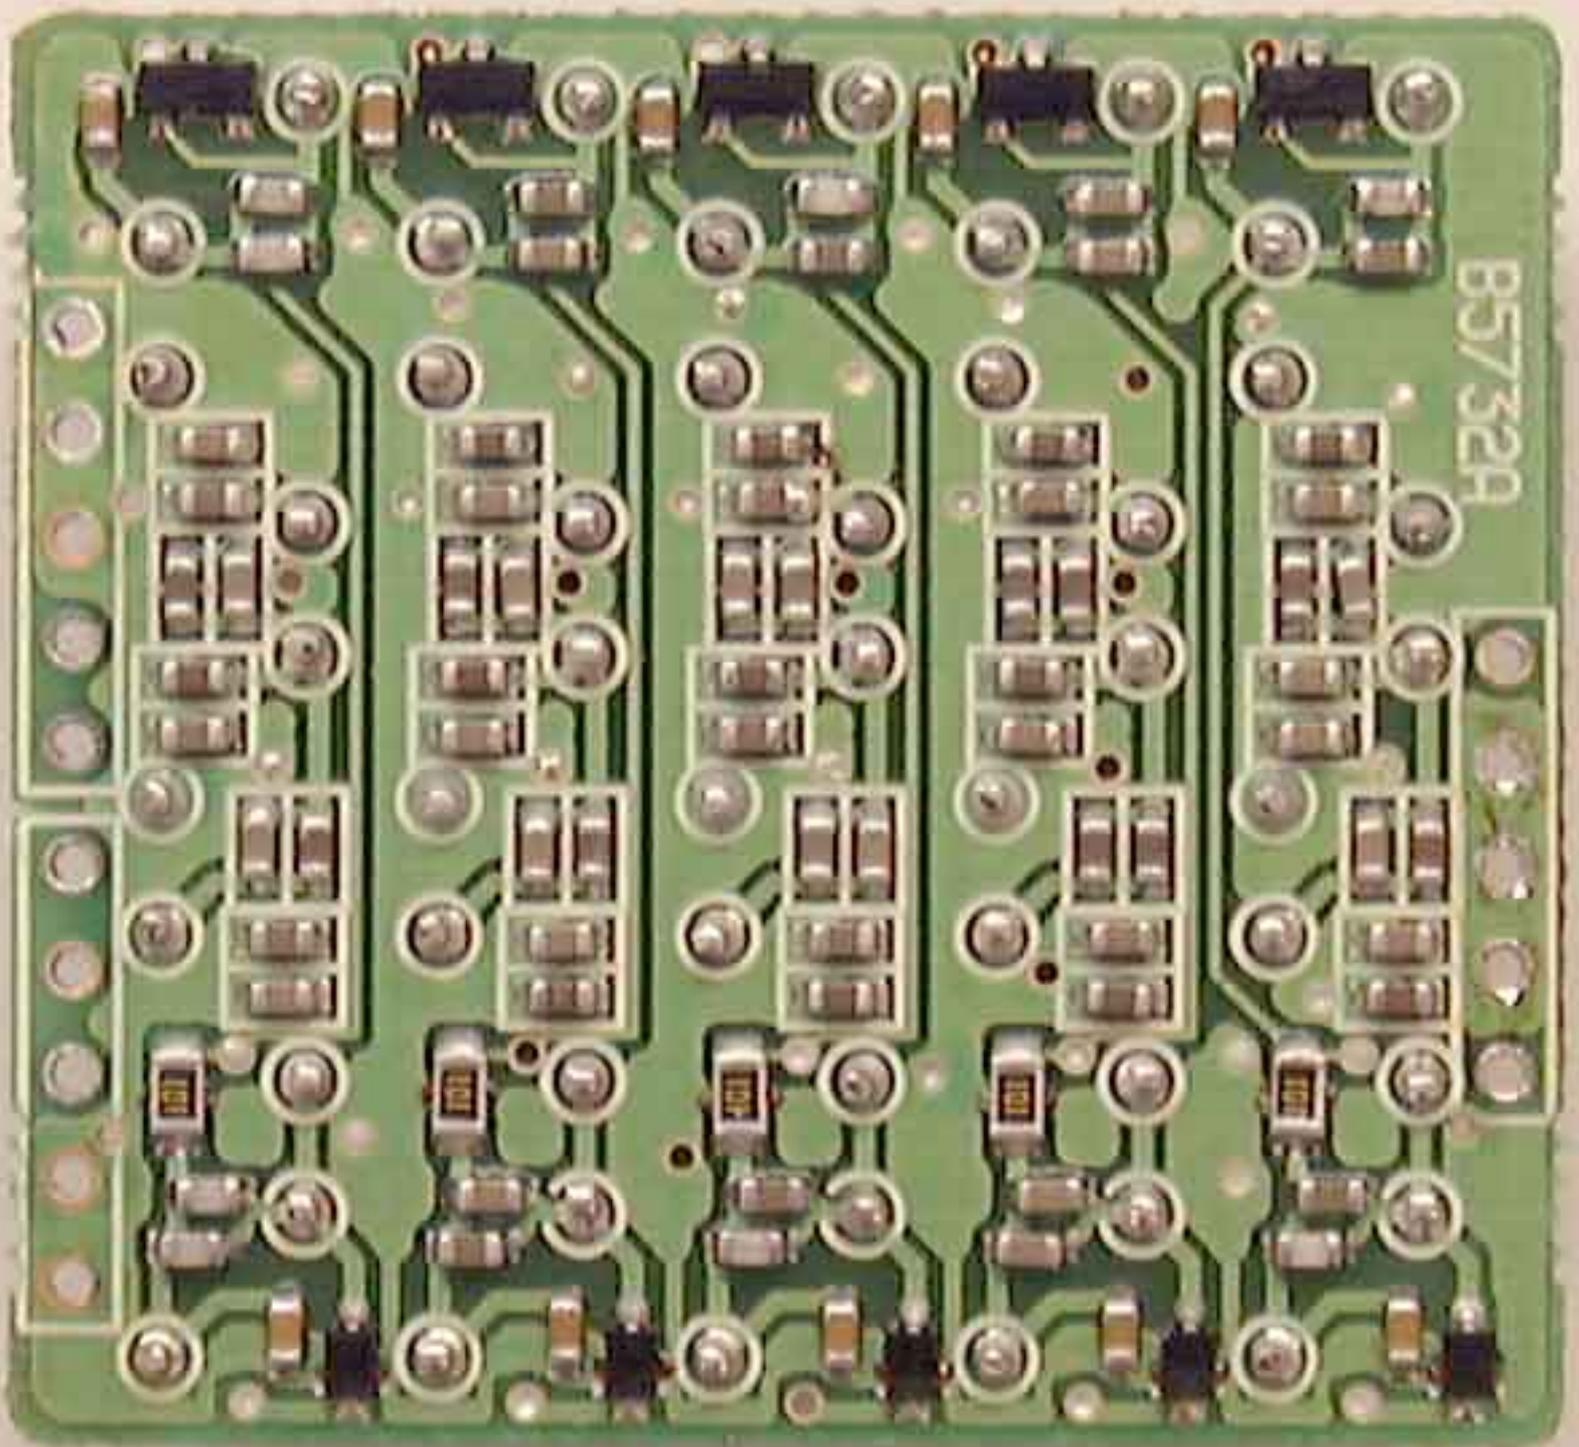

Downloaded by RadioAmateur.EU

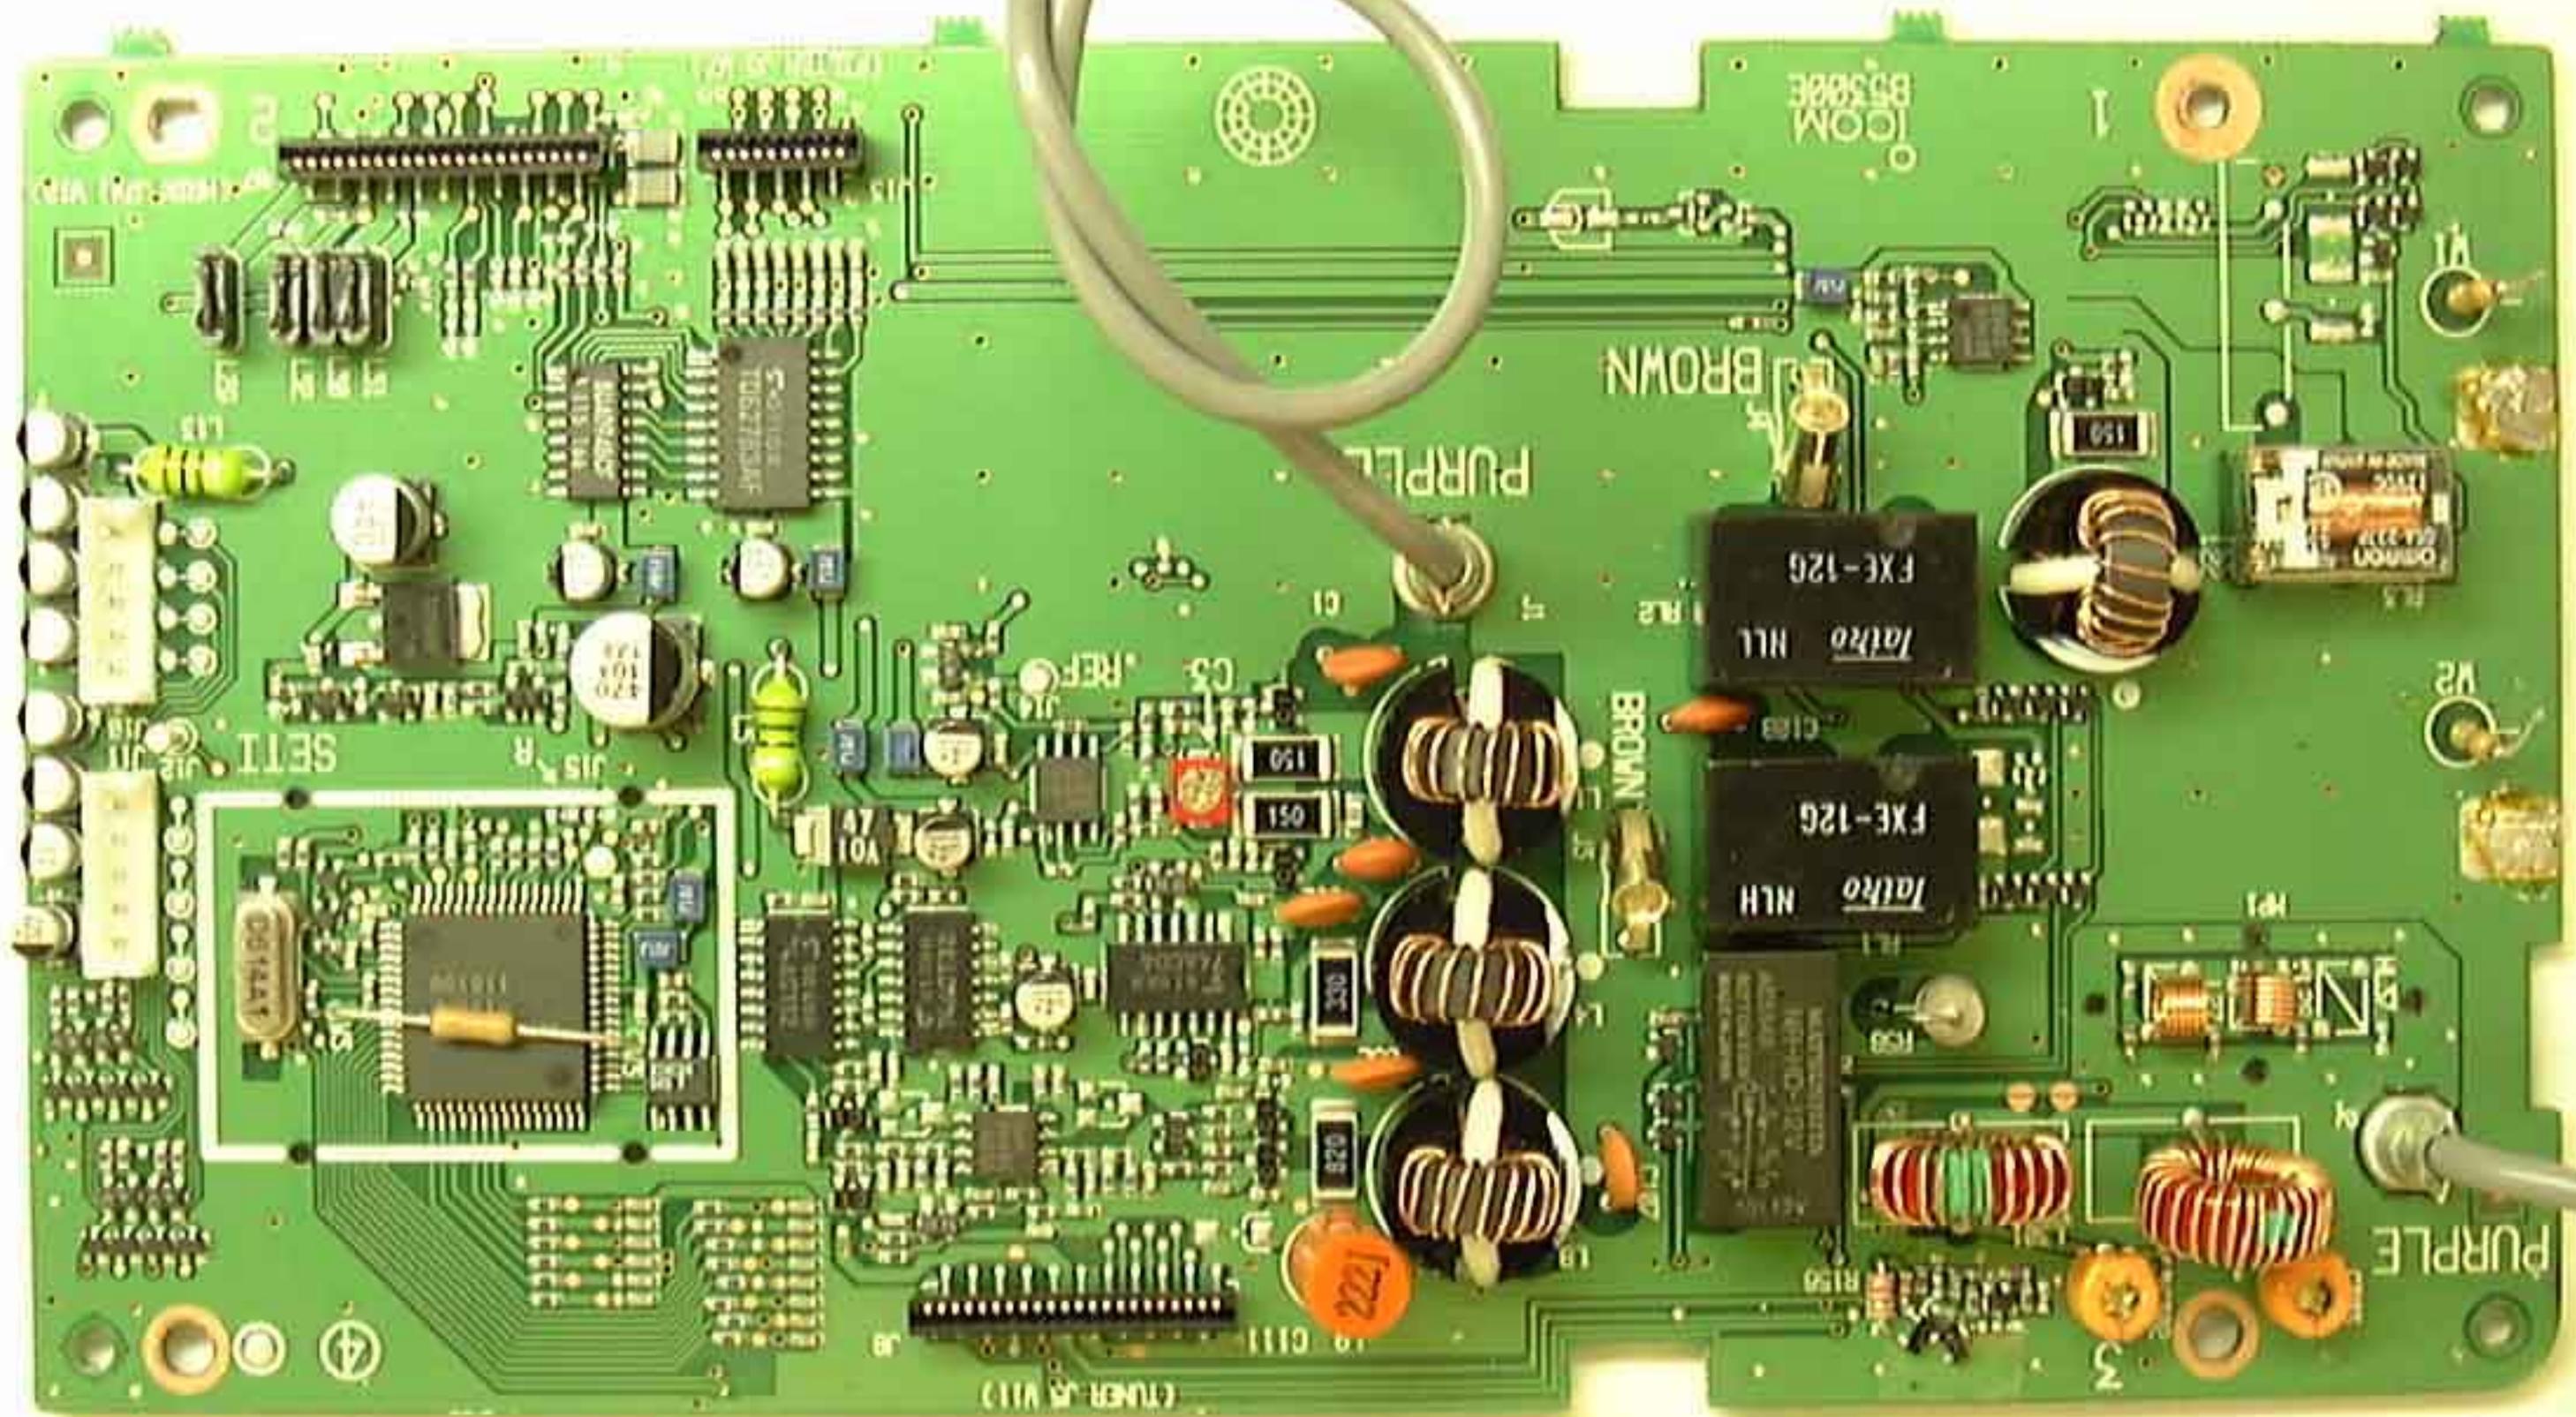

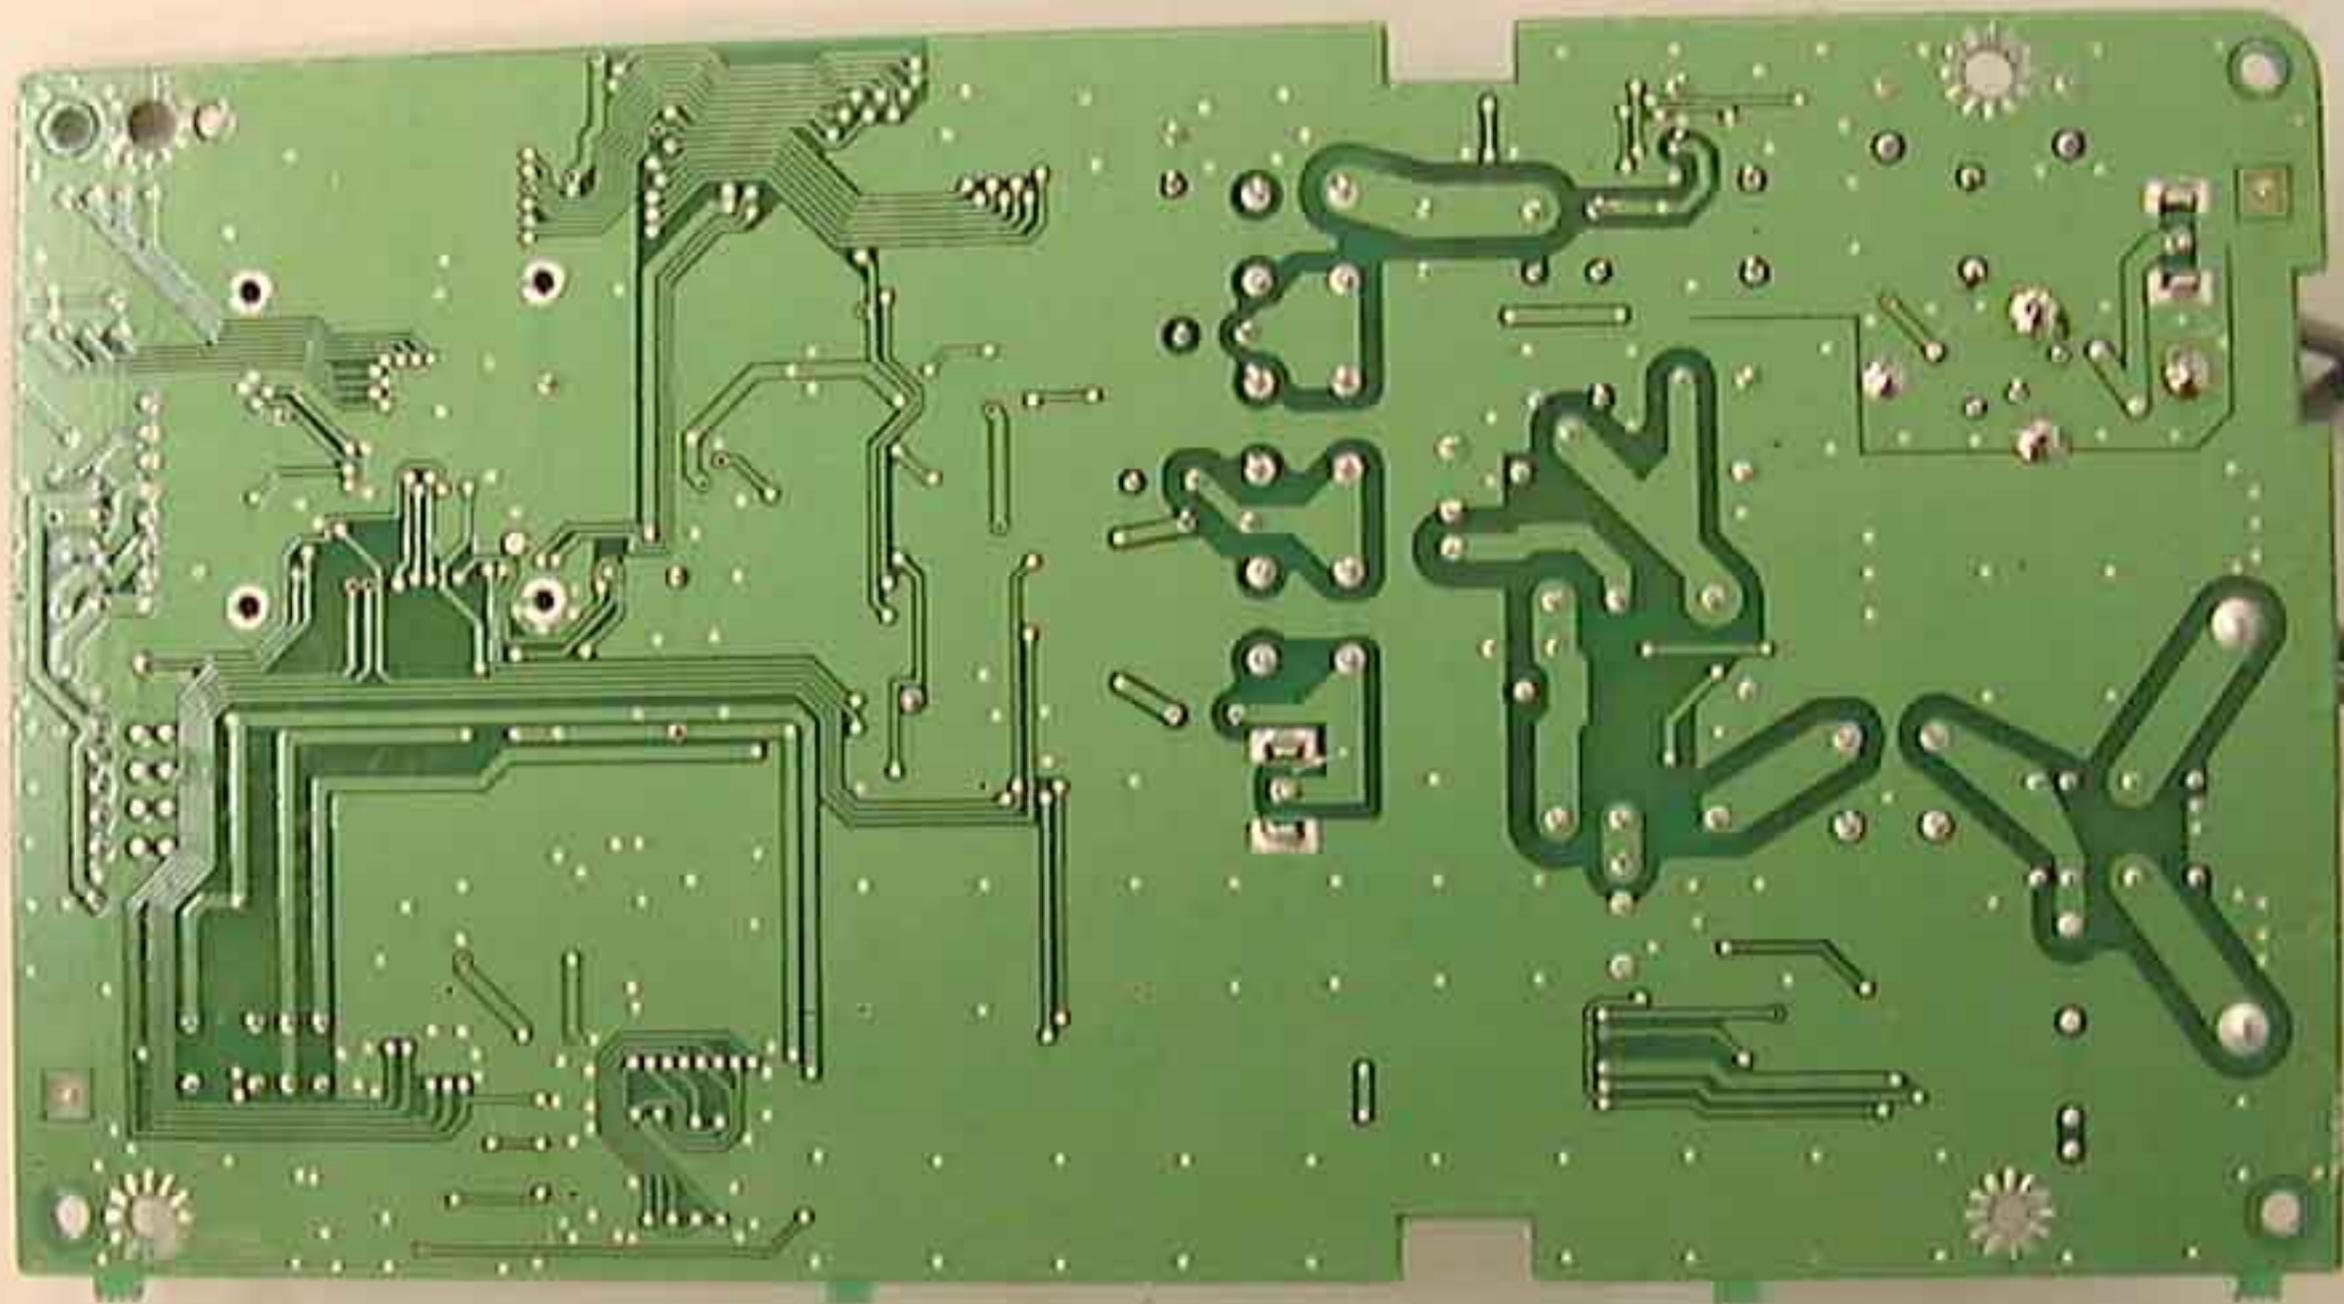

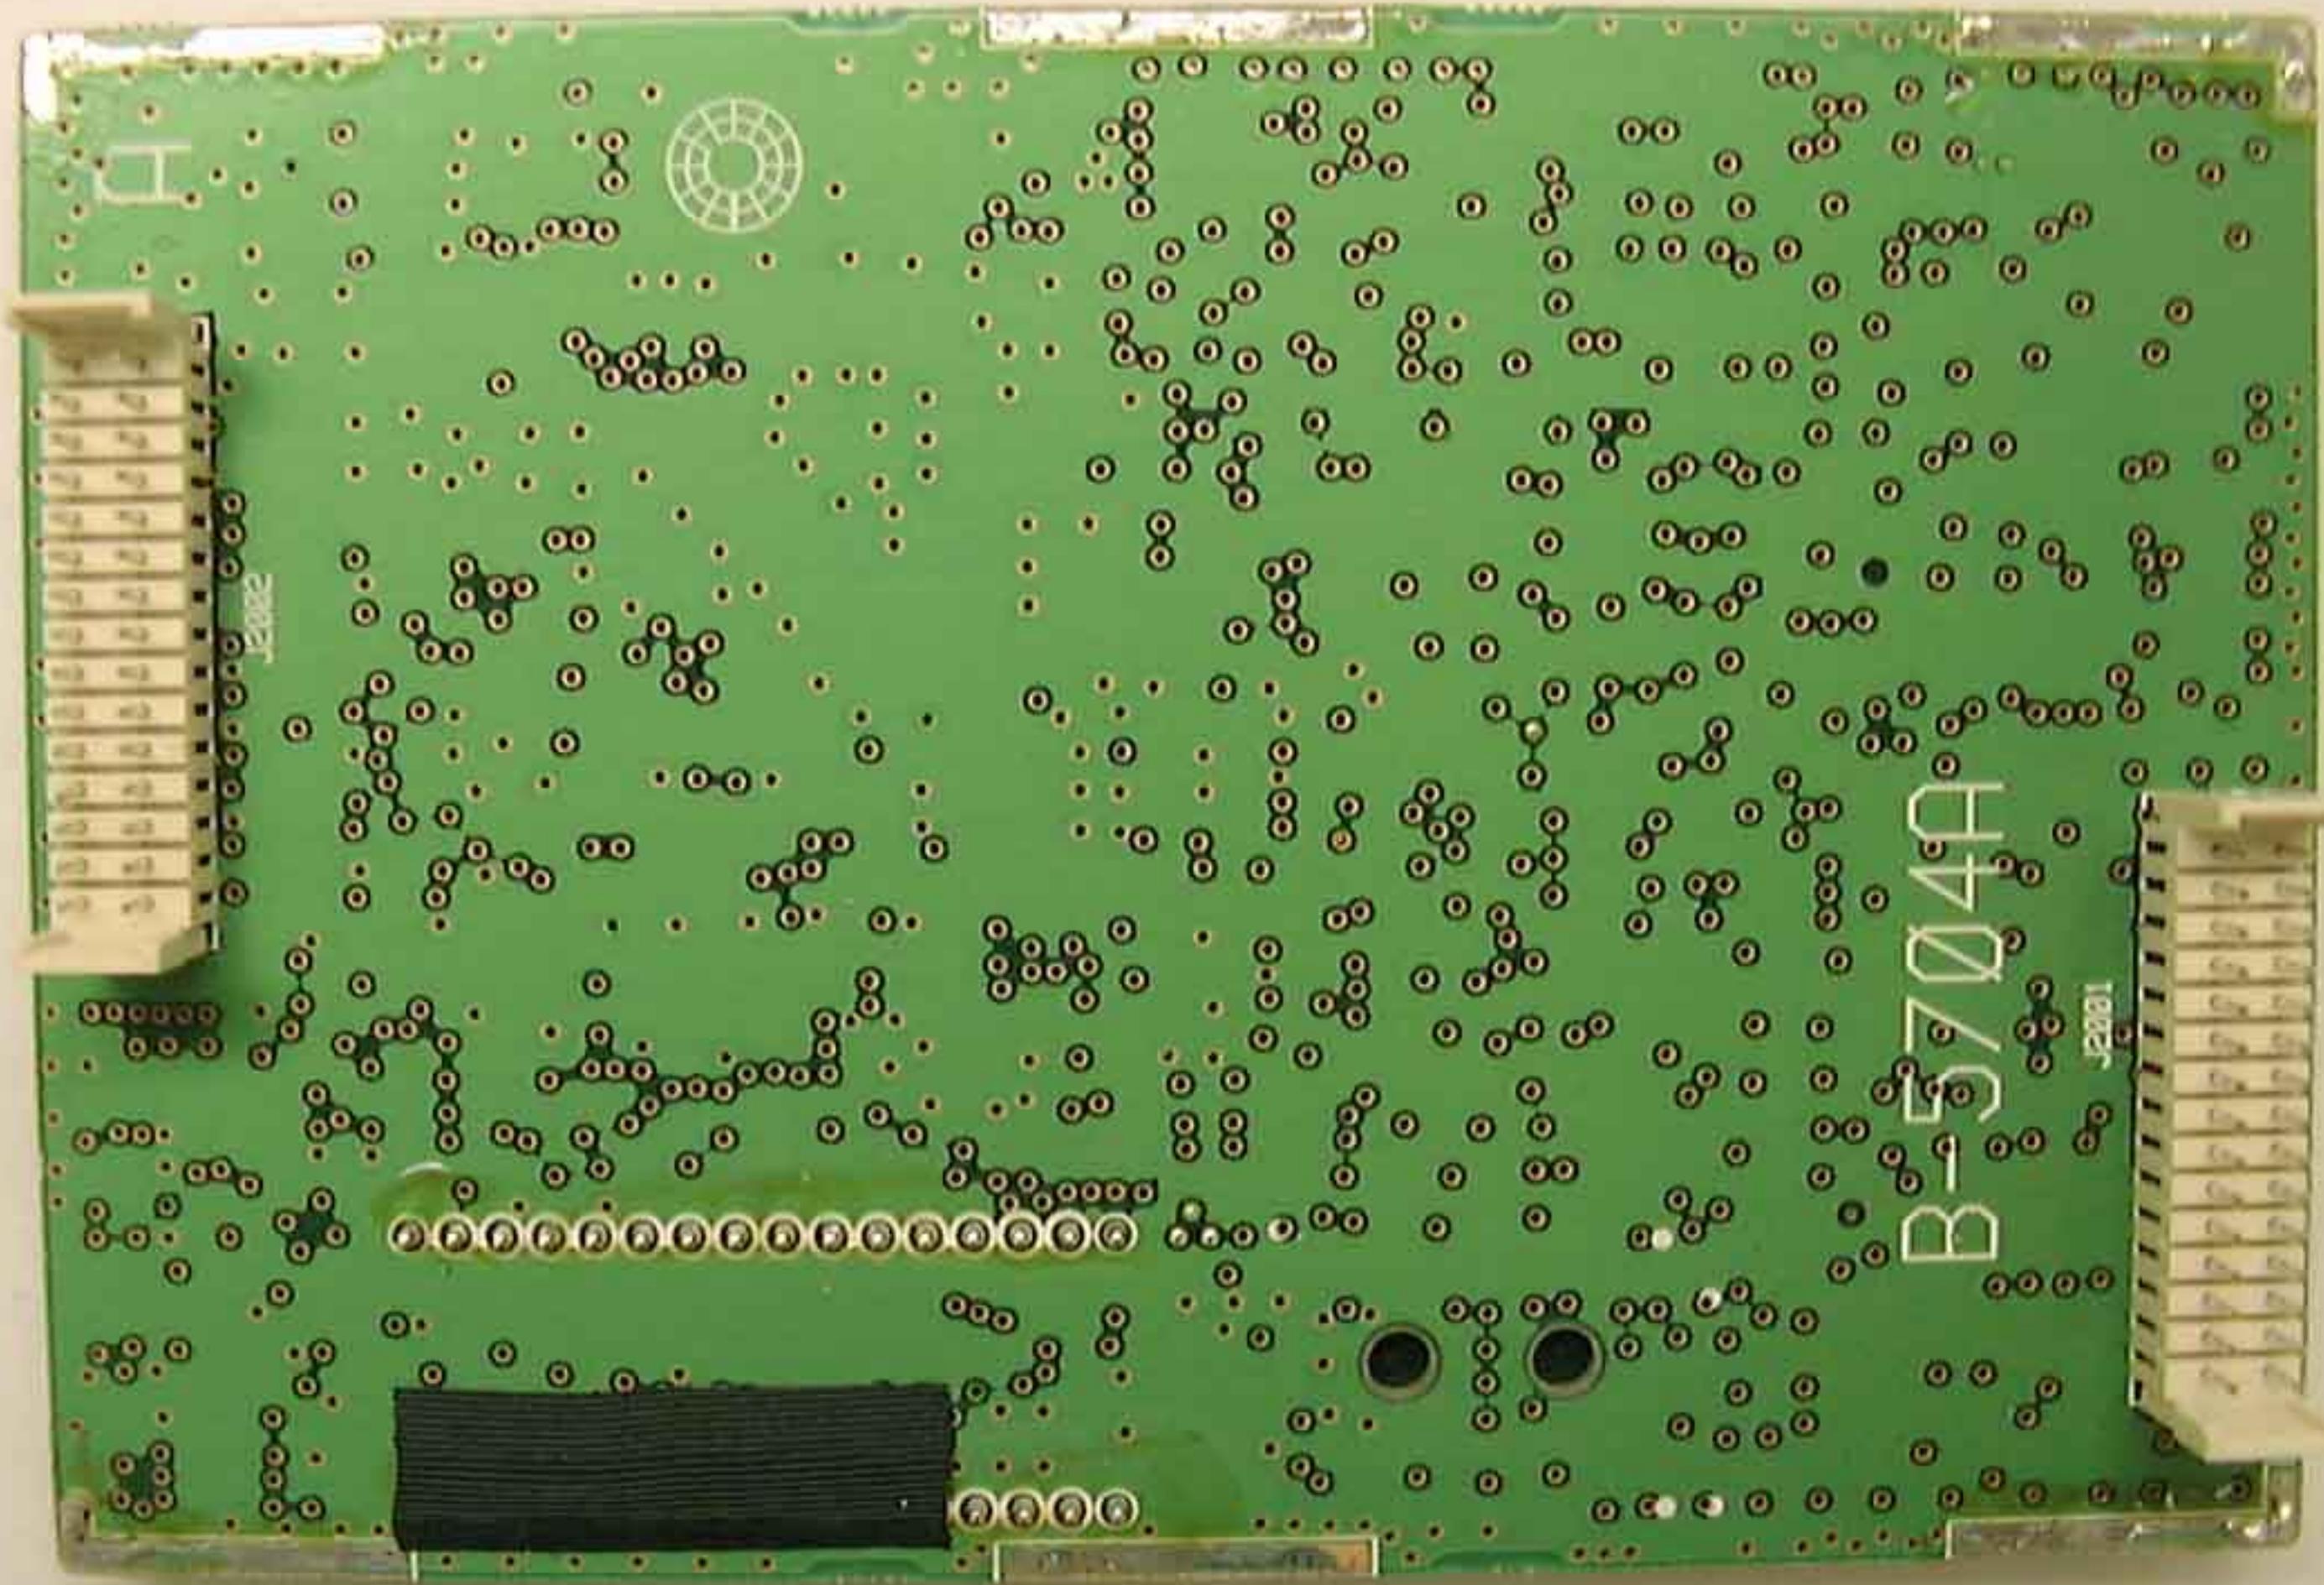


H


J2202

B-5704A

J2201



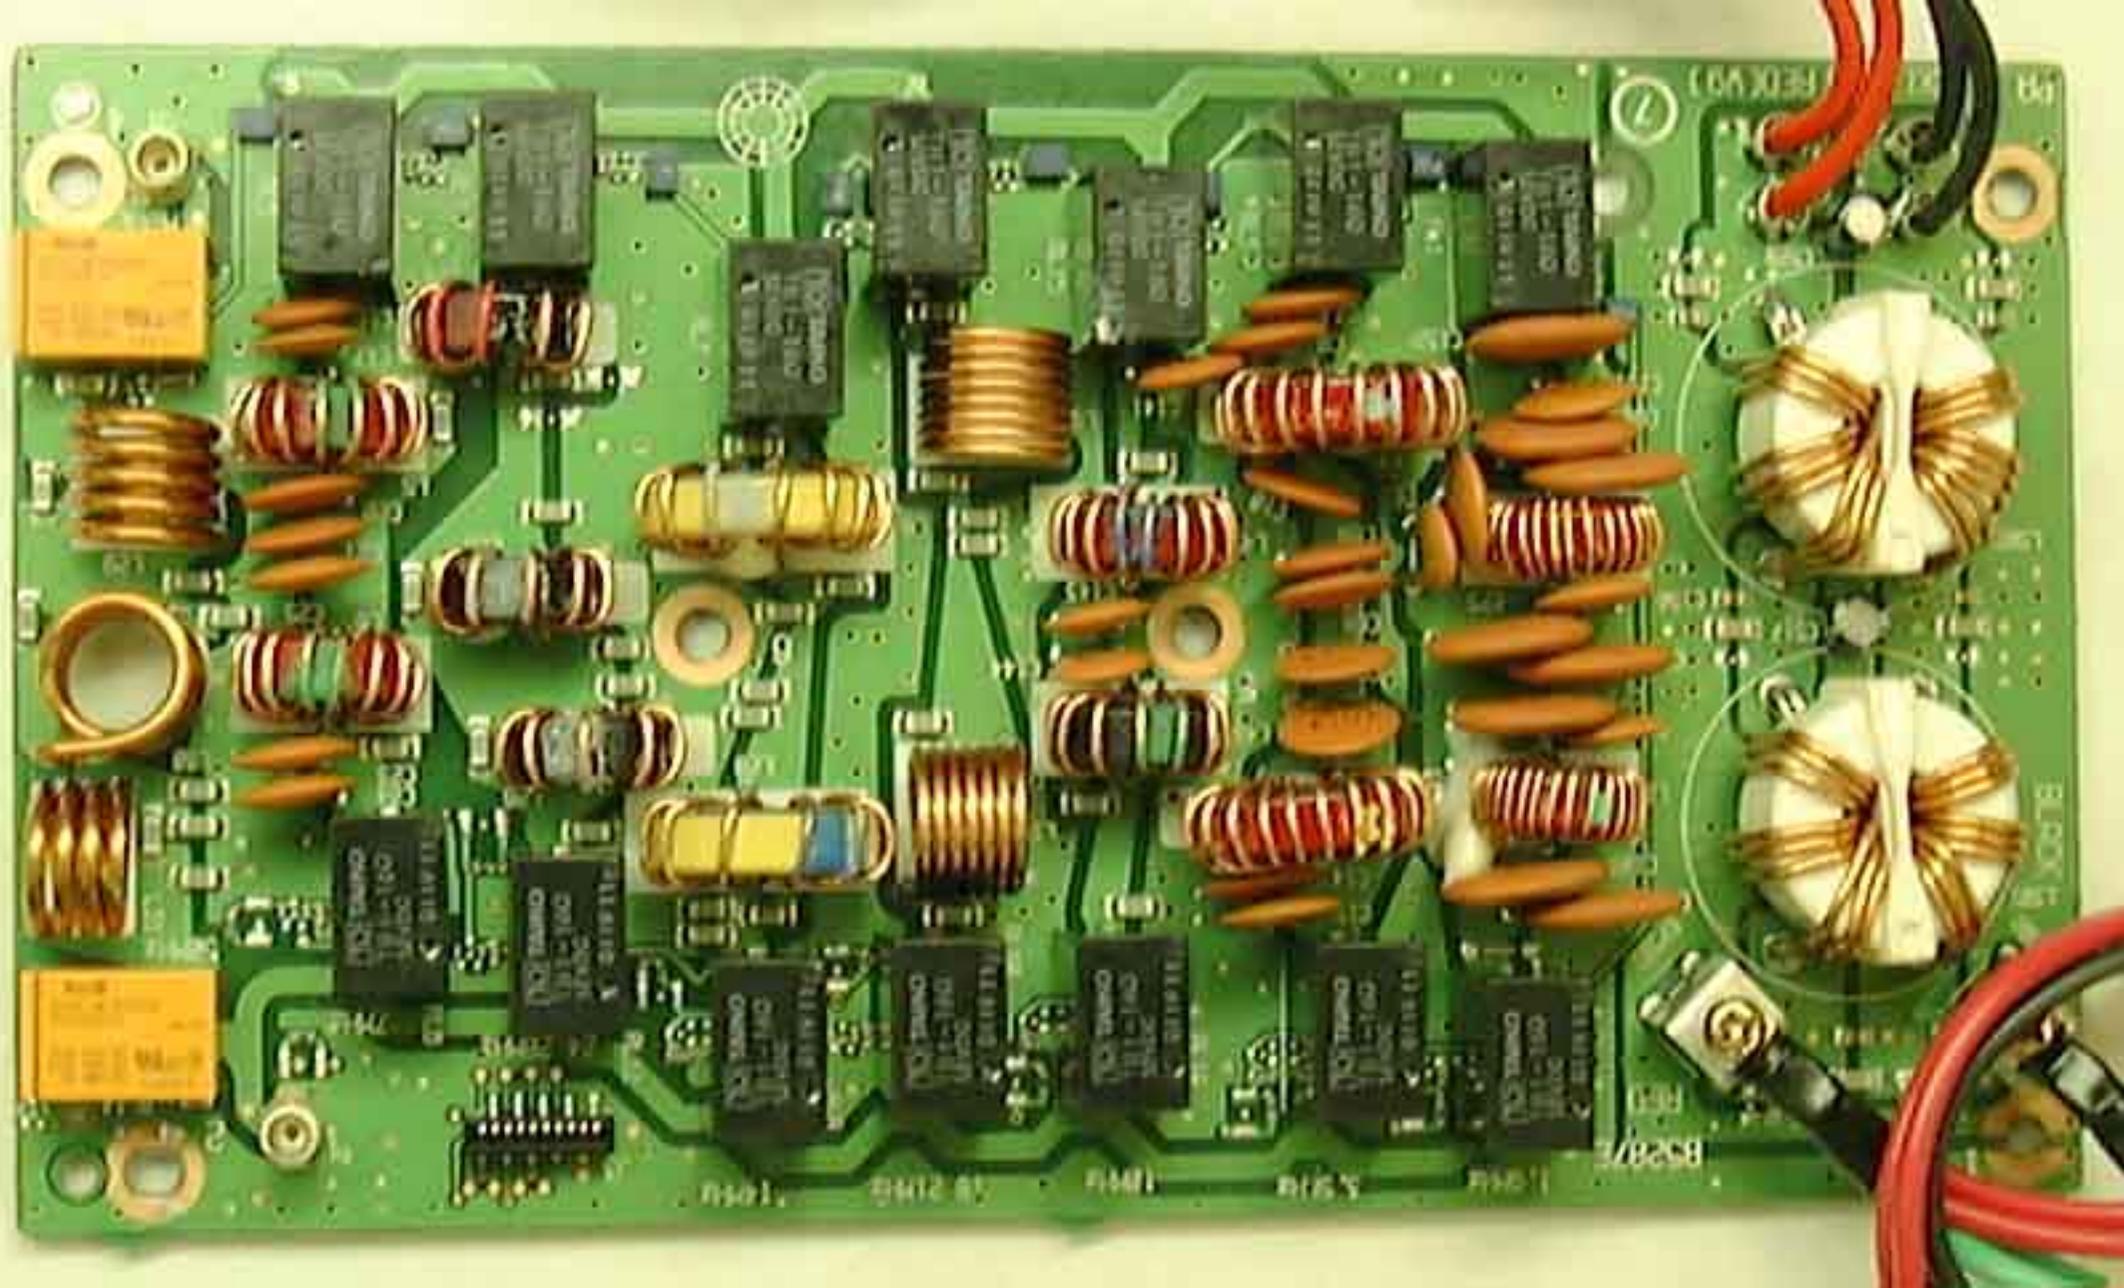


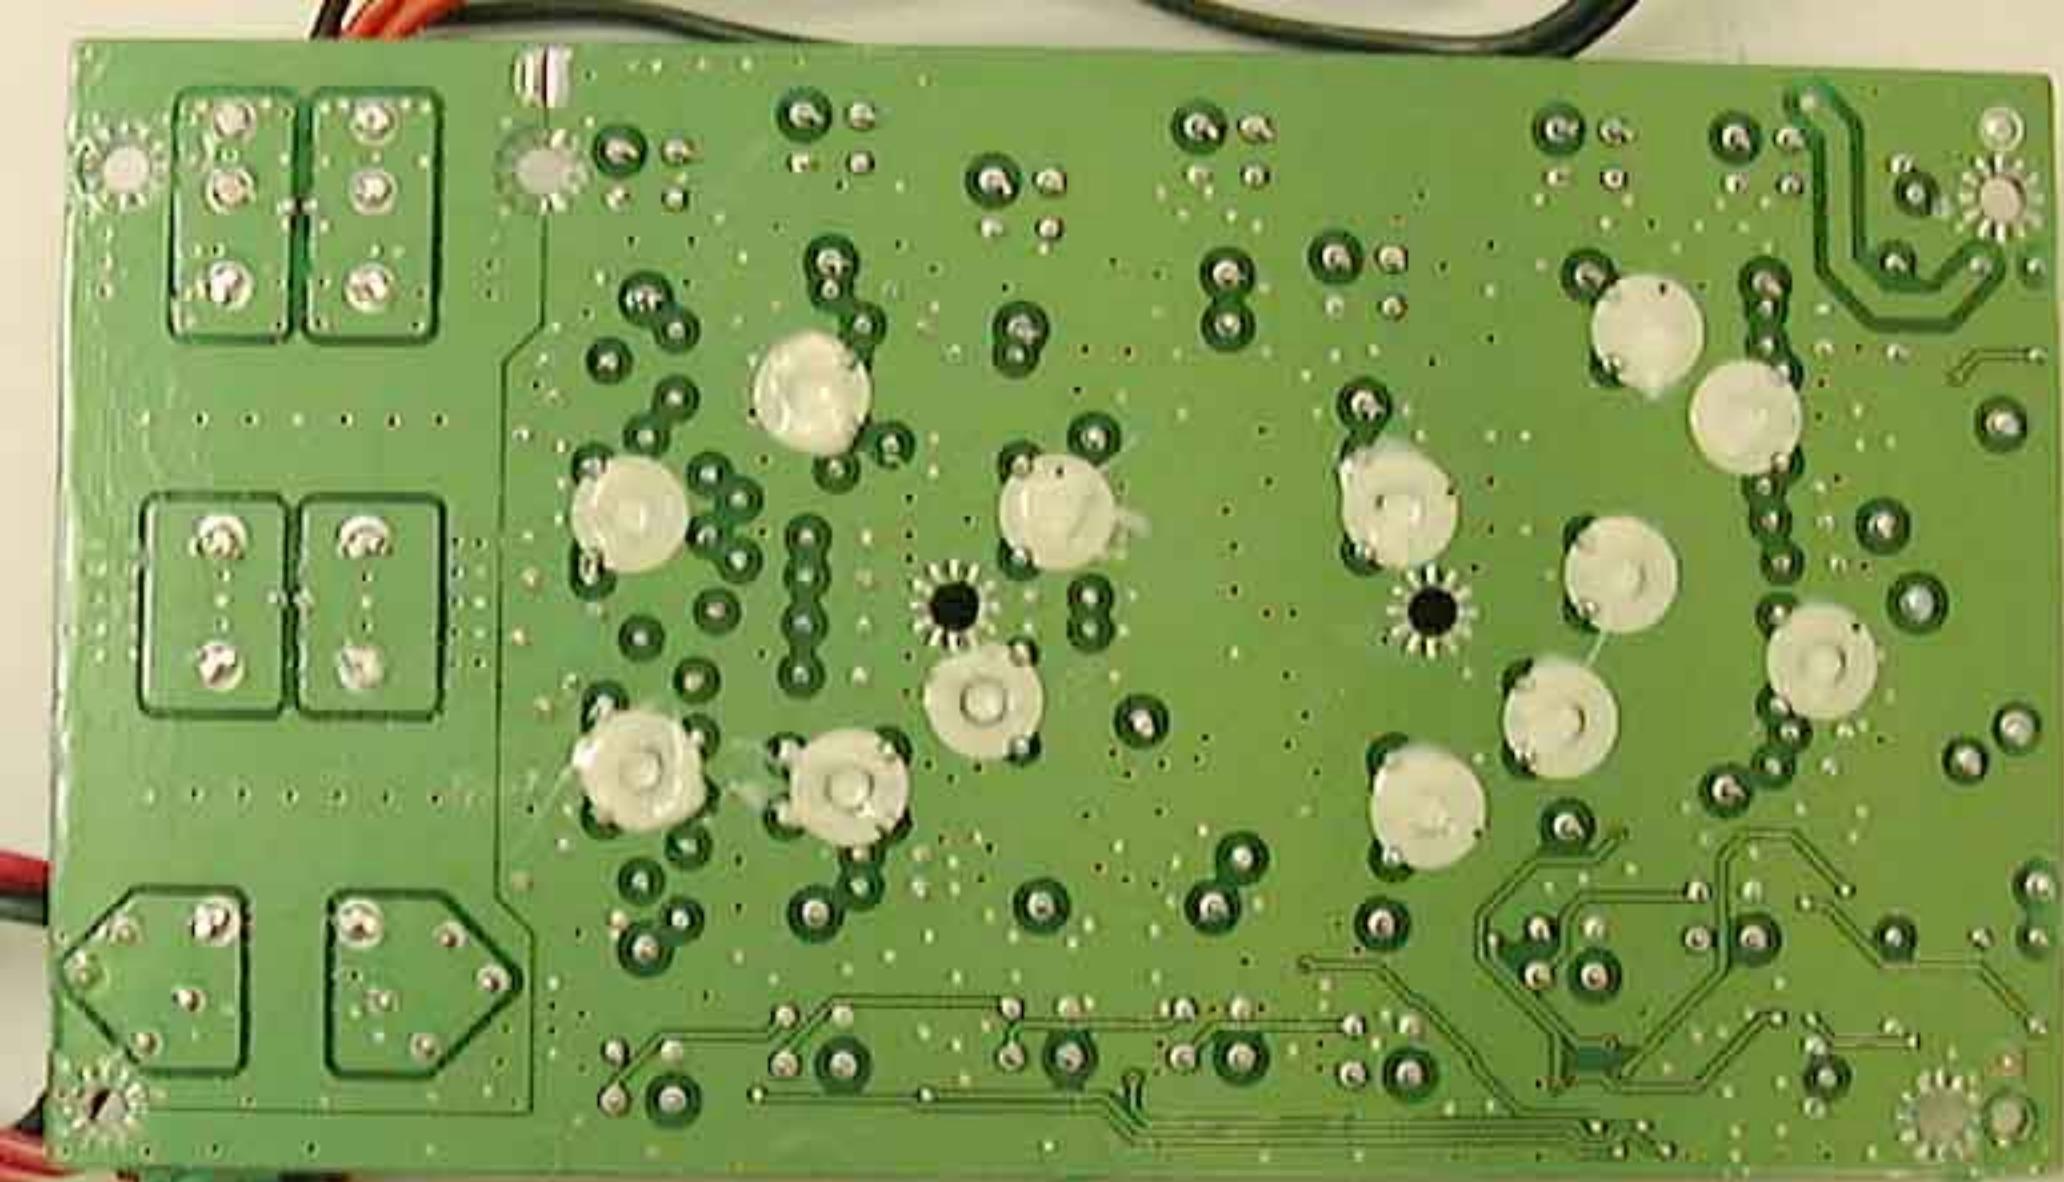




J2


B5406A KEY

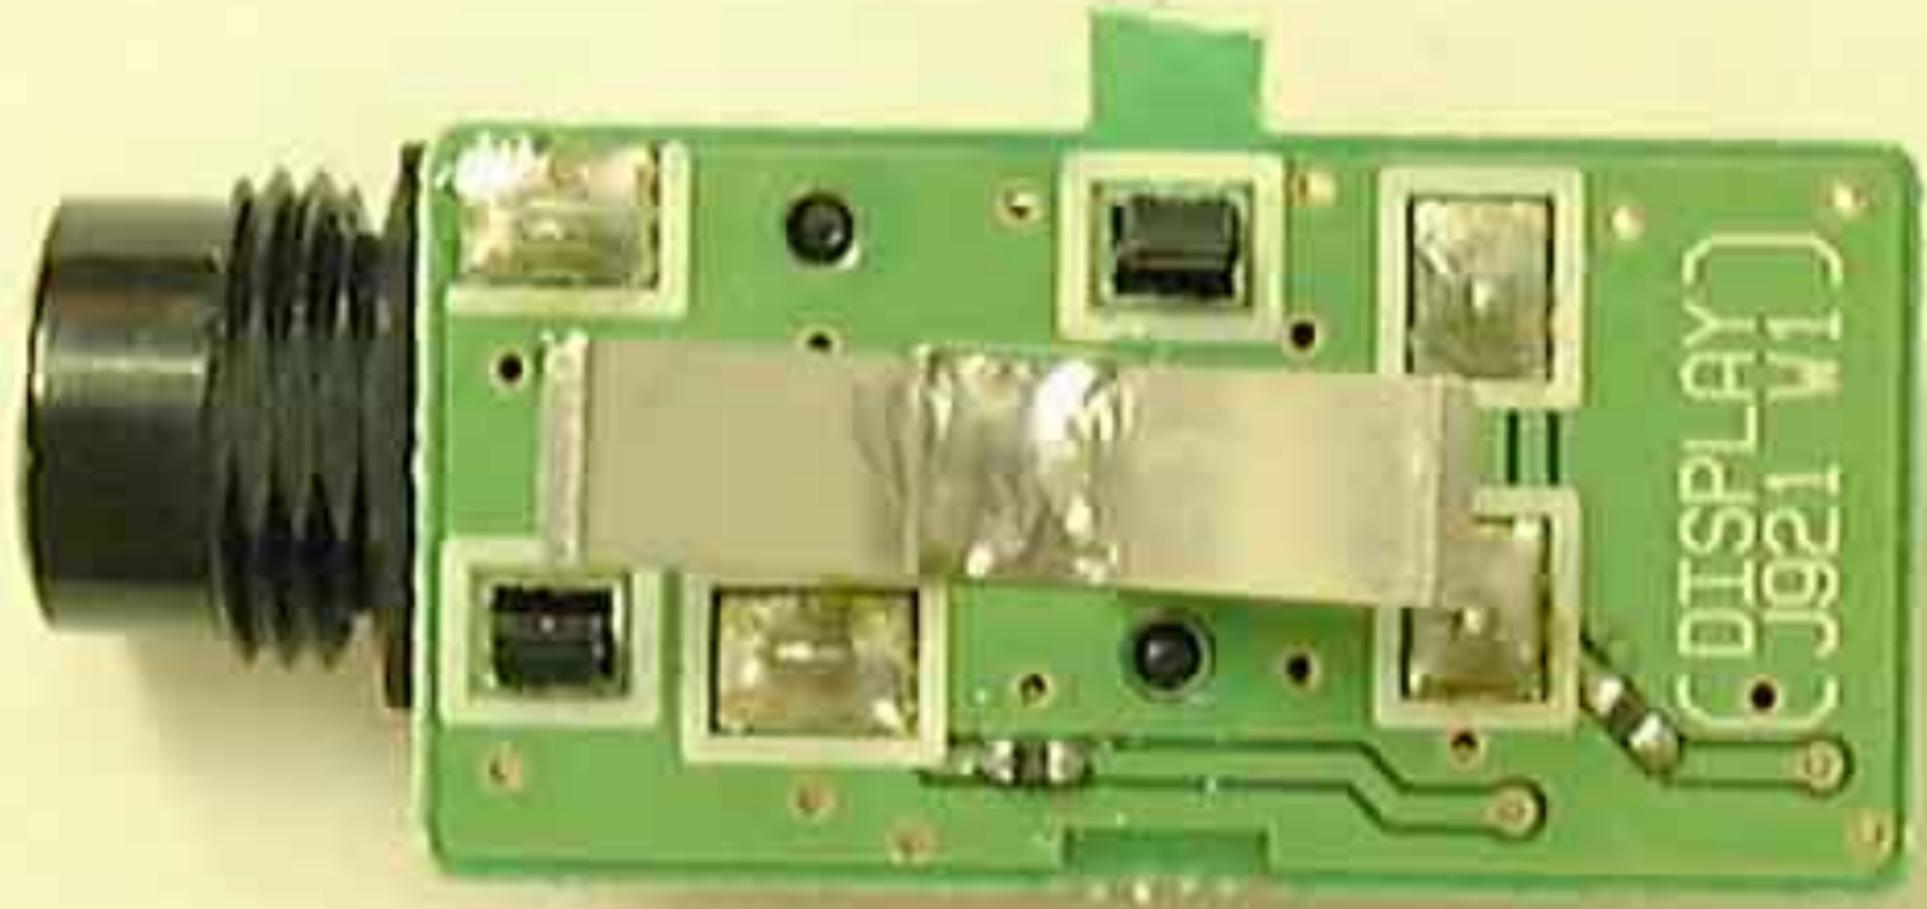


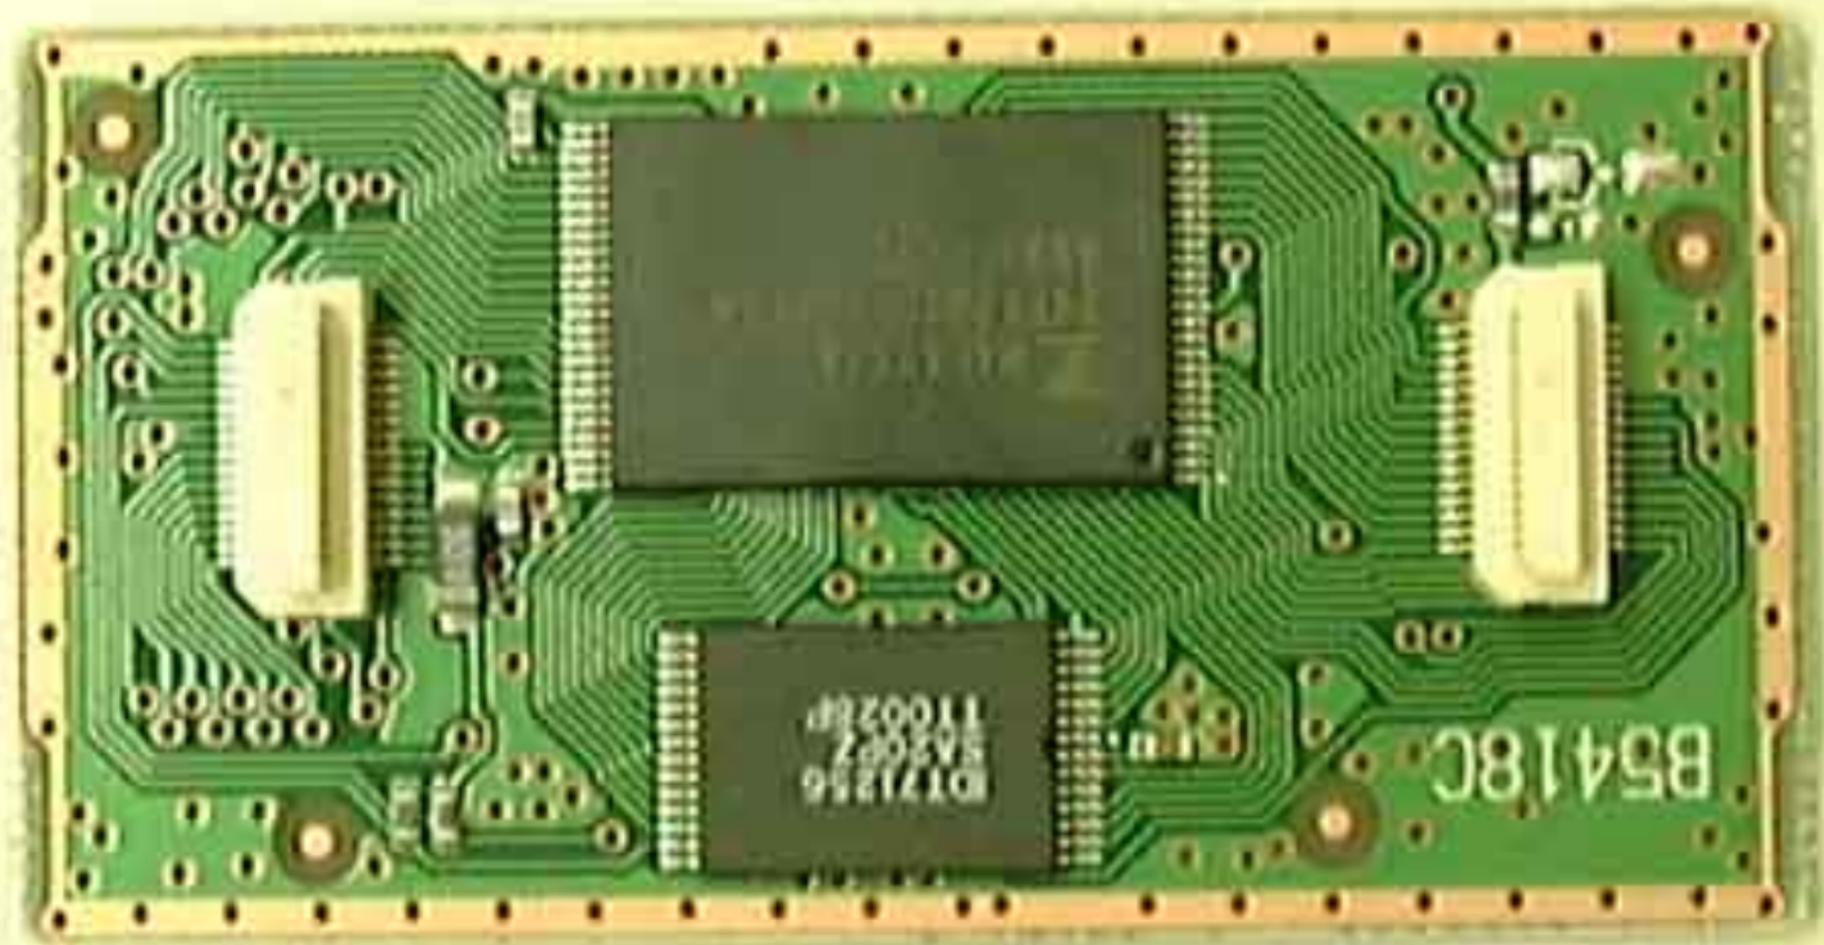


B5418C

0171256
5A2002
110028P

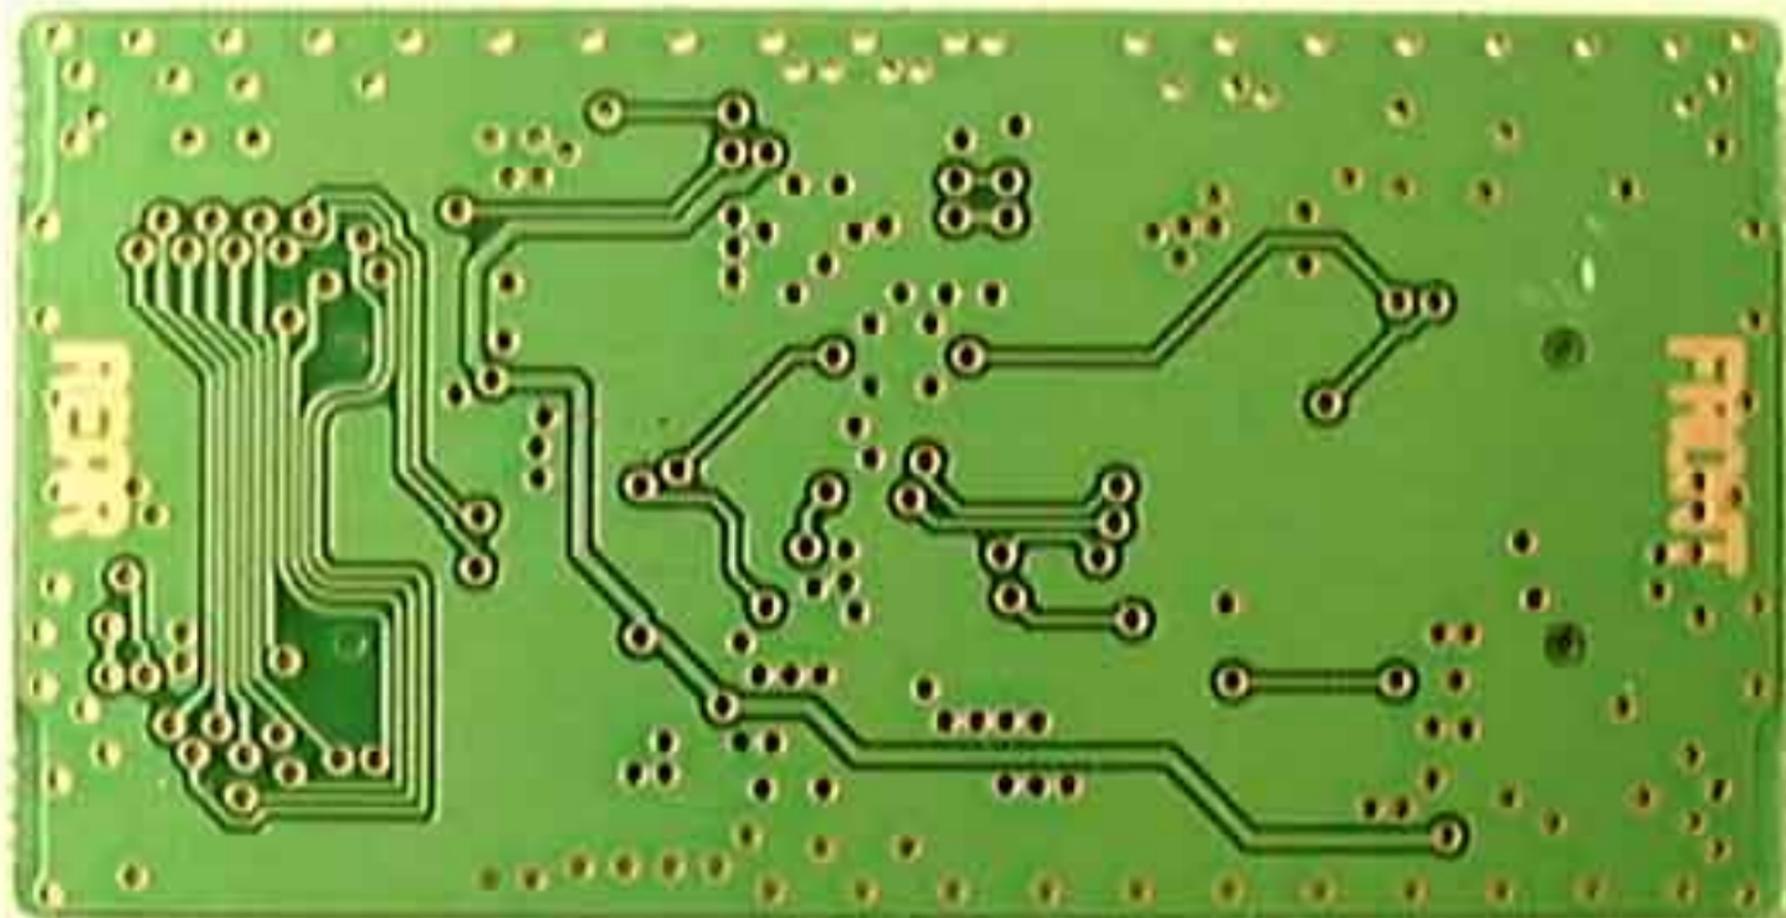

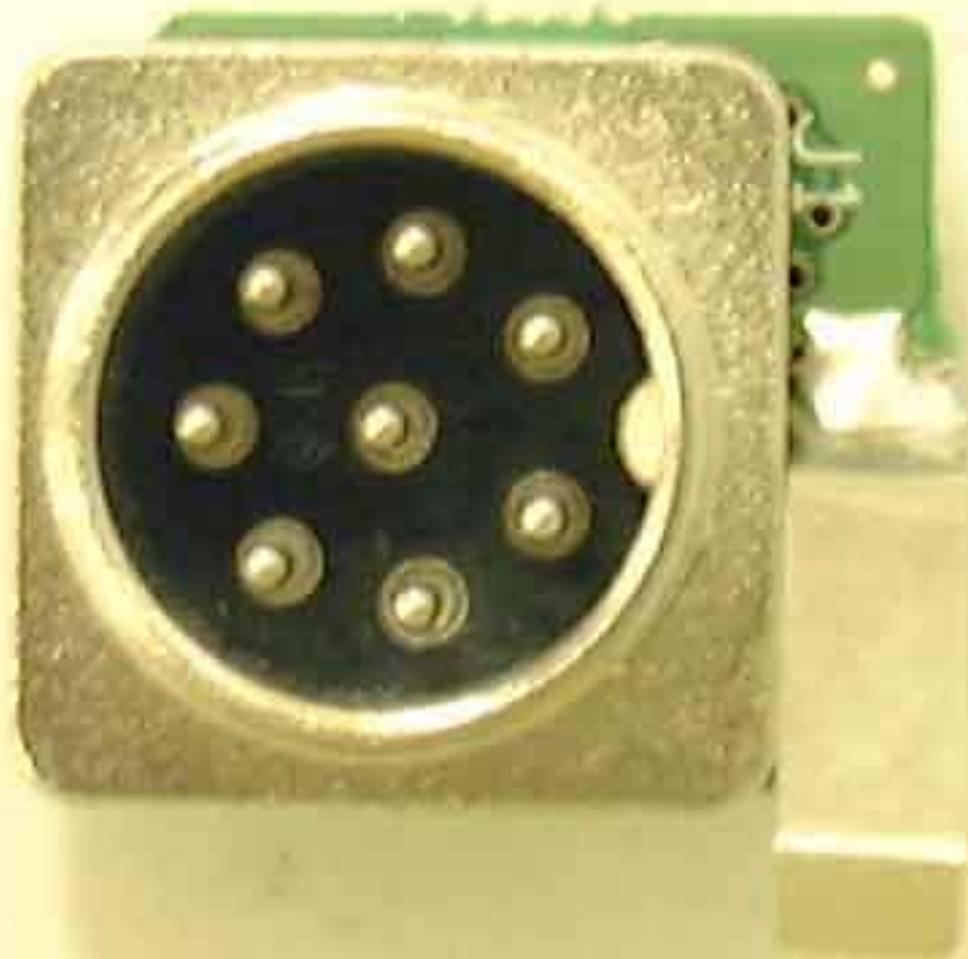

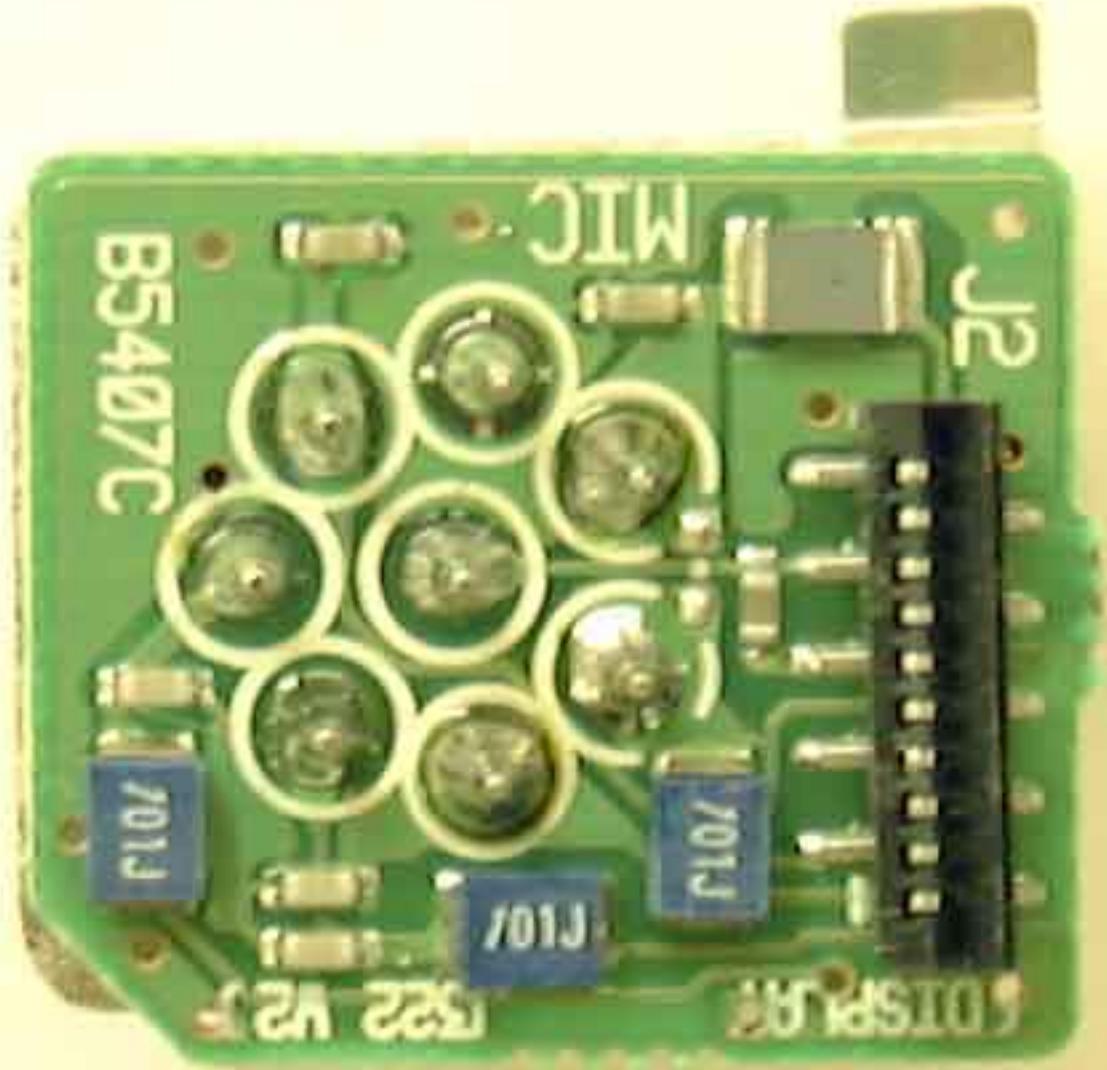

MIC

J2

B5407C

201J


201J


1010

1322 V2

1010

Downloaded by RadioAmateur.EU

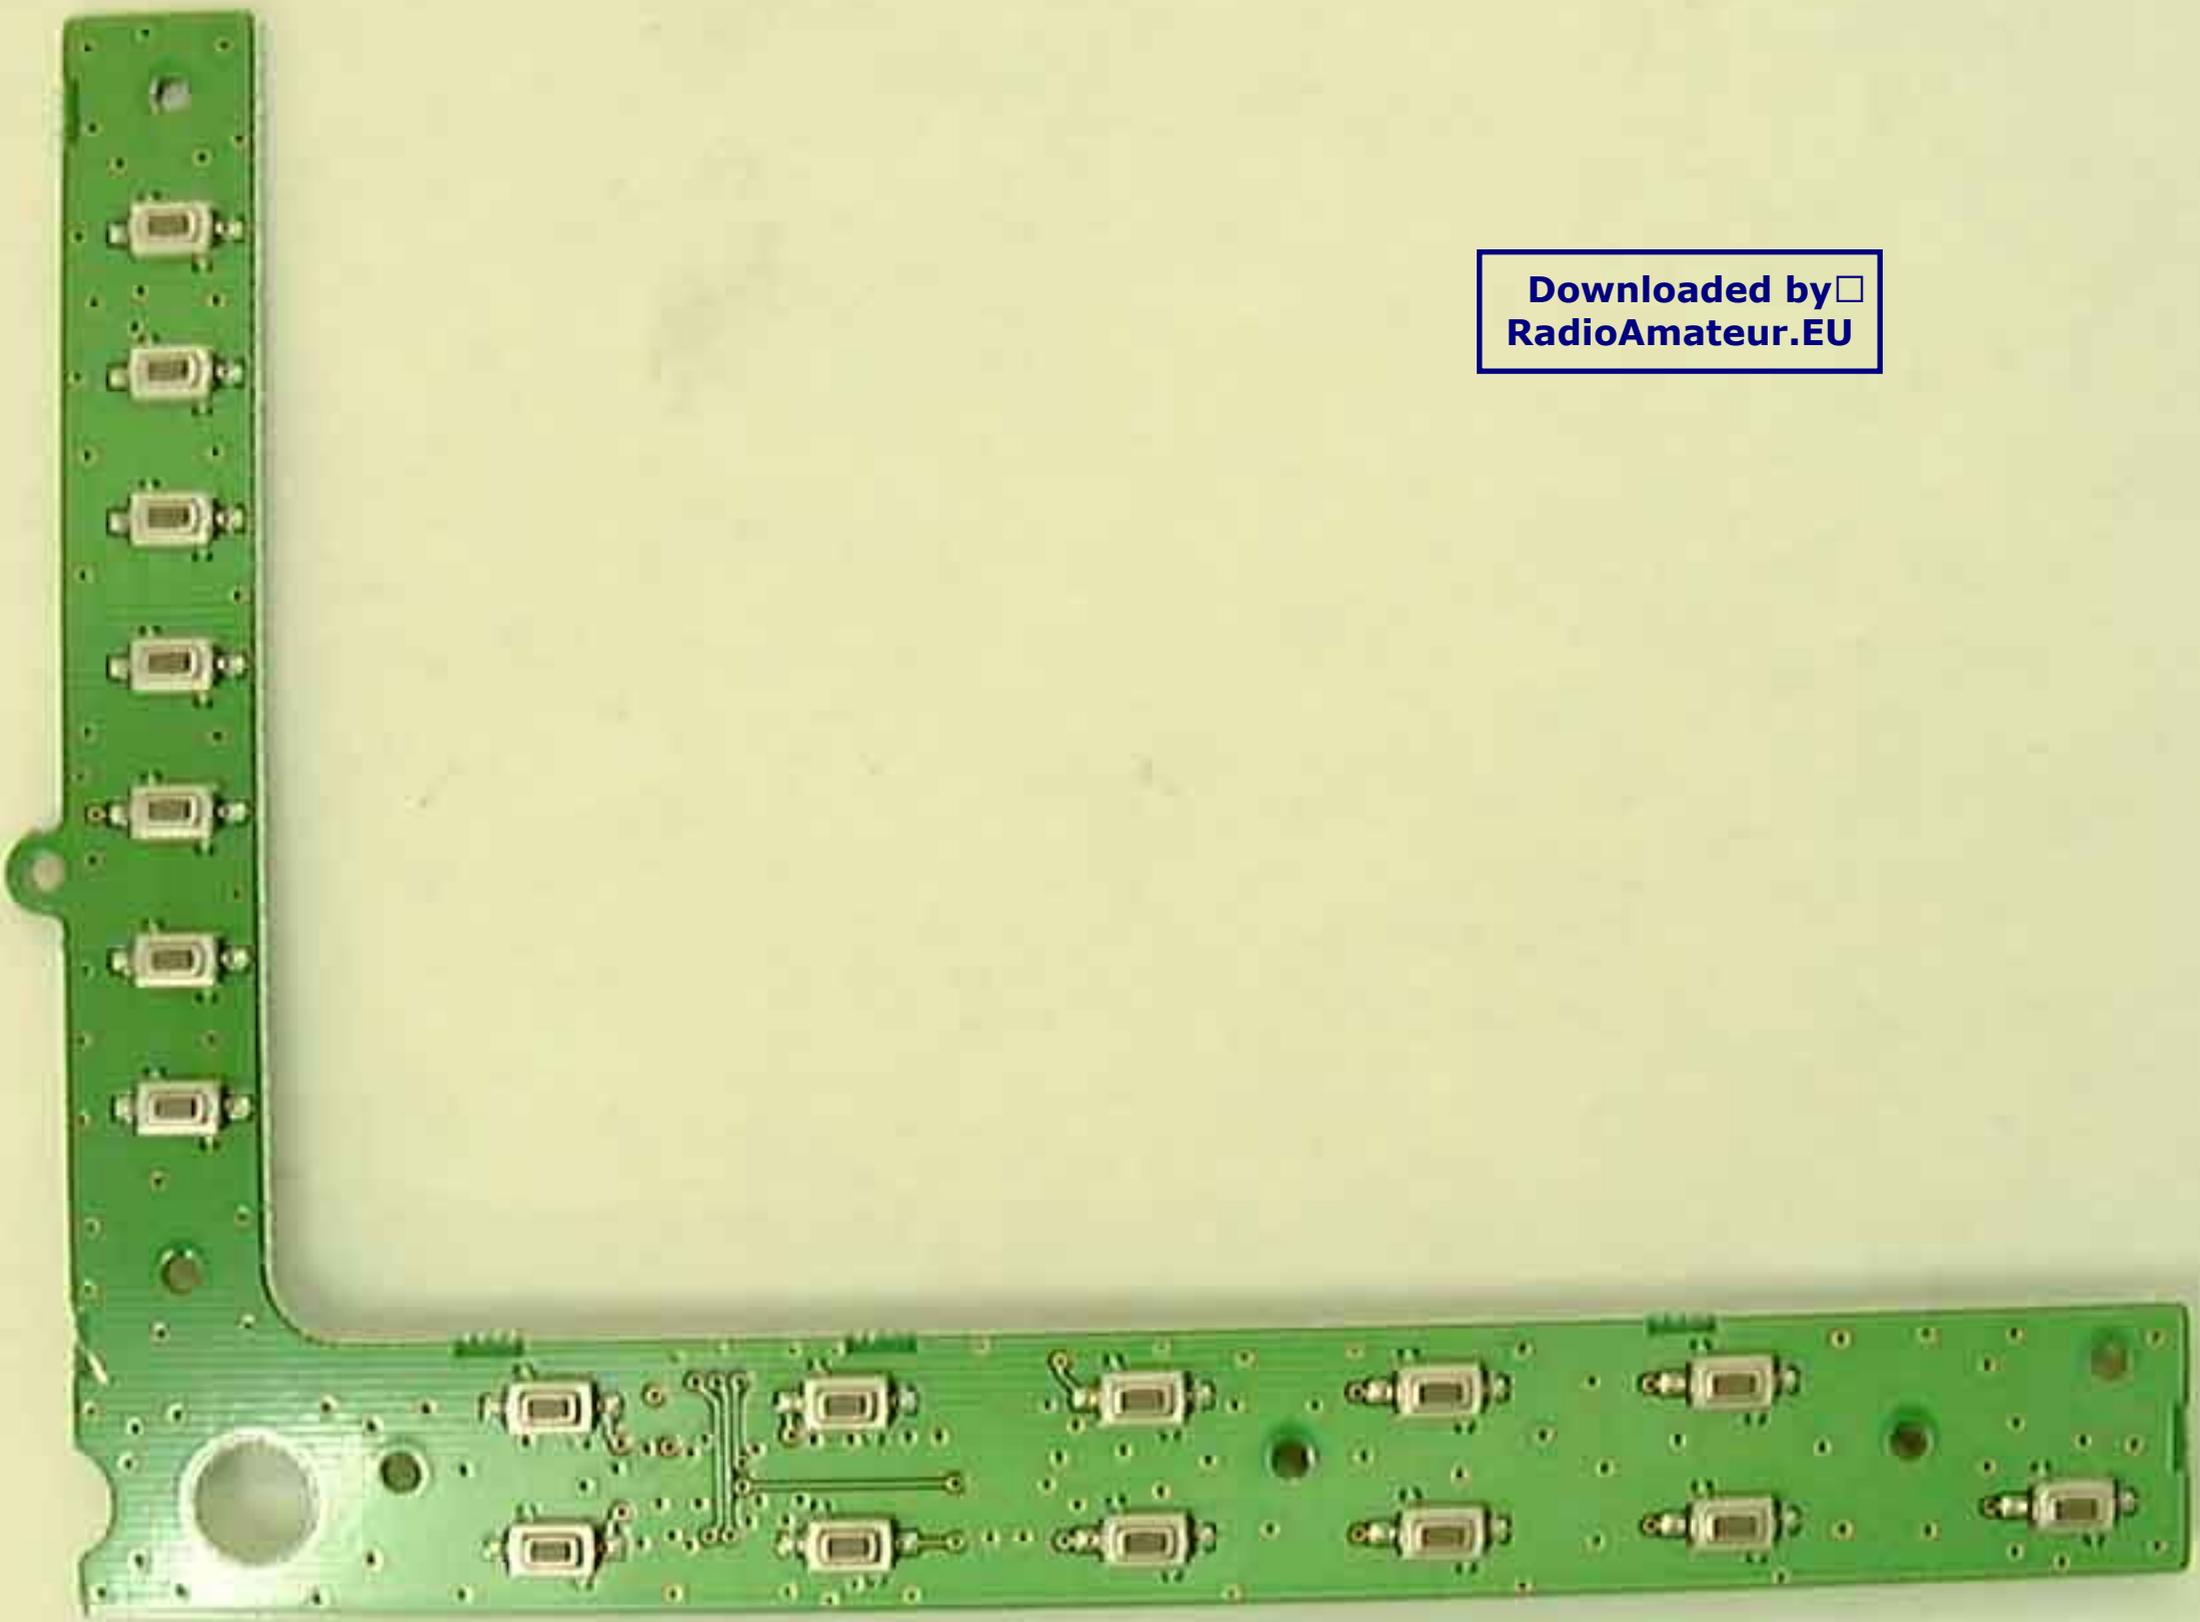

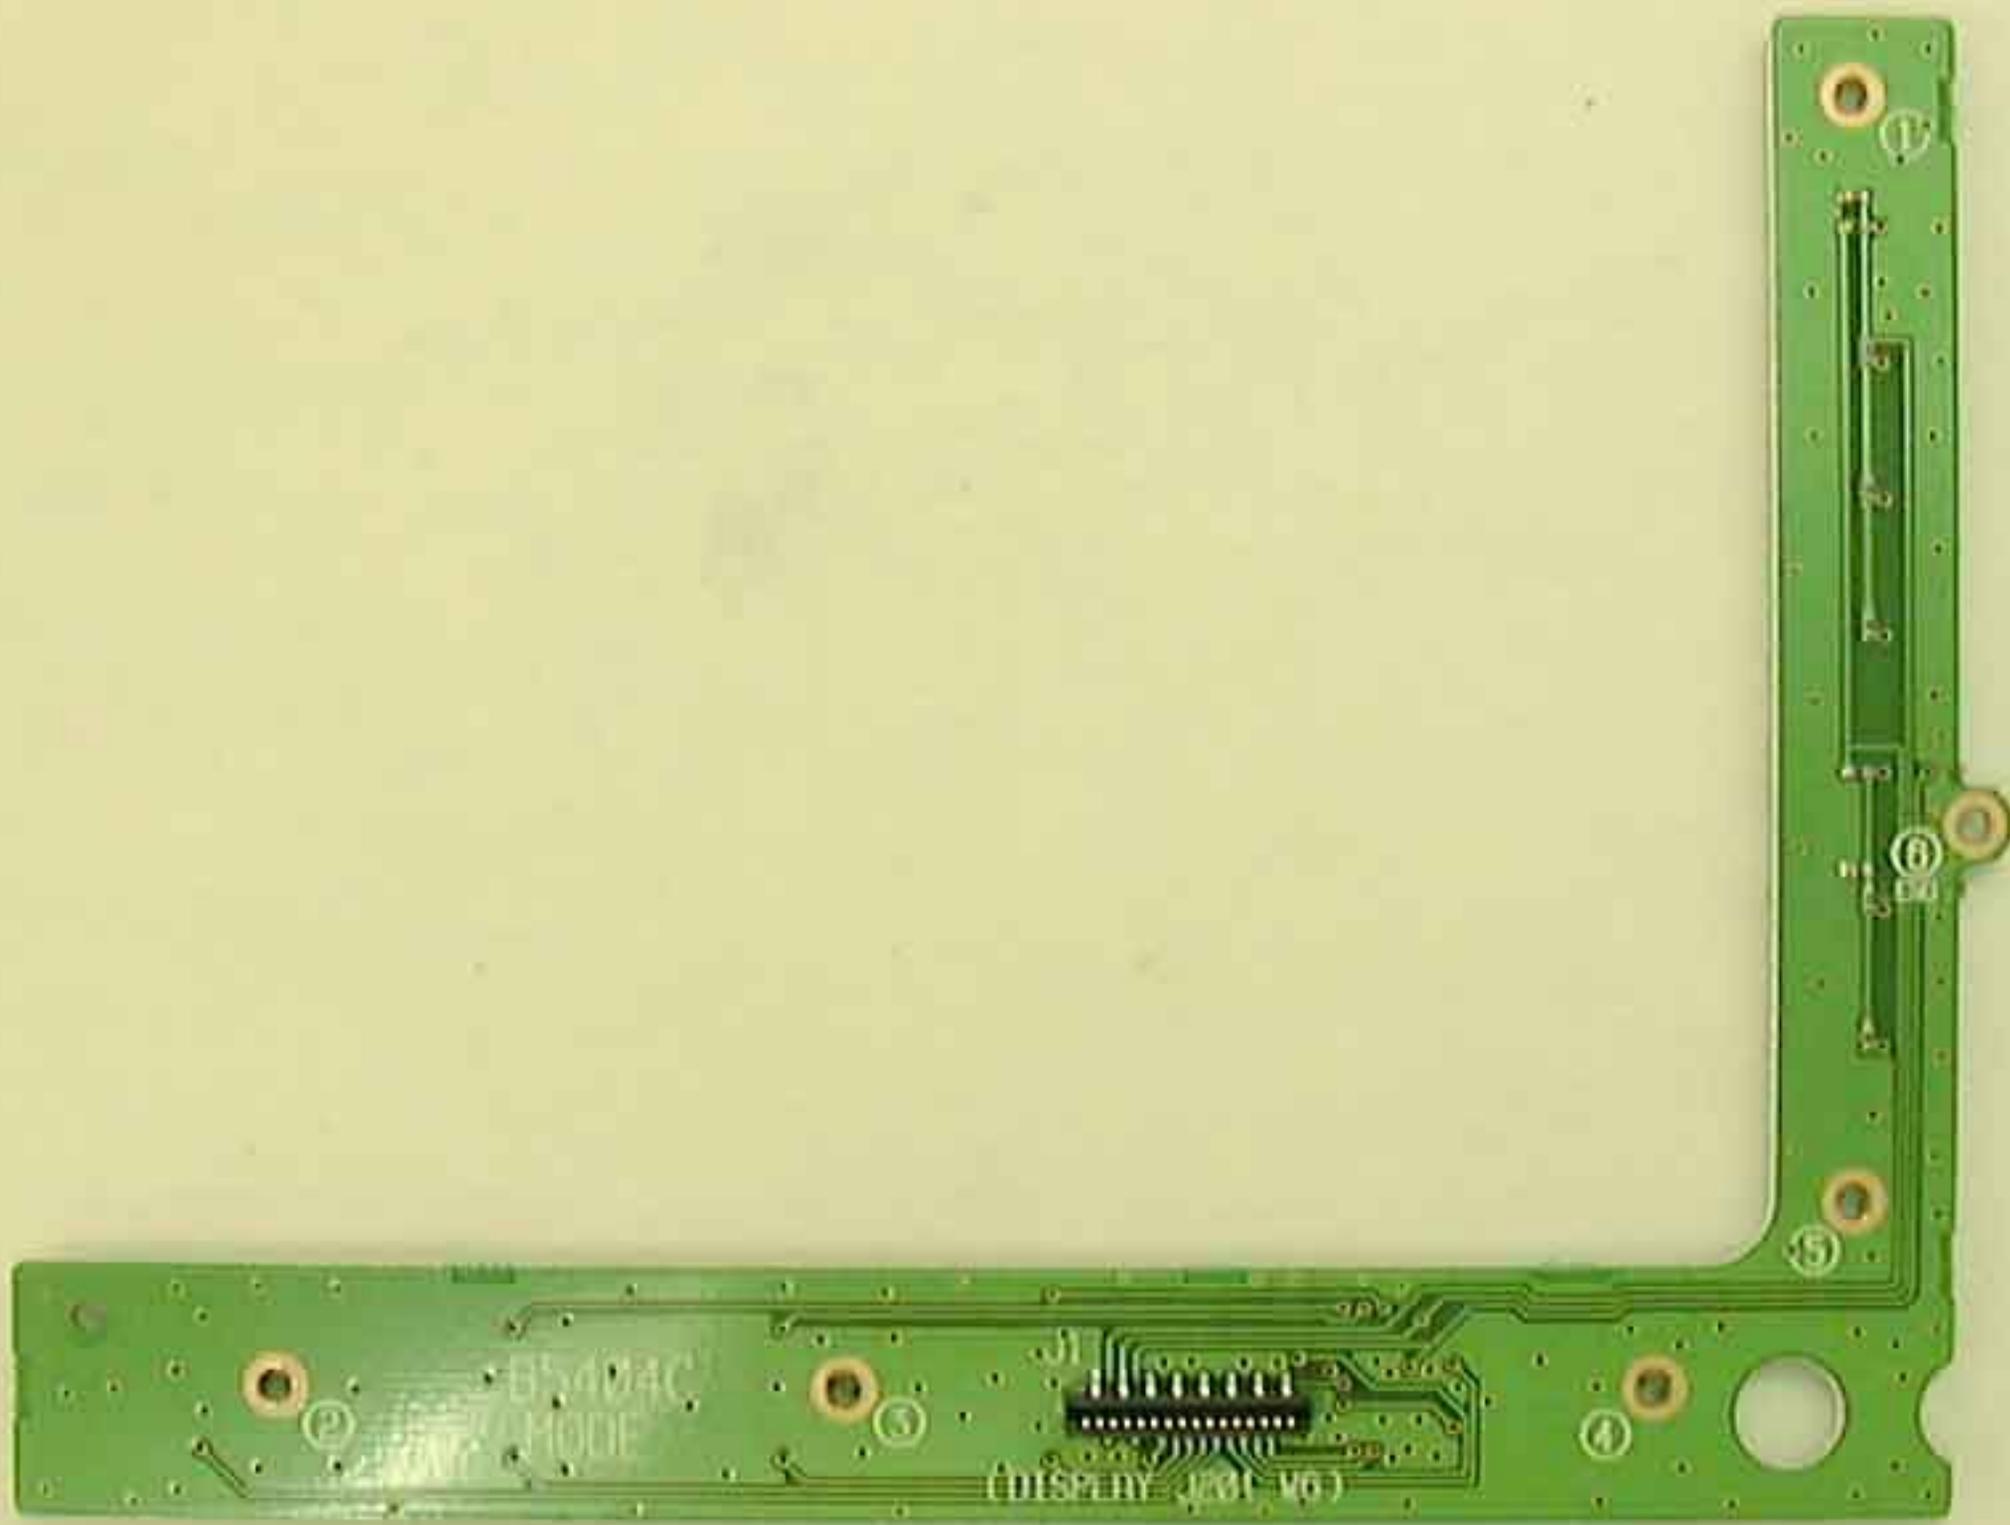

EPM4010AC
MODE

(0152) NY 3201 V0


2

3


4


5

6

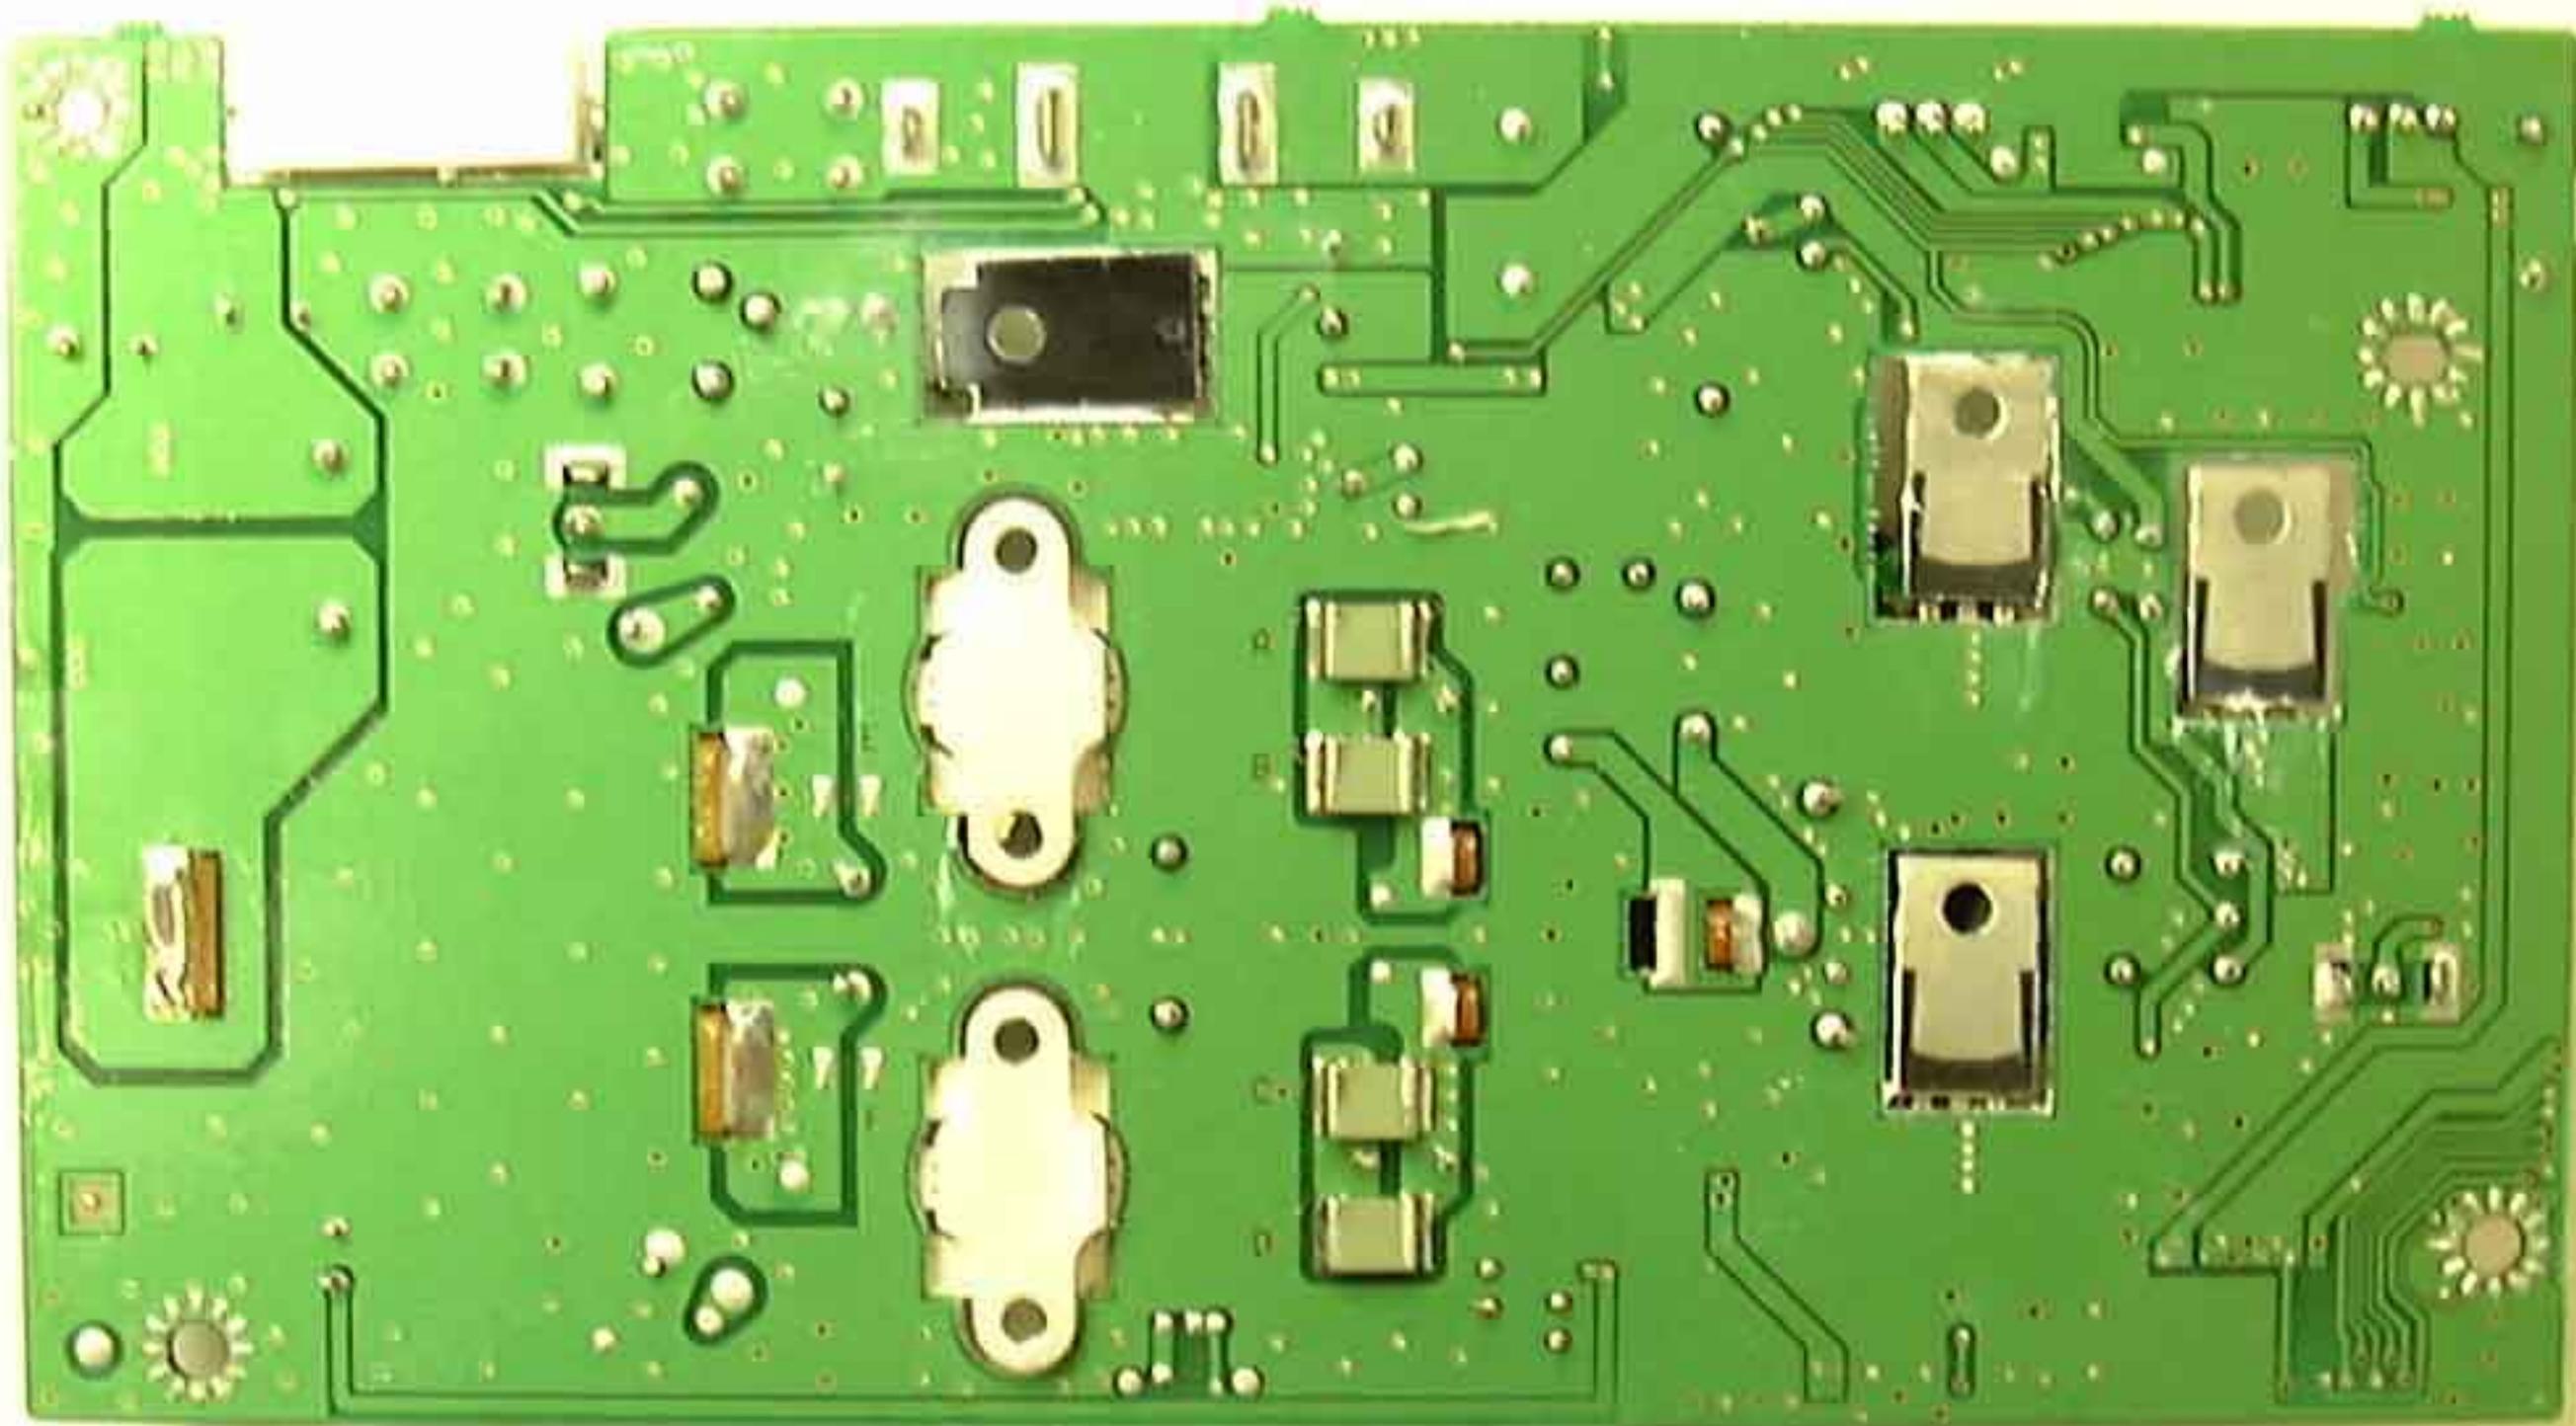

Downloaded by RadioAmateur.EU

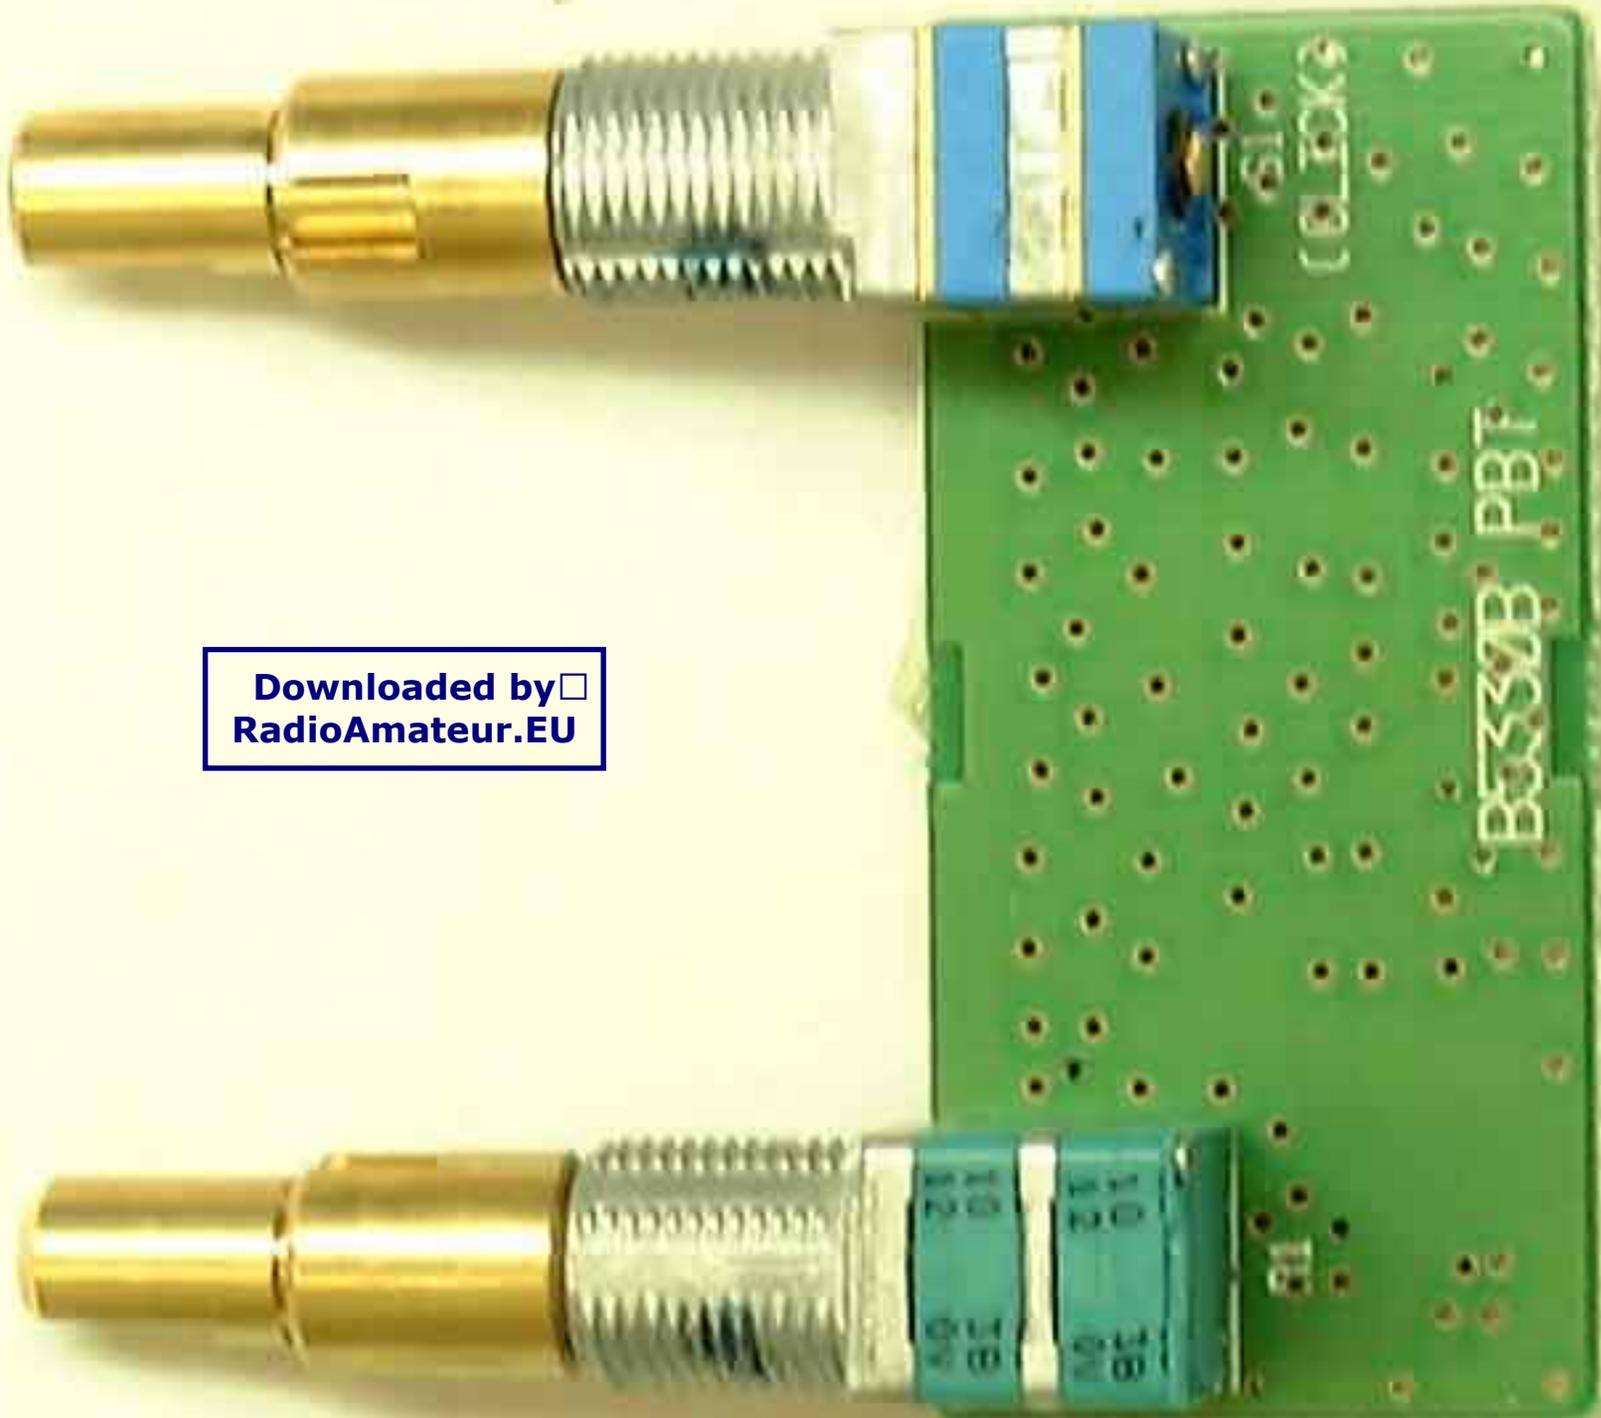

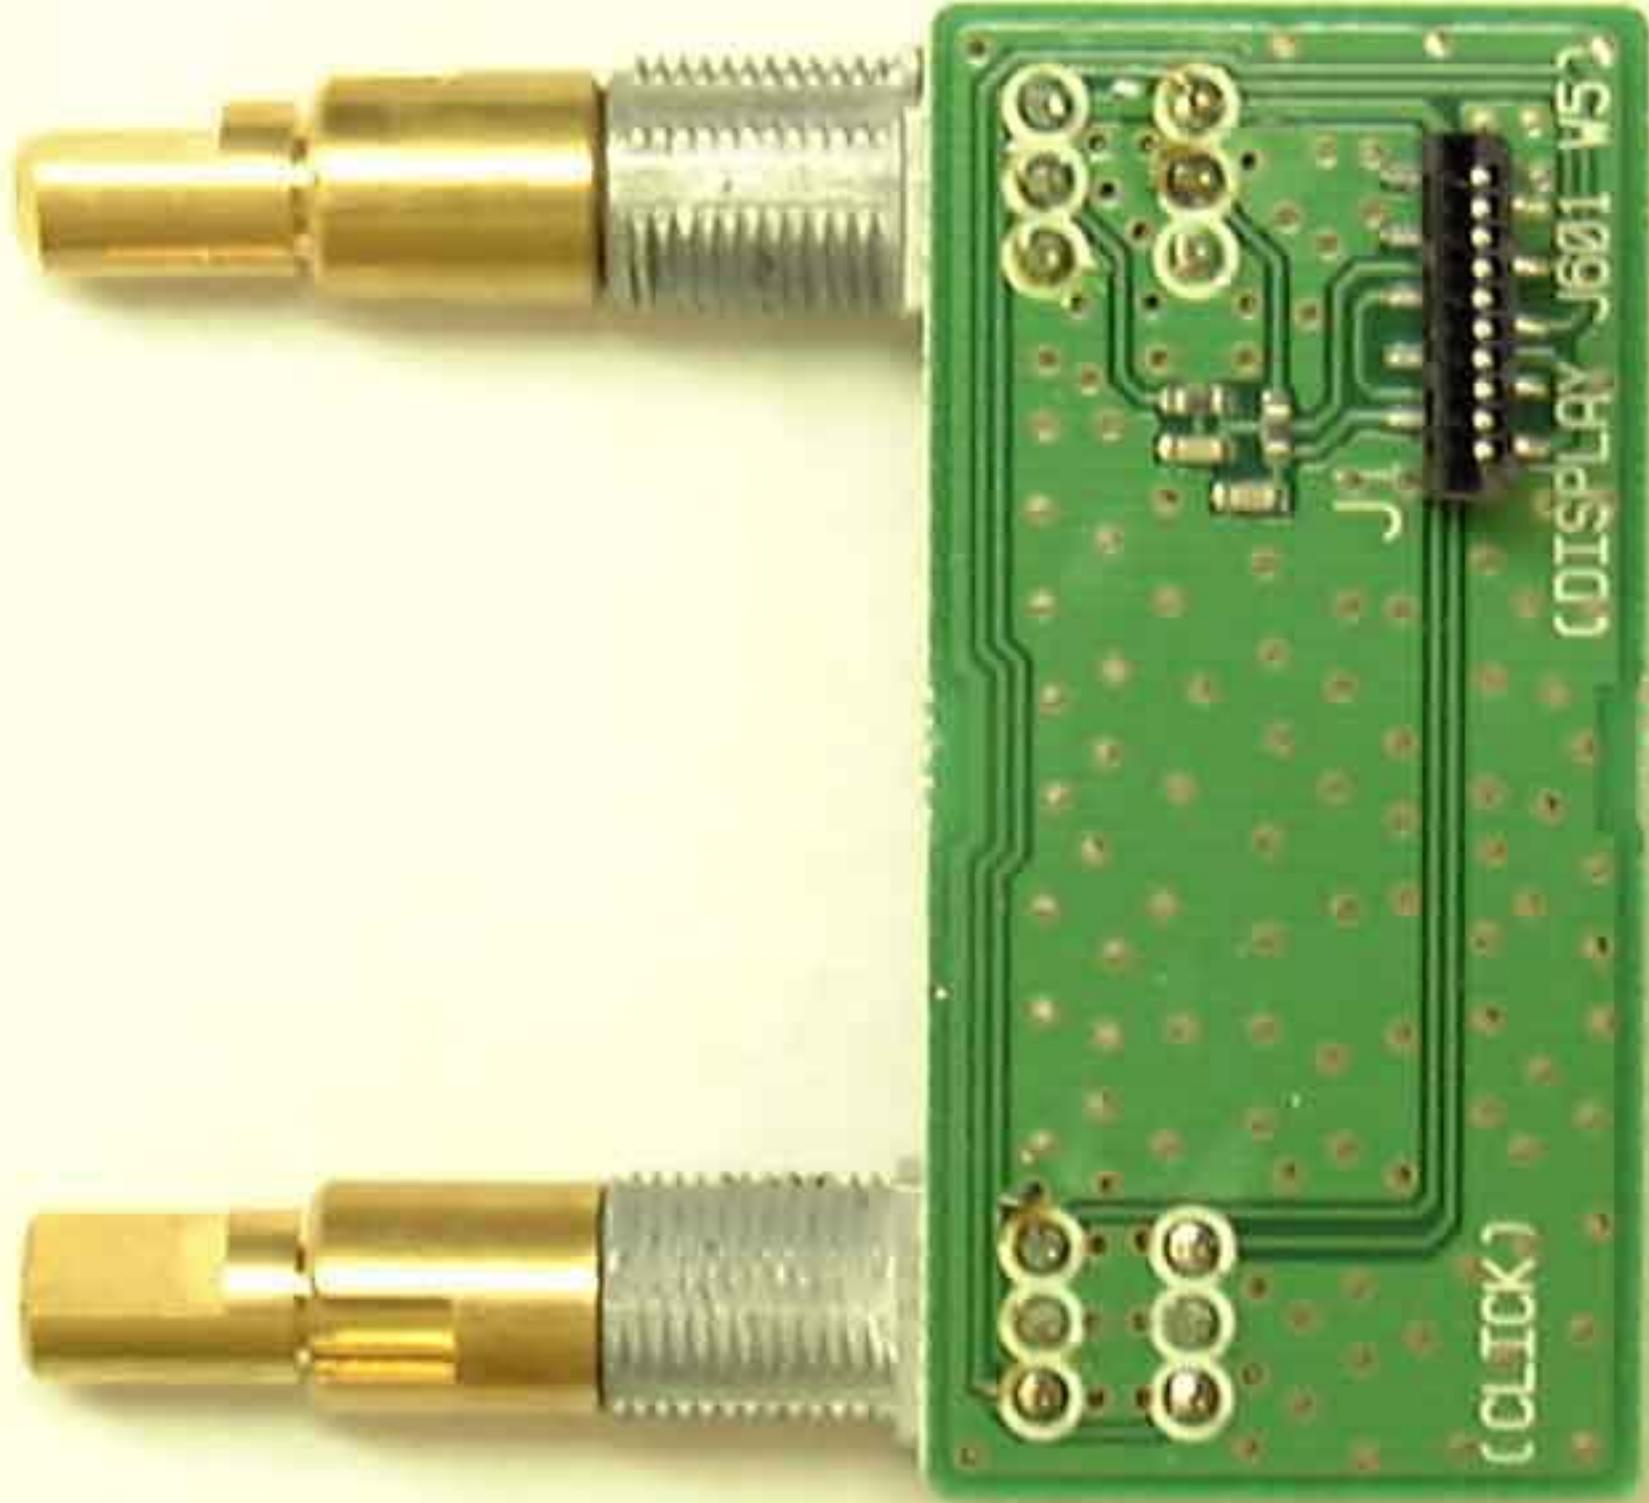

(CLICK)

(DISPLAY J601 V5)

B5331B




LINE



(DISPENSE)
(J941-M3)



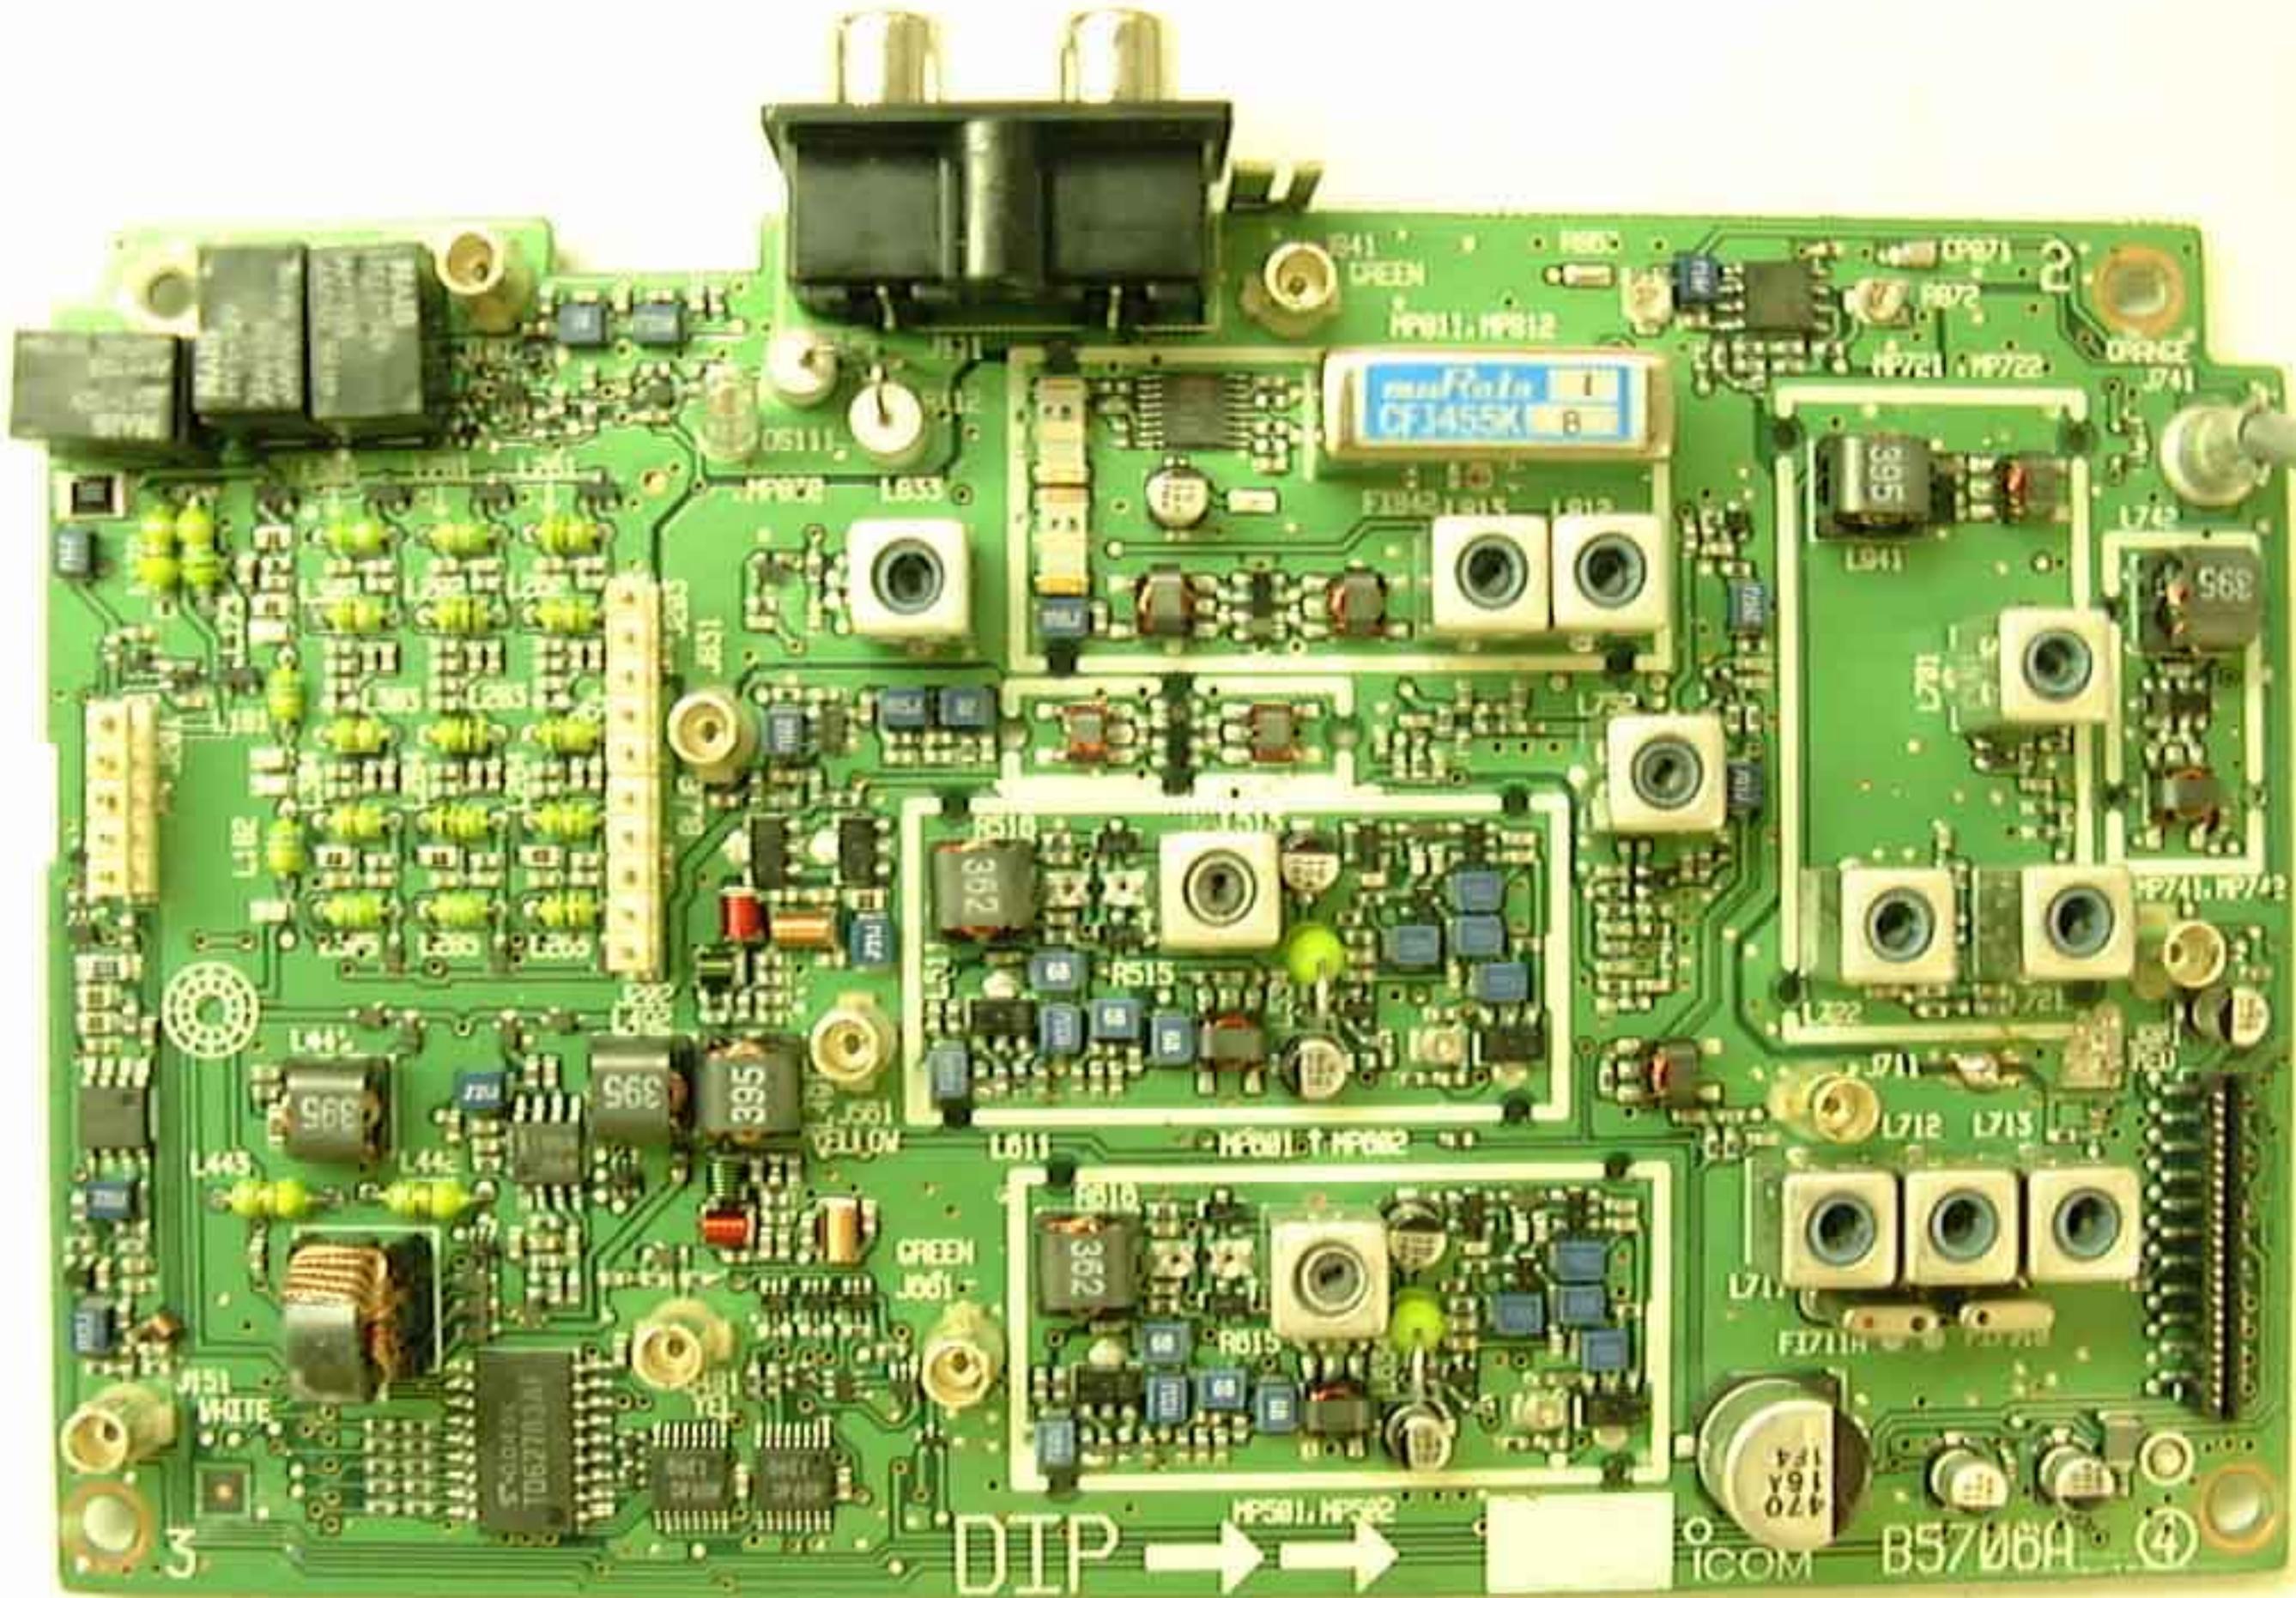

DIP → →

ICOM B5706A ④


muRata
CF3455K


470
16A
1F4

MADE IN JAPAN
ICOM

3


4

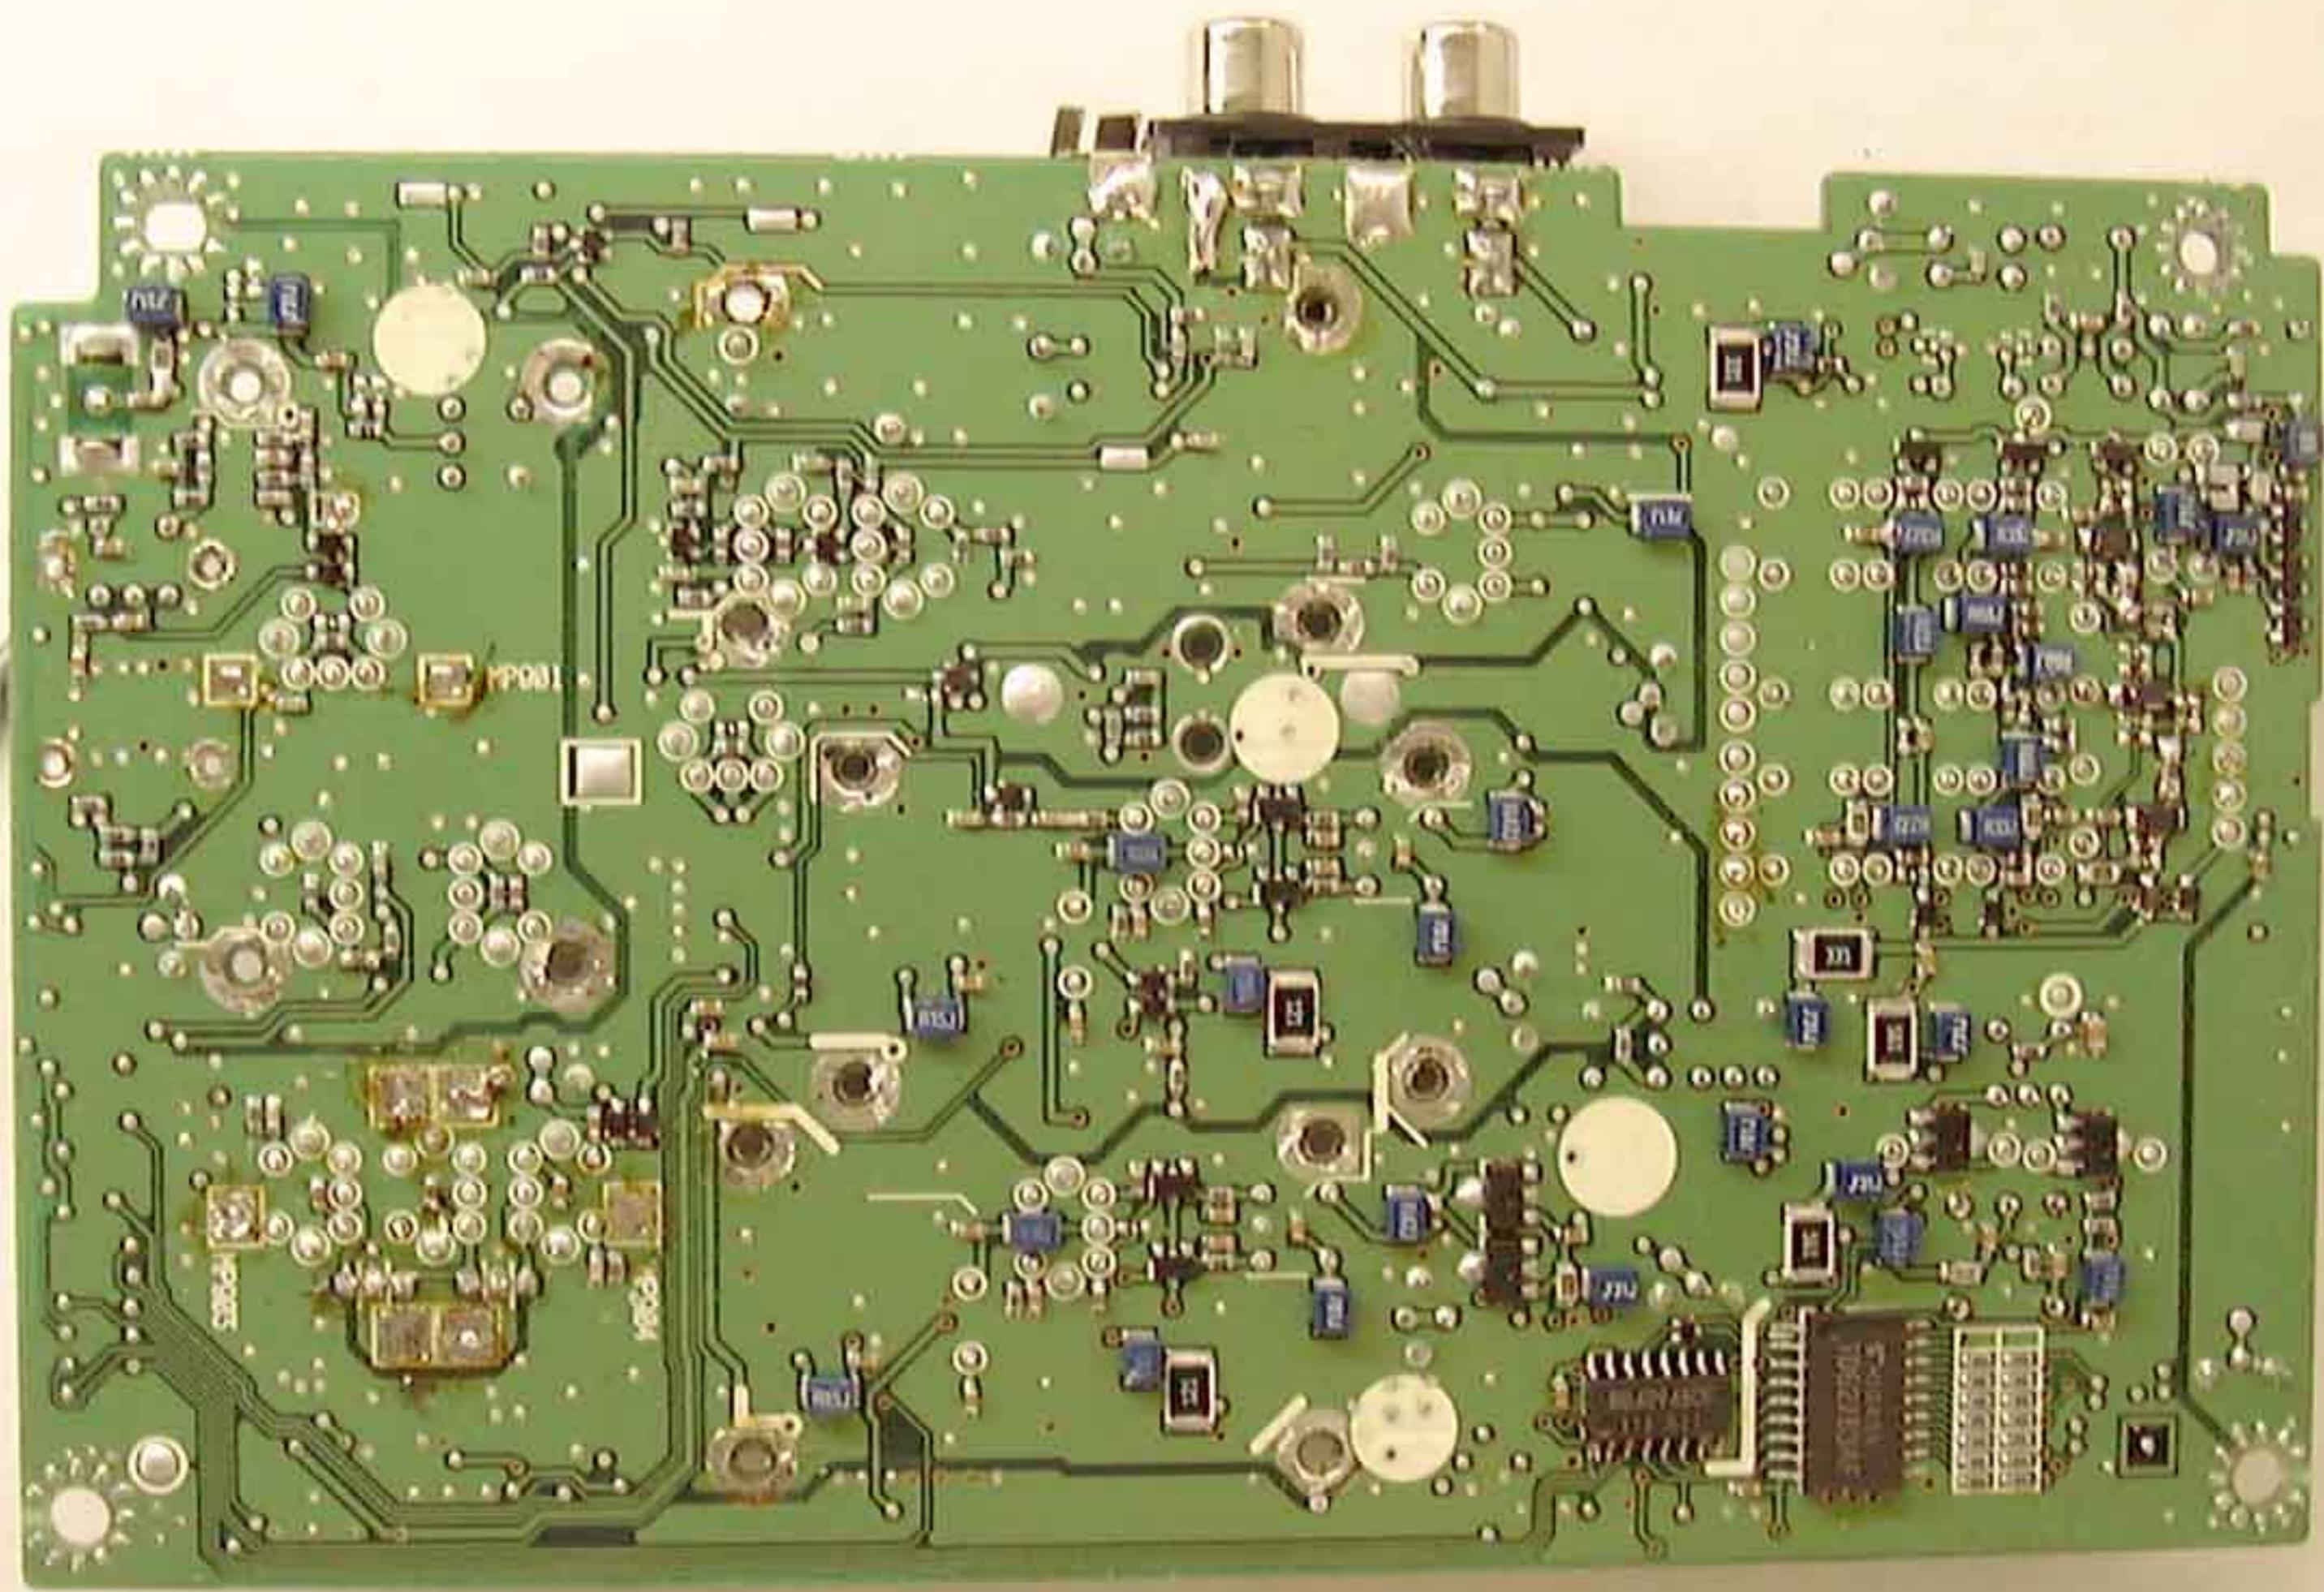


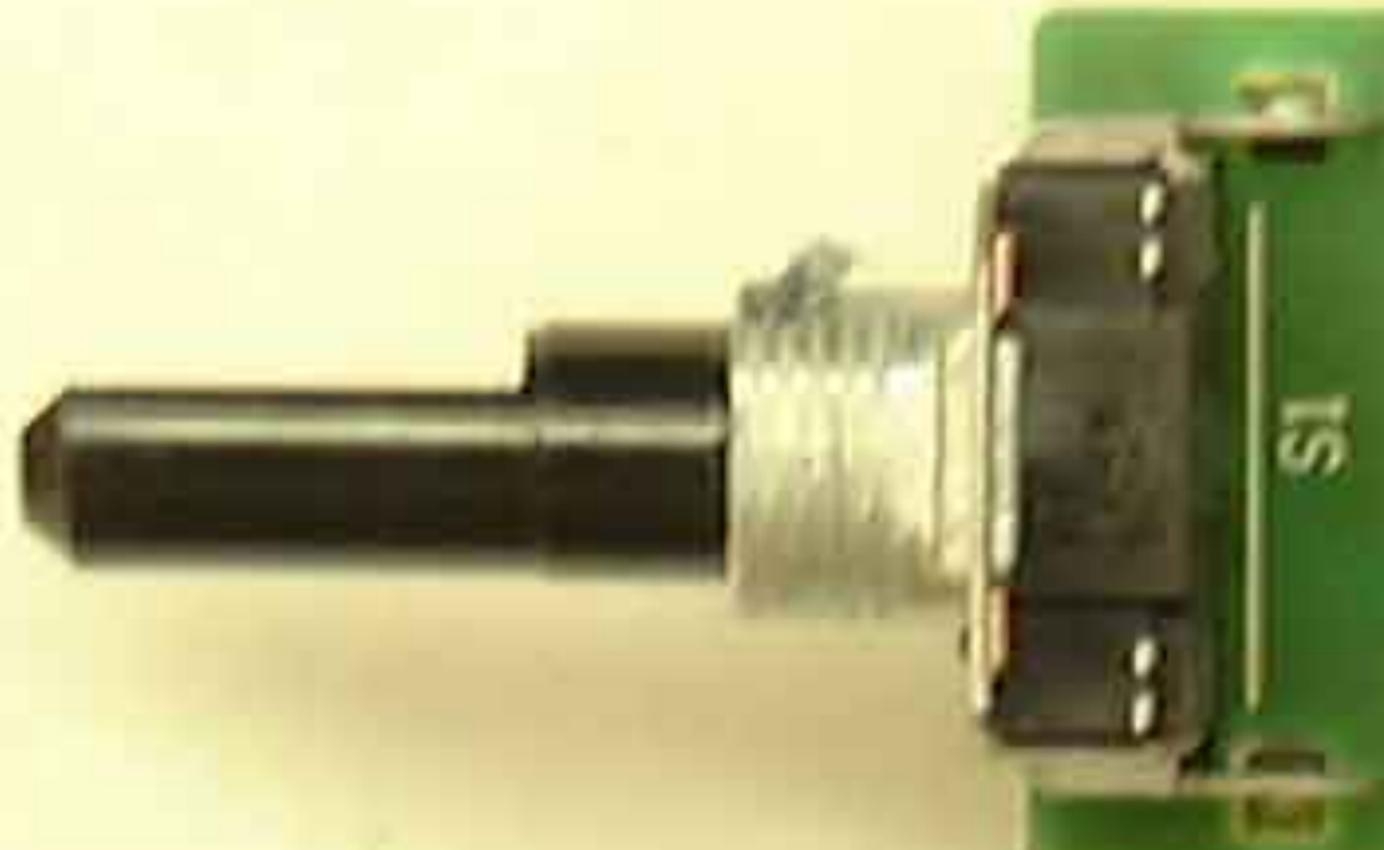


S1

ICOM
B5405A
R1T

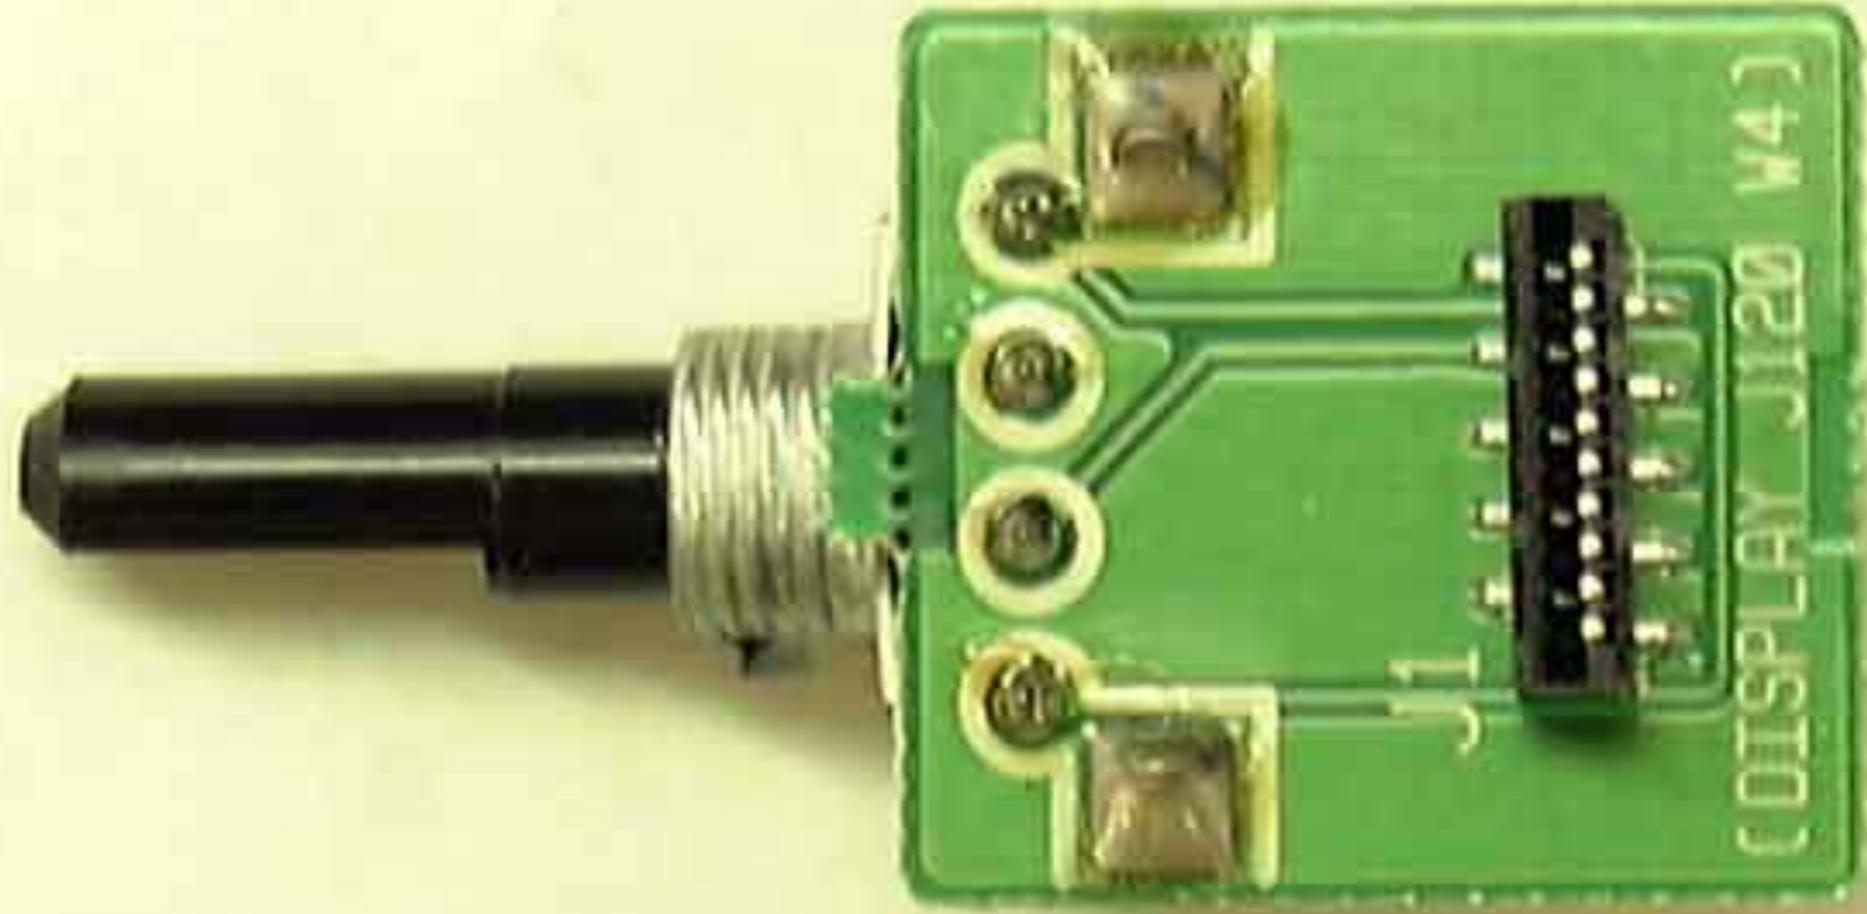

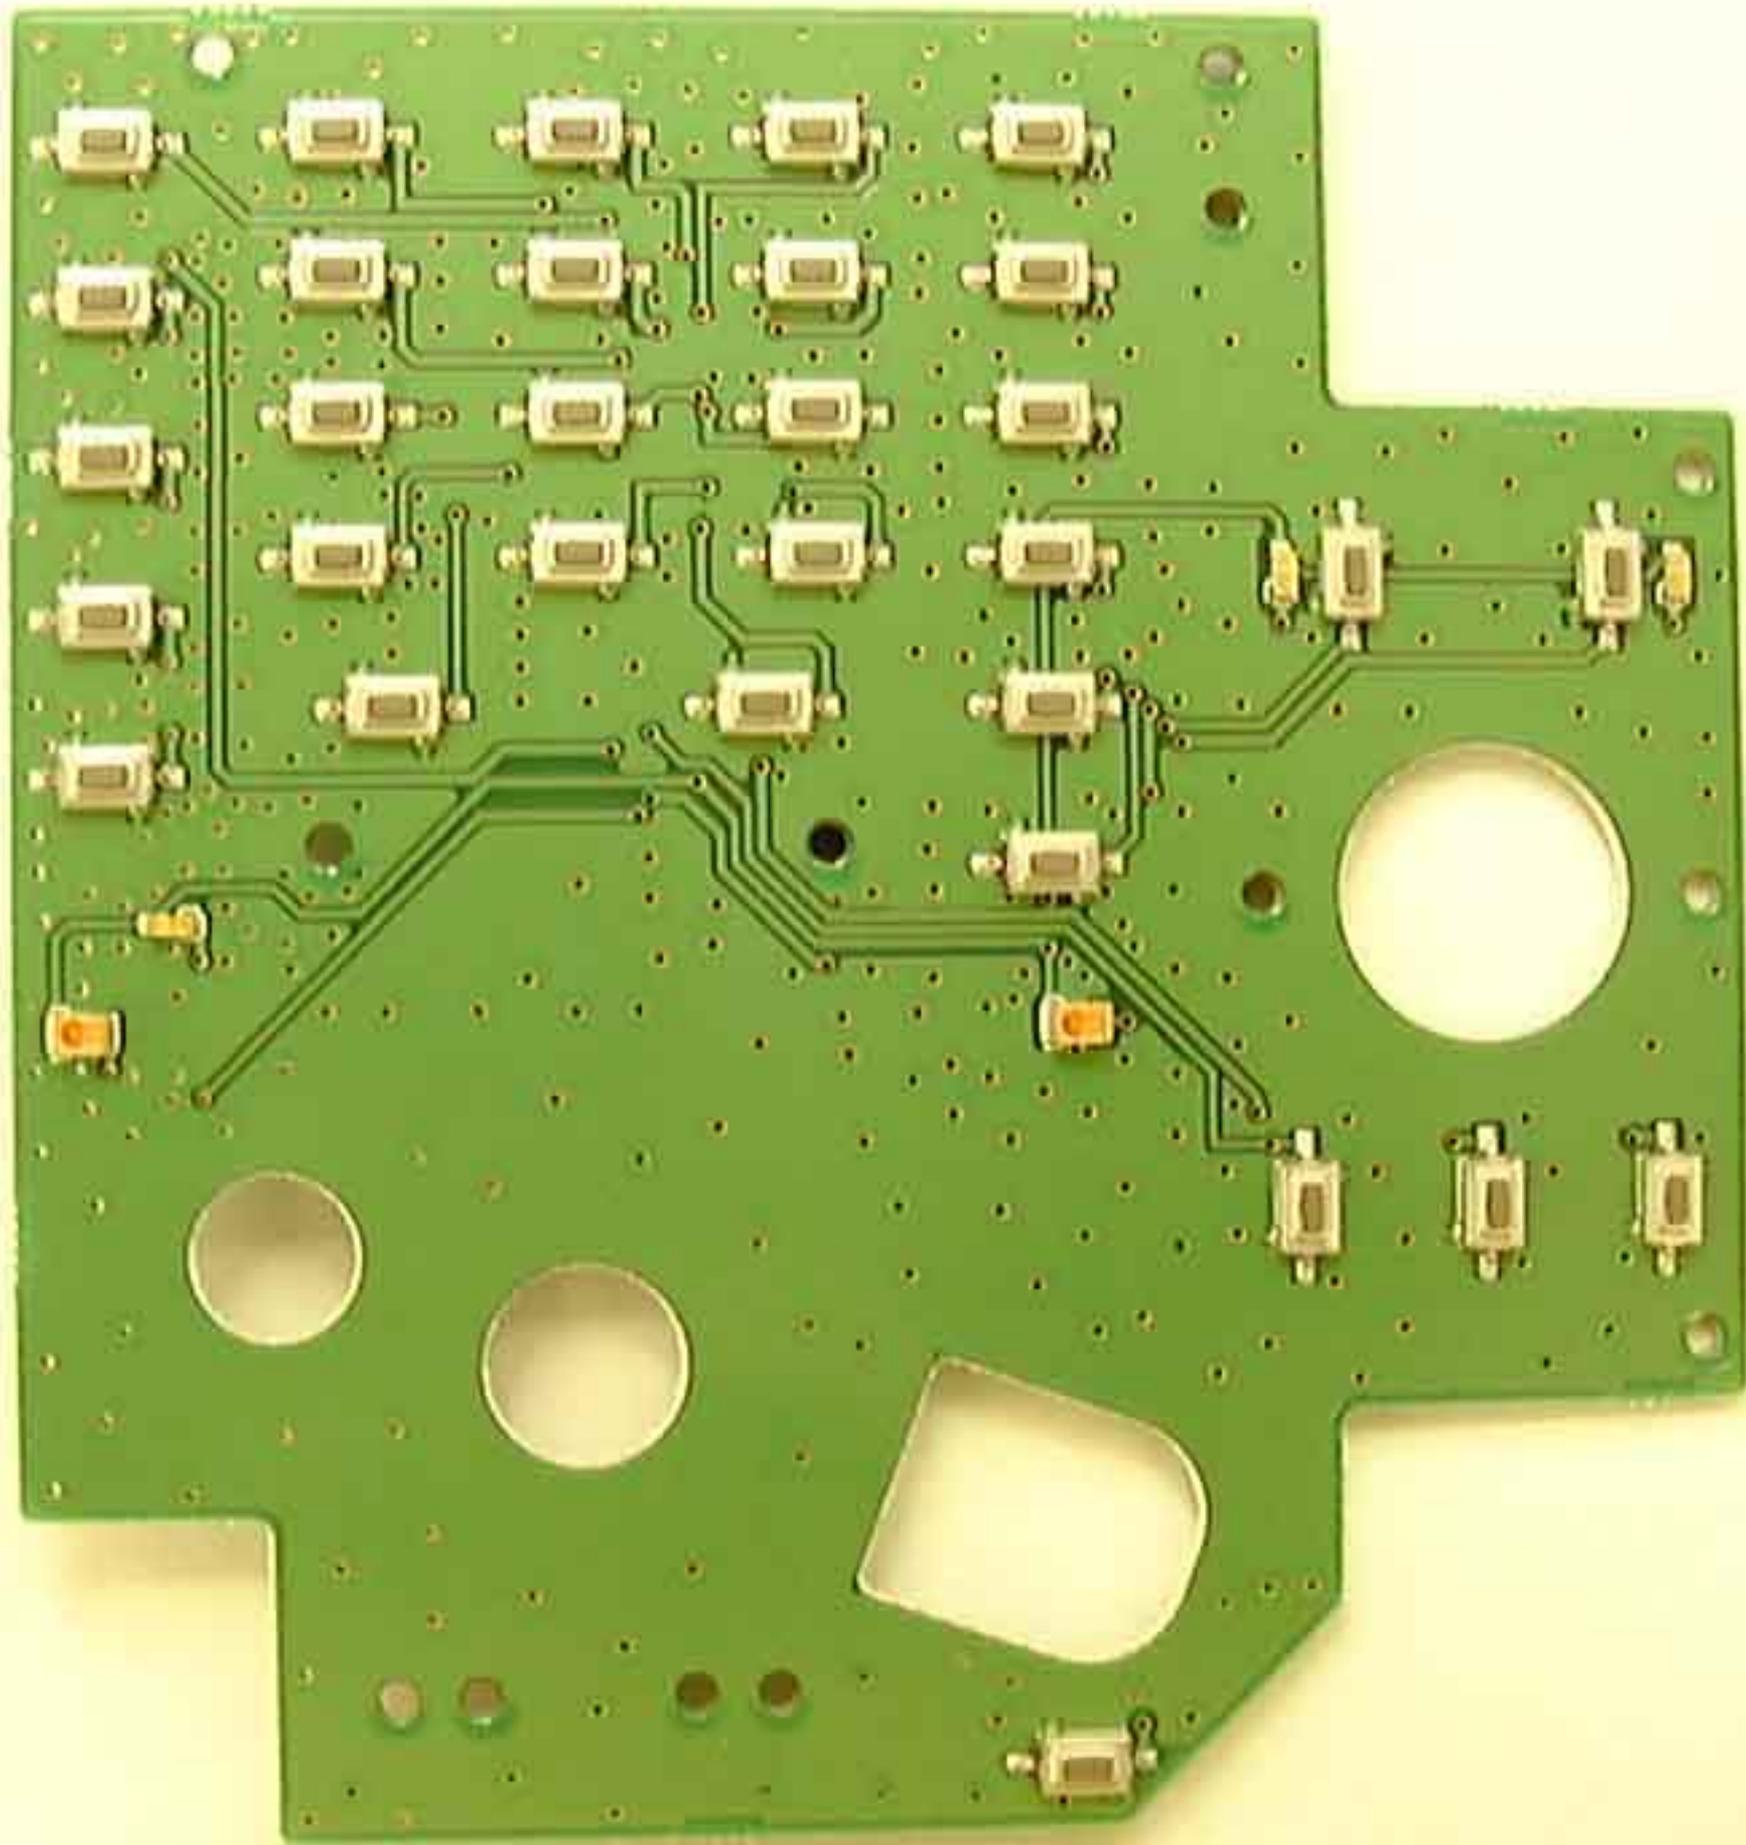

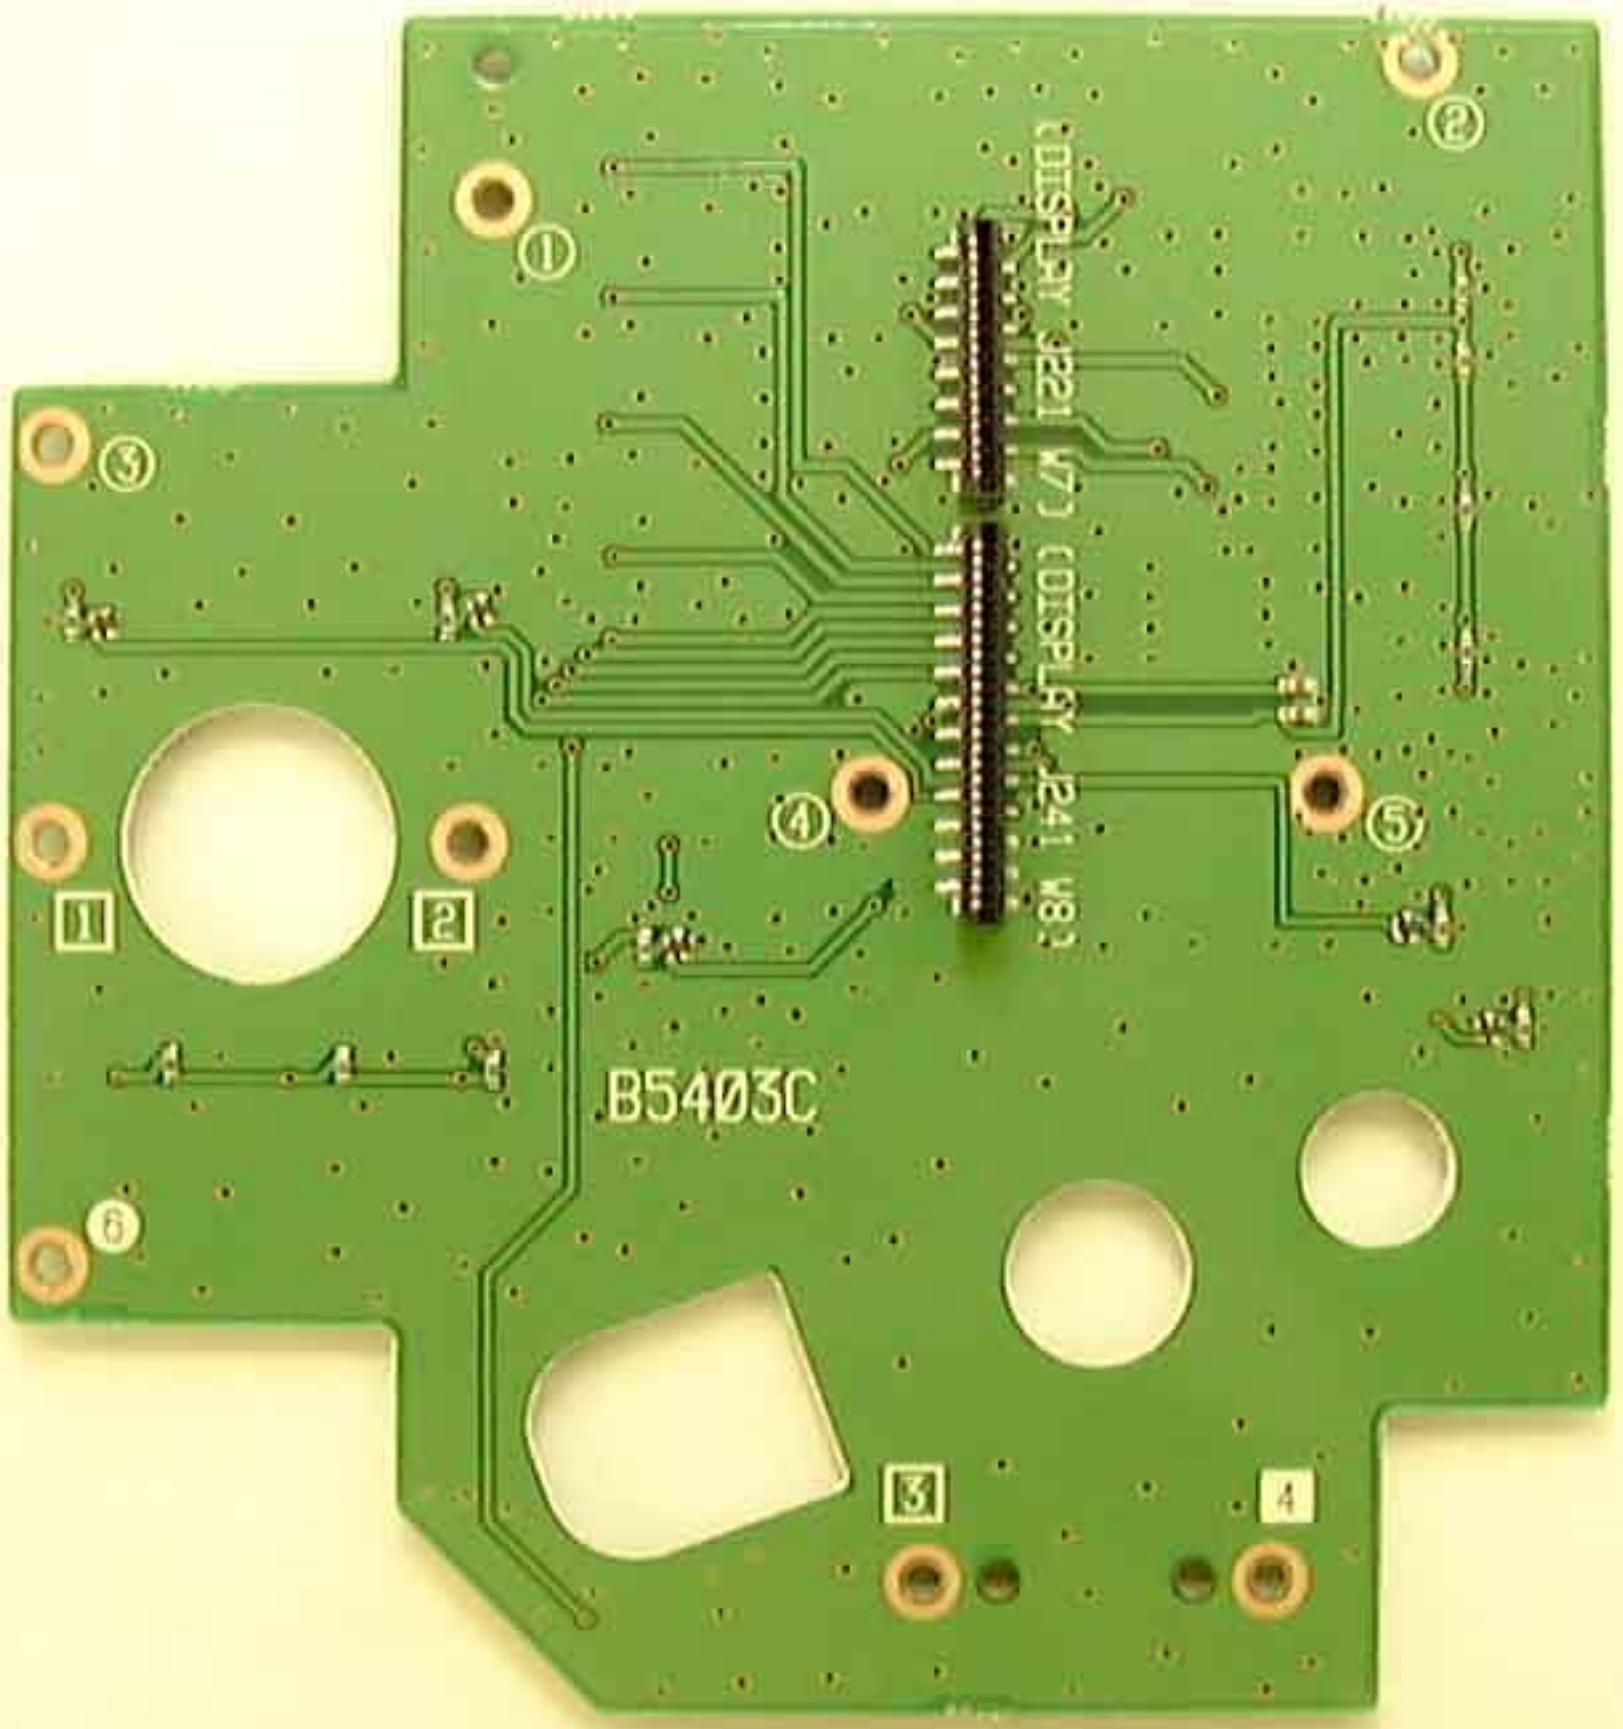

(DISPLAY J221 W7) (DISPLAY J241 W8)

B5403C

1

2

3

4

5


1

2

6

3

4

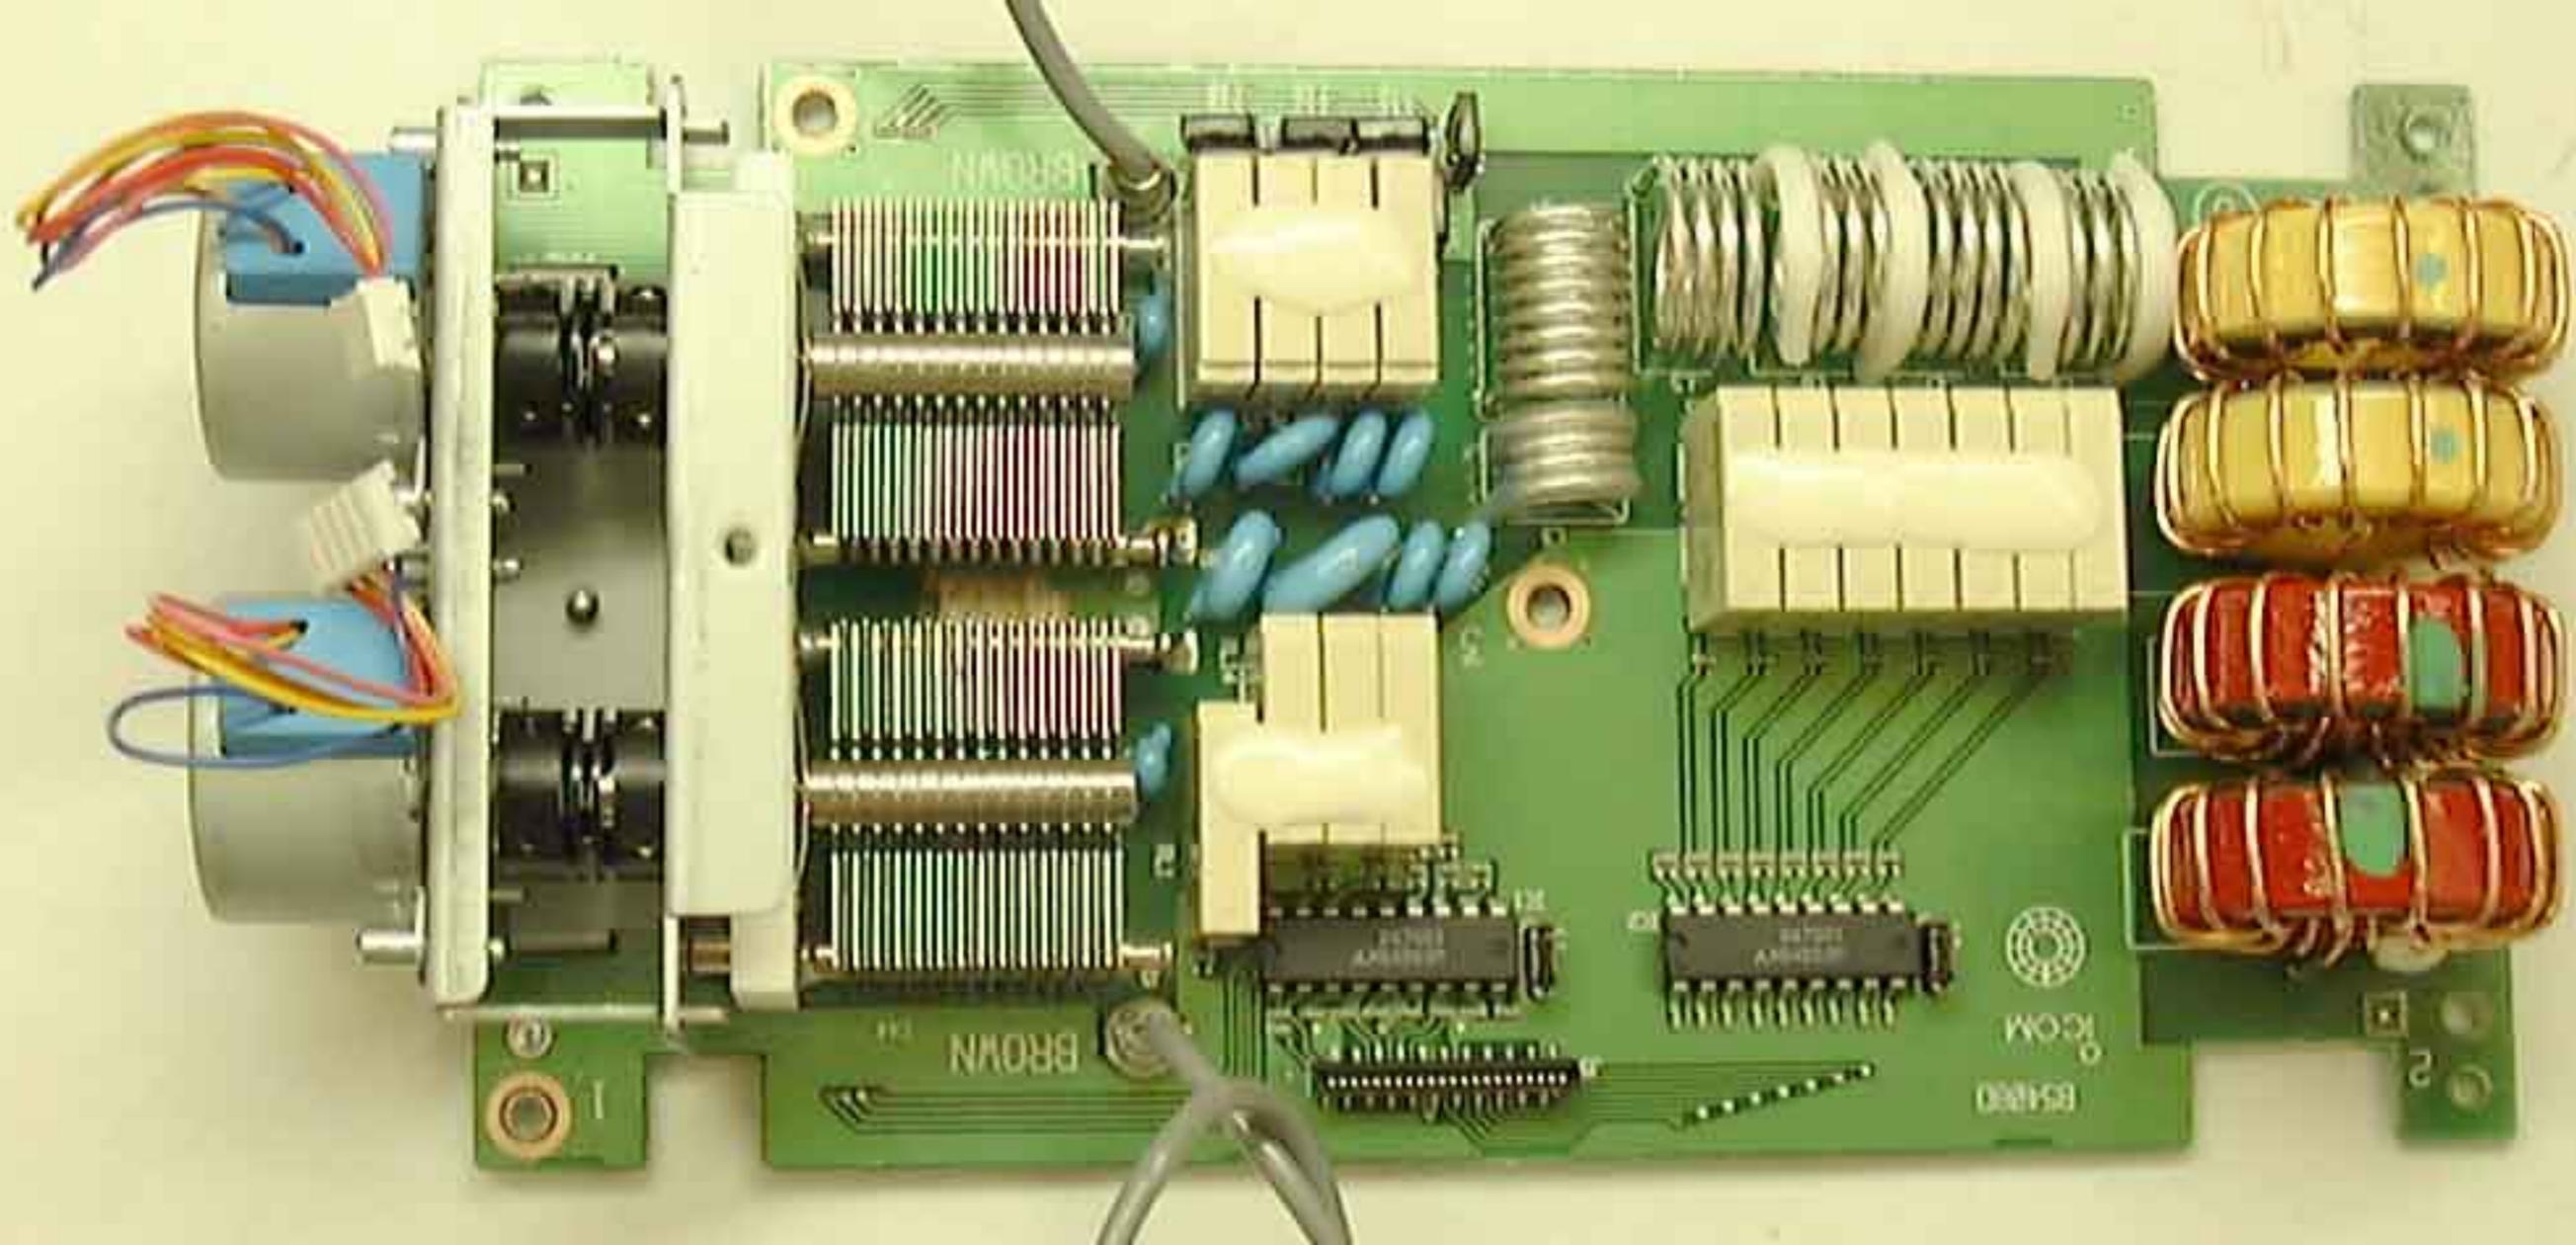

Downloaded by RadioAmateur.EU

