
 
 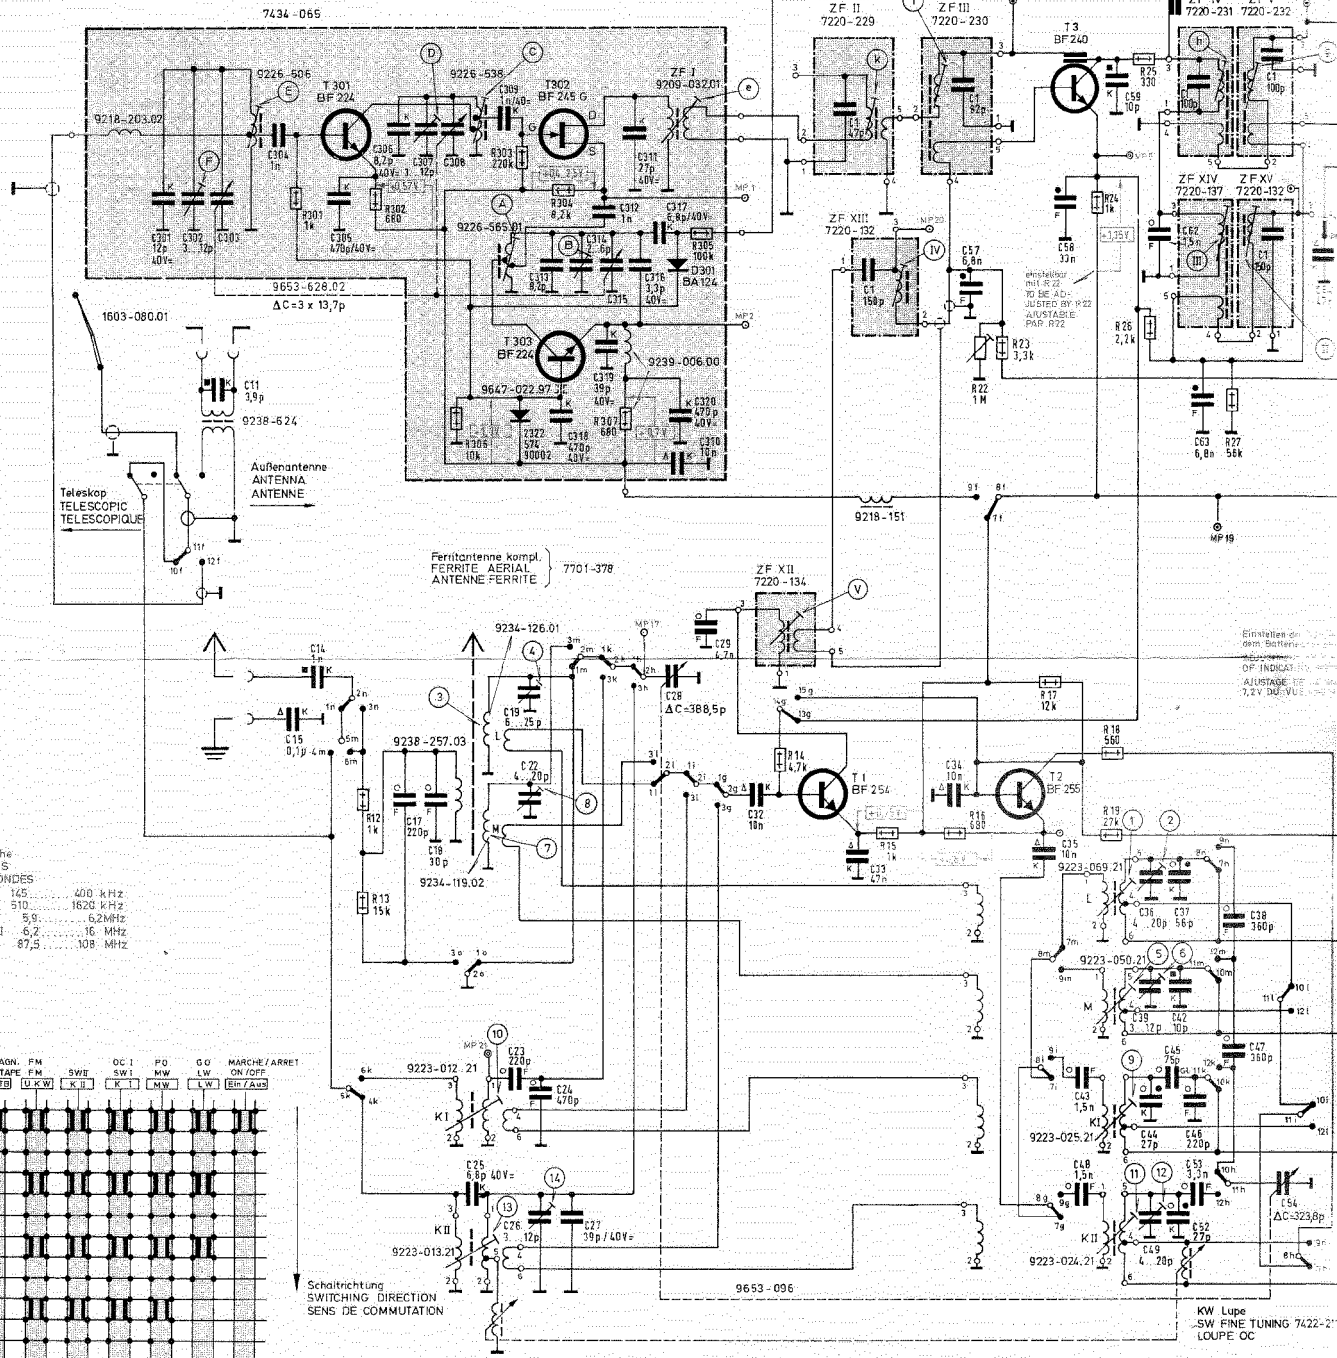


# Grundig Stereo Concert Boy transistor 4000


(1968)





Wellenbereiche  
WAVE BANDS  
GAMMES D'ONDES

LW-LW-CO 145.....400 kHz  
 MW-MW-FO 510.....1620 kHz  
 K1-SW1-OC1 5.9.....6.2 MHz  
 K1-SW2-OC2 6.2.....16 MHz  
 UKW-FM-FM 87,5.....108 MHz

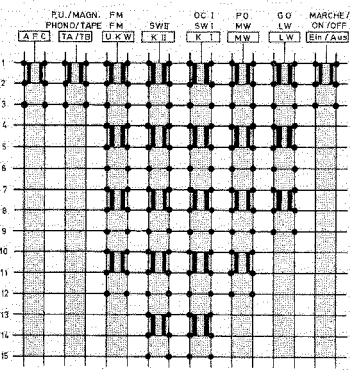

gezeichnete Stellung Gerät „Aus“  
SHOWS IN „OFF“ POSITION  
MONTRÉ EN POS. ARRÊT

UKW Mischteil  
FM-STAGE  
MELANGER - FM

7234-065

Decoderplatte  
DECODER BOARD  
PLATINE DE DÉCODEUR

7301-090

HF - ZF Platte  
RF - IF PRINTED BOARD

7307-020  
PLATINE HF-FI

HF Platte  
AF - BOARD  
PLATINE BF

7302-168

Spannungen mit Grundig Röhrenvoltmeter  
auf den Meßbereichen 10/5/1% bei 9V-  
Batteriespannung gemessen.  
Spannungs- und Stromwerte gültig bei  
eingedrehtem Drehknopf ohne Sound.

AM FM Stereo

C:	301,	302,	11,	303,	304,	15,16,	305,	17,	18,	25,	23,19,	22,	34,26,	27,311,	319,	310,	28,	29,	21,
R:	301,	12,	13,	302,	306,	303,	304,	307,	305,	14,	15,	16,	11,13,	17,	24,	18,16,	23,26,	27,	



