


## SPACER COMBINATIONS


### •Charging with the IC-F11 Series

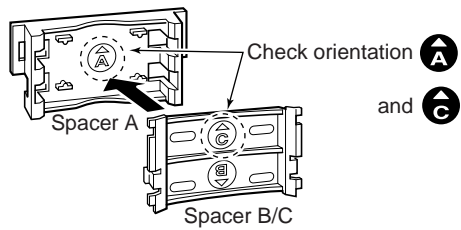

Attach the spacer (SpacerB/C) to the adapter (SpacerA) with the orientation as illustrated in the diagram above.

- Attach the spacer (Spacer B/C) to the adapter with the orientation of the stamp “**C**” pointing up.


### •Charging with the IC-F3G Series

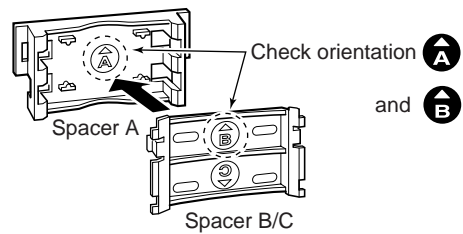

Attach the spacer (SpacerB/C) to the adapter (SpacerA) with the orientation as illustrated in the diagram above.

- Attach the spacer (SpacerB/C) to the adapter with the orientation of the stamp “**B**” pointing up.

### •Charging with the IC-F30G Series

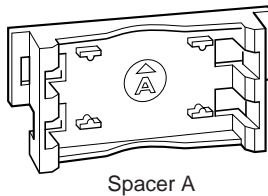


The adapter (Spacer A) only is required.

### **When removing the spacer (Spacer B/C)**

Remove the spacer (Spacer B/C) from the adapter.

Push the notch carefully.

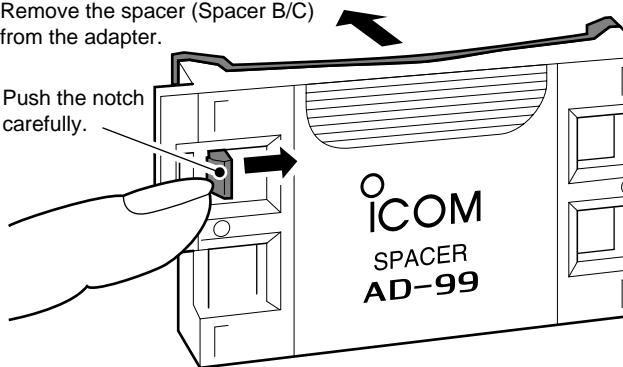

Push the notch carefully with your finger to remove the spacer (SpacerB/C) from the adapter (SpacerA).

#### **CAUTION!**

**DO NOT** push or force the notch with a screw driver, etc., to remove it.

**DO NOT** bend the notch when the adapter and spacer are not joined together. This will cause weakening of the notch plastic.

Both cases may break the notch and it may not be able to be reattached.