





## BASING DIAGRAMS

COMPONENT	HEATH PART NUMBER	MAY BE REPLACED WITH	BASE DIAGRAM (BOTTOM VIEW)
Q101, Q203, Q204, Q501	417-274	RCA 40673	DRAIN GATE 2 GATE 1 SOURCE
Q102	417-105	FAIRCHILD SE-5023	EMITTER BASE COLLECTOR SHIELD
Q201, Q202, Q502, Q503	417-171	FAIRCHILD 2N3694	EMITTER BASE COLLECTOR
Q301, Q302, Q303, Q504, Q505, Q506, Q507, Q508	417-118	G. E. OR T. I. 2N3393	BASE
Q 604 Q 606 Q 607	417-91	G. E. OR T. I. 2N5232A	COLLECTOR
Q601,Q602, Q605	417-85	G.E. E844	
Q 5 0 9	417-100	RCA 2N3053	EMITTER  BASE  COLLECTOR
Q 603	417-175	RCA OR T.I. 2N5294	DE EMITTER COLLECTOR BASE METAL SIDE
Q511 MOTORO	417-145	MOT. MJE-371	D+ COLLECTOR
Q512	LA MATCHED PAIR 417-144	MOT. MJE-512	METAL SIDE

COMPONENT	HEATH PART NUMBER	MAY BE REPLACED WITH	BASE DIAGRAM (BOTTOM VIEW)	
D101, D201 D202, D501 D502, D503 D504, D509 D512, D601 D701	56-56	1N4149	Downloaded by RadioManual.EU	
D505, D506 D507, D508	56-26-1	1N191	NOTE: HEATH PART NUMBERS ARE STAMPED ON MOST DIODES.	
D511	56-33	1N3754		
D602, D603, D604, D605	57-27	1 N 2071		
D 513	56-61	G.E. STB-620		
ZD601, ZD602, ZD301	56-67	V R - 10 A		
IC601	443-8	MOT. MC724P		