

# HR-2800


28 MHZ AM-FM  
AMATEUR RADIO HF TRANSCEIVER

Service Manual





**INTEK**®



# DC-DC Converter Diagram

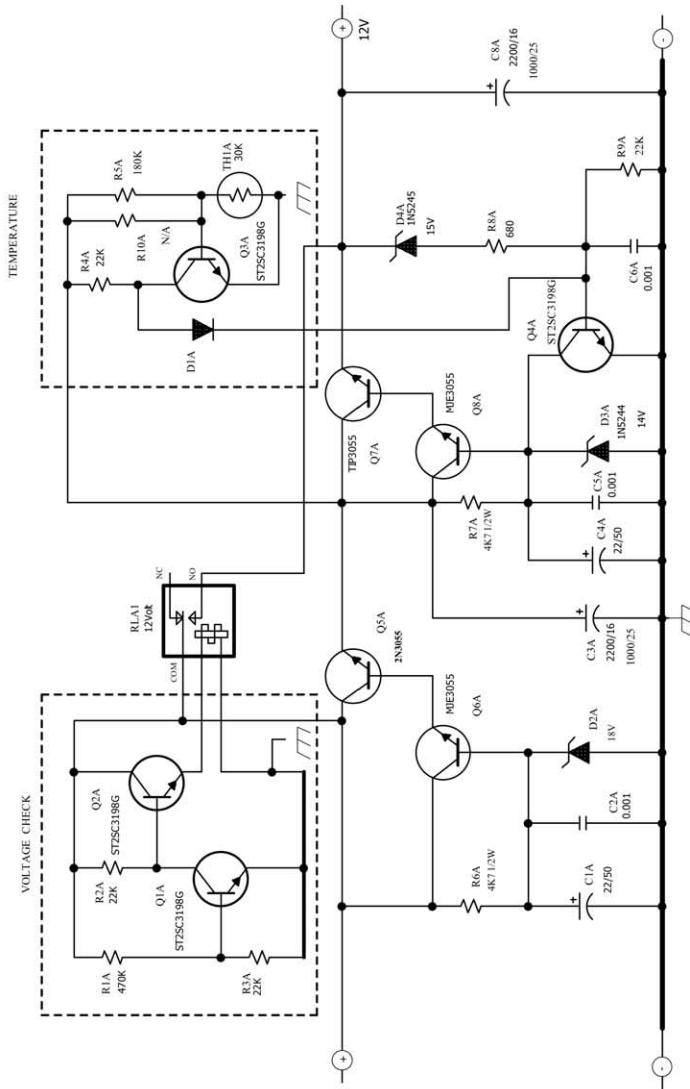



# ESP Comander Diagram - CTCSS Diagram

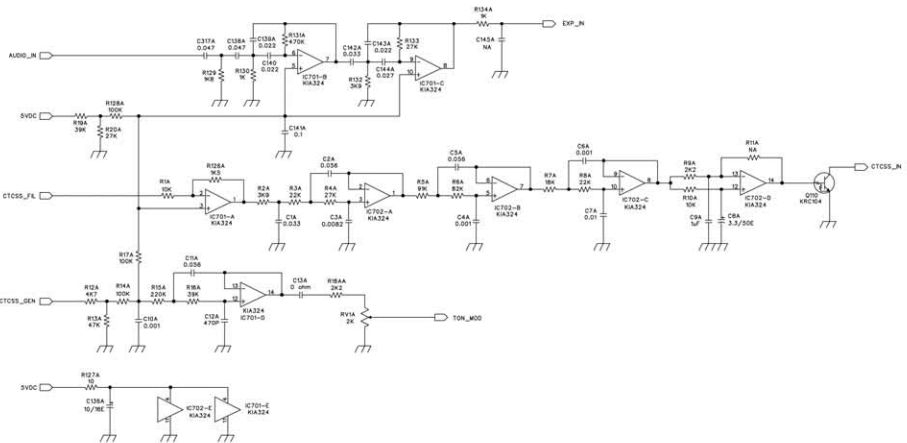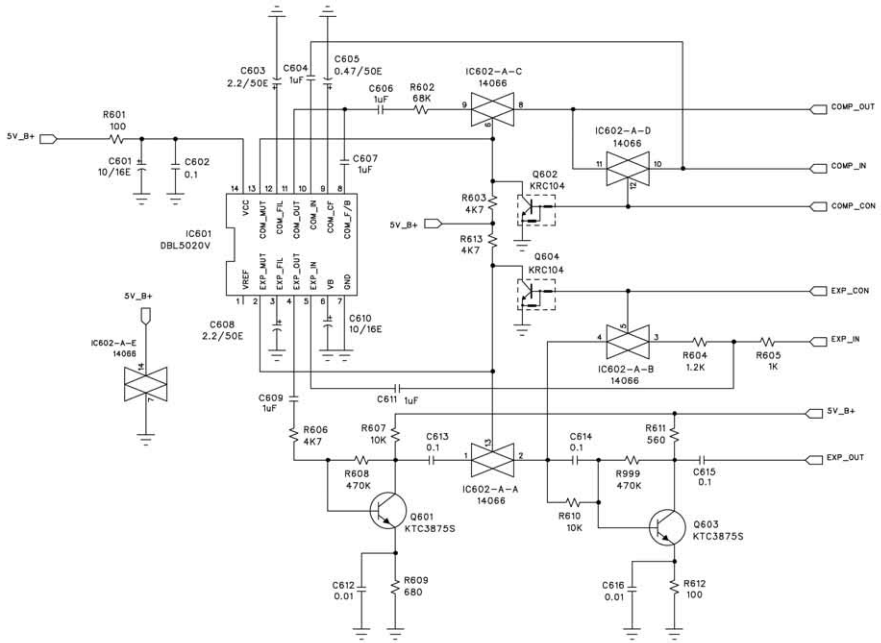

# PCB - Main Board & CPU Board

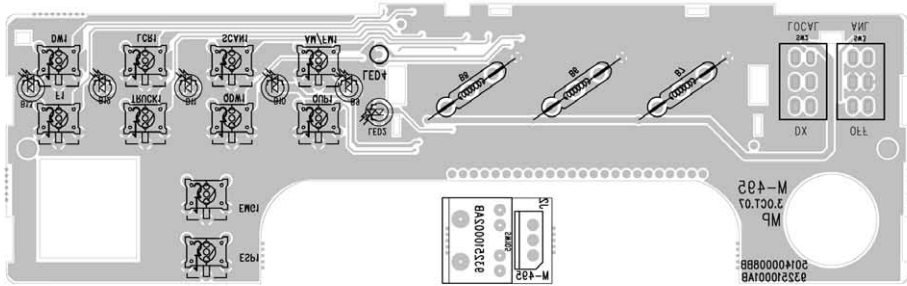
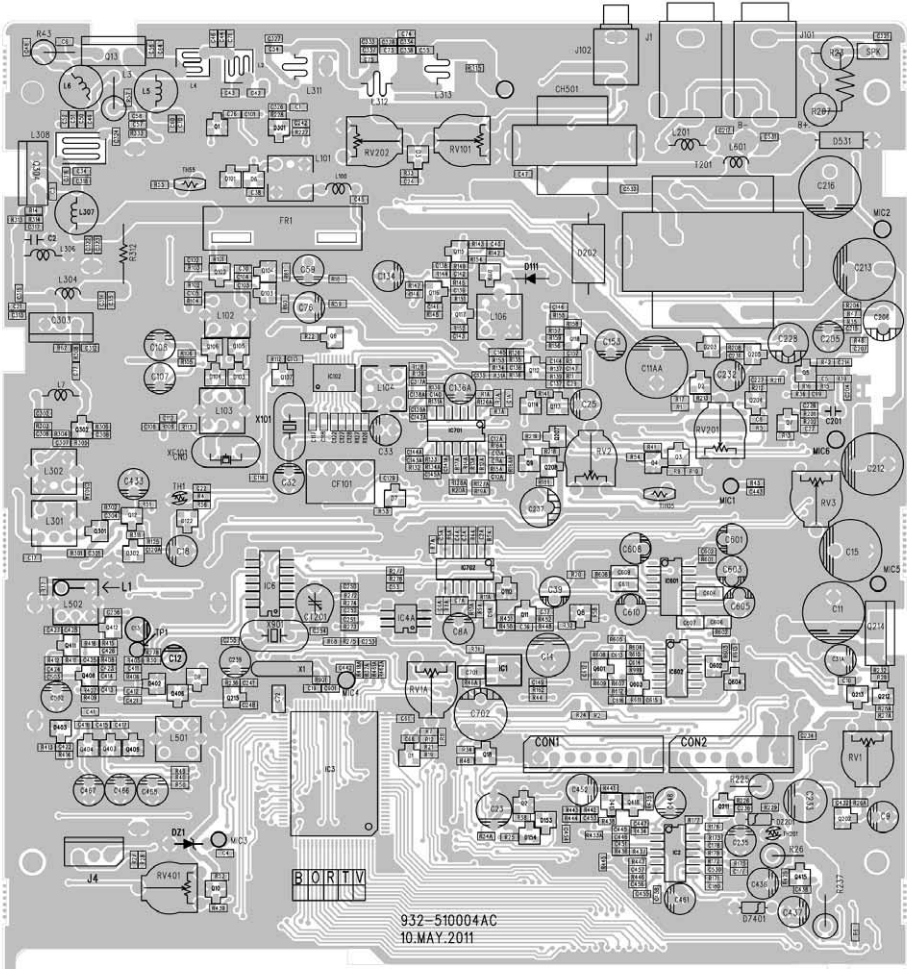


# PCB - Main Board & CPU Board

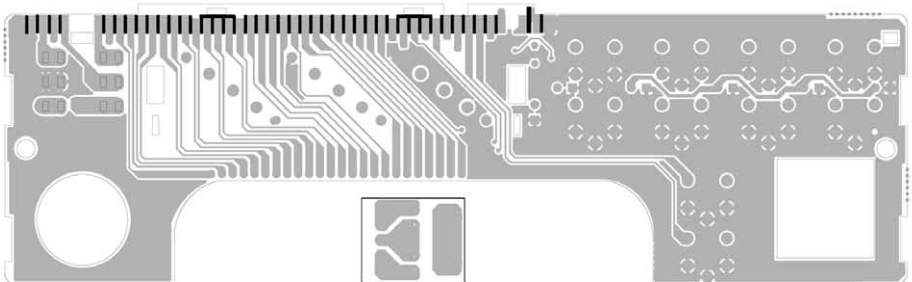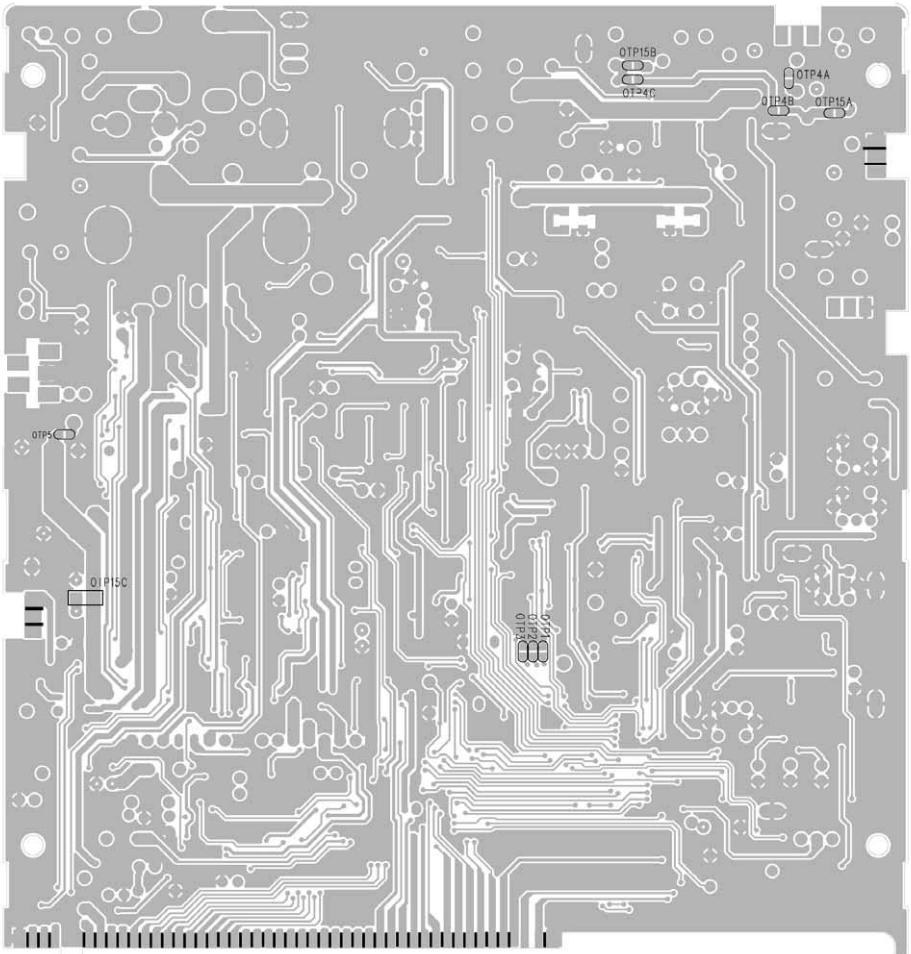




# Diagram

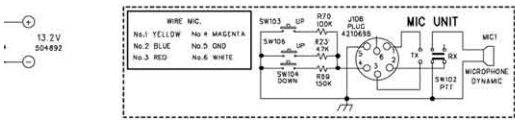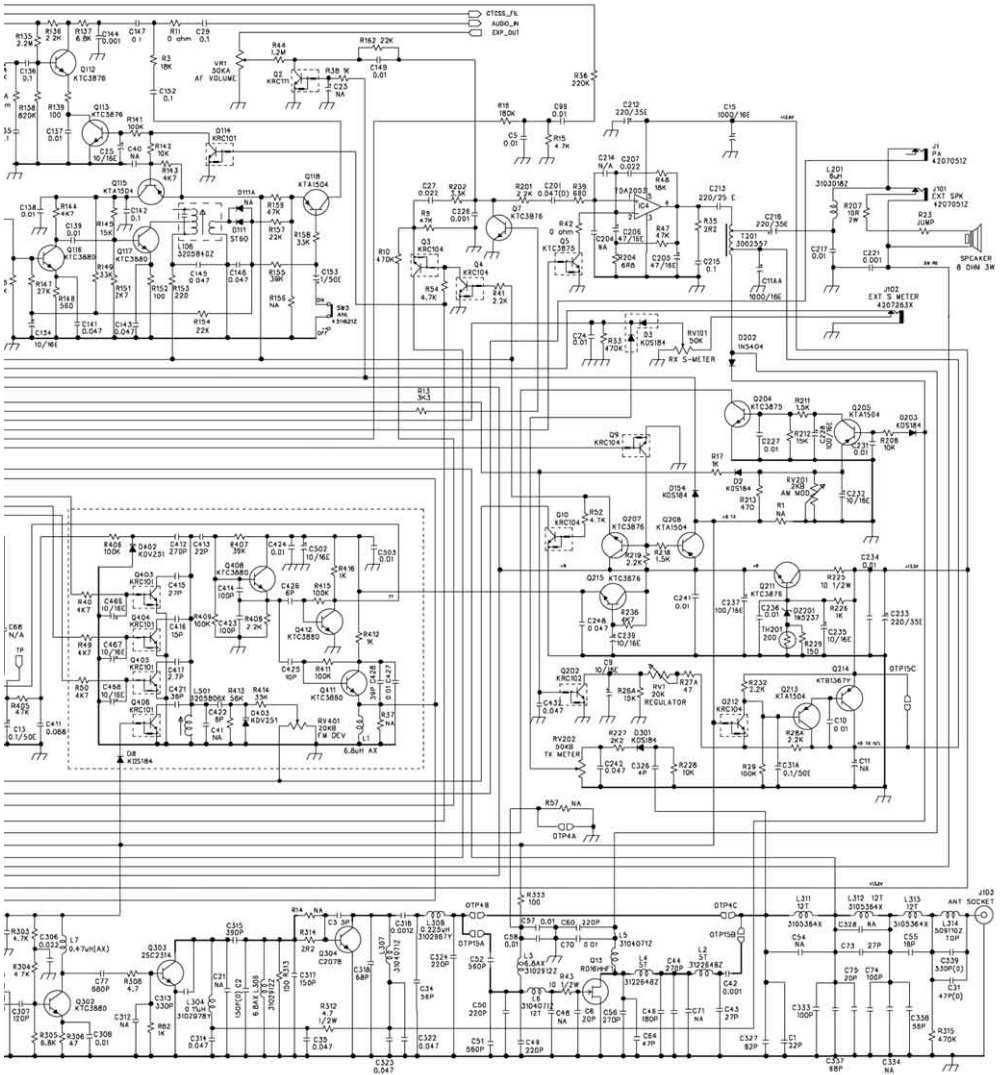


# Block Diagram

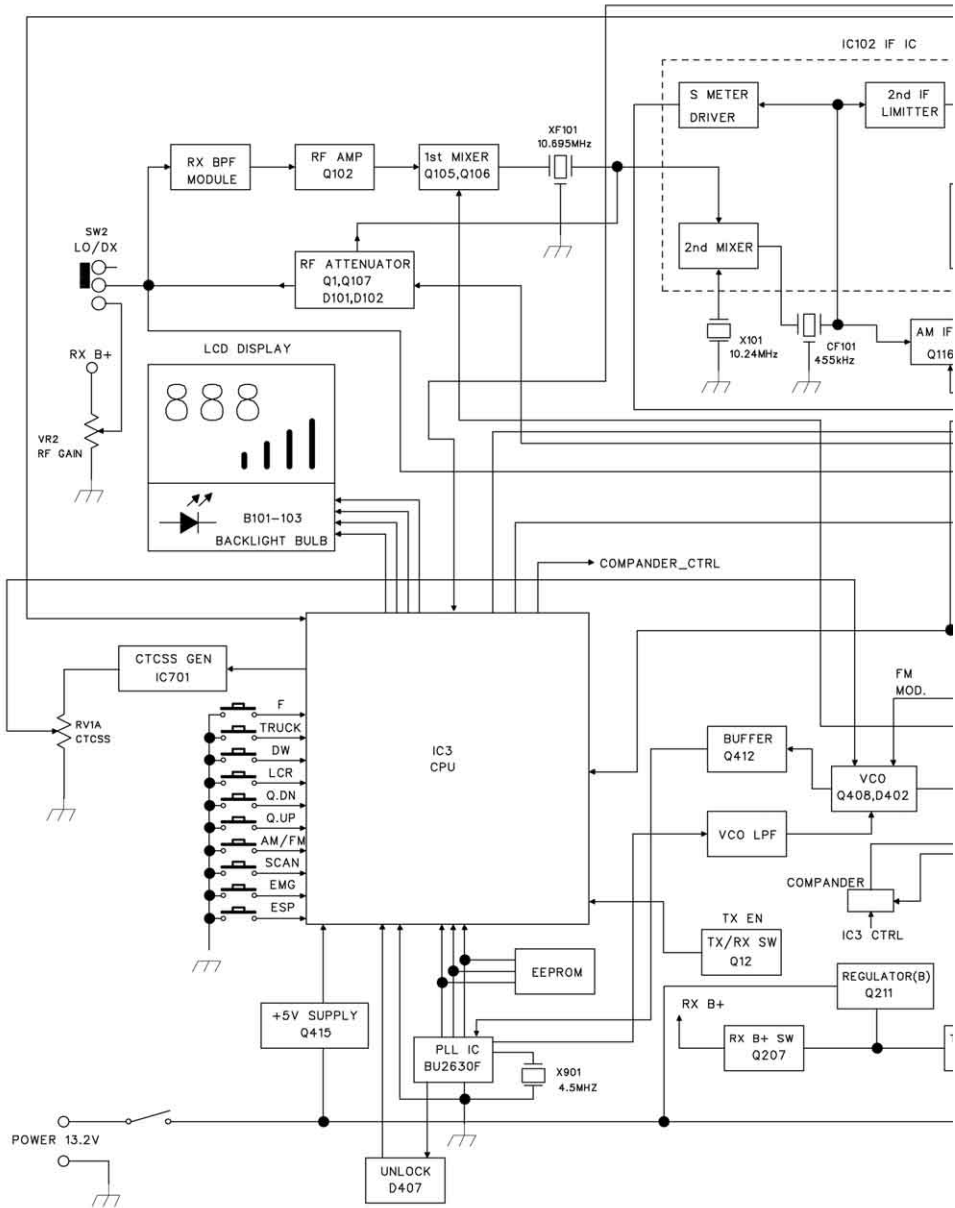



# Block Diagram

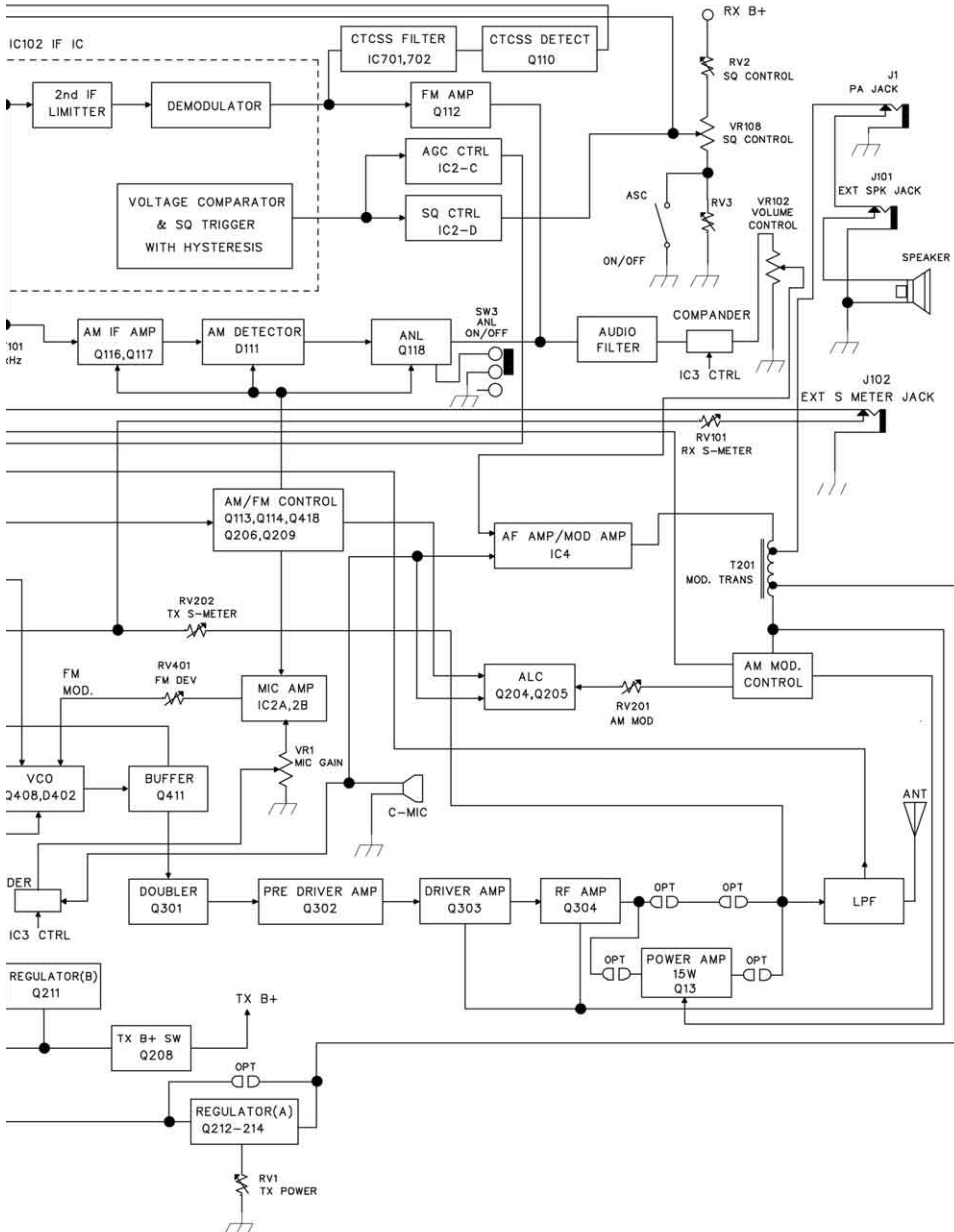

**INTEK<sup>®</sup>**