

## Baofeng UV-5R

To program repeater 146.985, minus offset, 100 Hz tone, low power level, into Channel#010

Turn on radio.

If in Memory Mode switch to VFO Mode (VFO/MR)

Select 5 KHz Step - (MENU + 1 + MENU) (Use the ▲ ▼ key for 5K) (MENU + EXIT)

|   |         |   |
|---|---------|---|
| Enter   | 146.985 | The receive frequency                       |
| Press [MENU] + 2 + [MENU]                       |         | Use the ▲ ▼ key to select Low Power         |
| Press [MENU] + [EXIT]                           |         | To accept and exit                          |
| Press [MENU] + 5 + [MENU]                       |         | Use the ▲ ▼ key to select Wide Bandwidth    |
| Press [MENU] + [EXIT]                           |         | To accept and exit                          |
| Press [MENU] + 1 + 3 + [MENU]                   |         | Use the ▲ ▼ key to select 100 Hz Tone       |
| Press [MENU] + [EXIT]                           |         | To accept and exit                          |
| Press [MENU] + 2 + 7 + [MENU]                   |         | Enter 010 or Use the ▲ ▼ key to select 010  |
| Press [MENU] + [EXIT]                           |         | This stores the Receive Frequency           |
|   |         | Radio prompts that REC FREQ has been stored |
| Enter   | 146.385 | The transmit frequency                      |
| Press [MENU] + 2 + 7 + [MENU] + [MENU] + [EXIT] |         | Radio prompts that TX FREQ has been stored  |

**Return to Memory Mode (VFO/MR)**