





Pebble HF Field Reference

7/21/2026

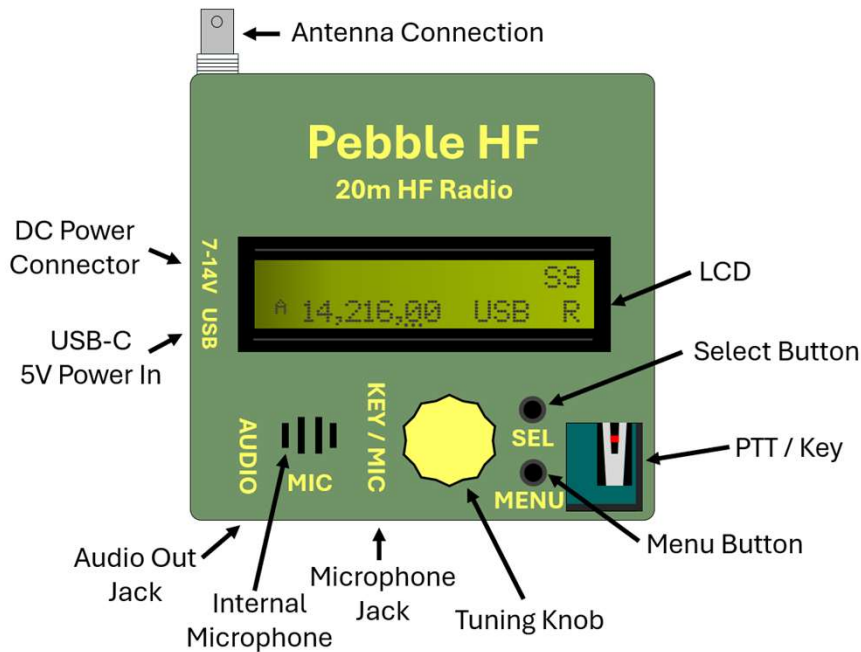

Pebble HF Transceiver Controls and Jacks

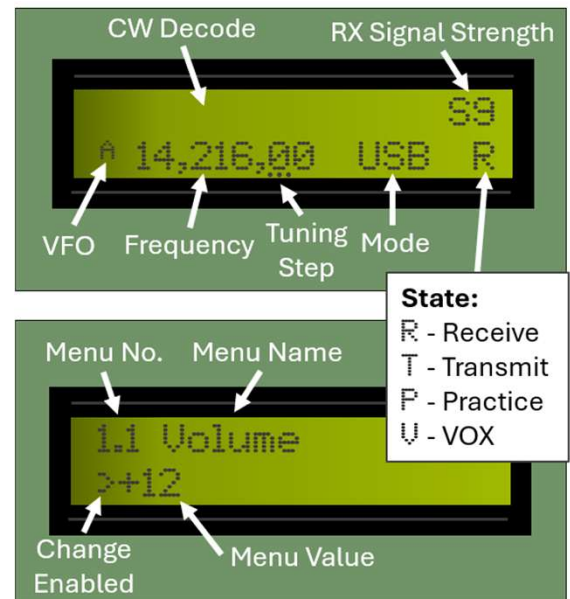

Pebble HF Transceiver Display
Operation (Top) / Menu (Bottom)

Pebble HF Operating Instructions

Power On/Off

- Connect power to turn On
- Press and Hold *Tuning Knob* and rotate to “-1” to turn transceiver Off

Volume

- Press and Hold *Tuning Knob* and rotate for volume level “-1” (power Off) to 16

Frequency

- Rotate *Tuning Knob* to change frequency
- Short Press *Tuning Knob* to change Tuning Step

Mode

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 1.2 Mode
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* to mode (use “CW” or “USB”)
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

VFO A/B

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 1.6 VFO Mode
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* to “A” or “B”
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

RIT On/Off

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 1.7 RIT
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* to “On” or “Off”
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

Filter Bandwidth

- Double Click *Select Button* to cycle through bandwidth settings: “FULL”, “3000”, “2400”, “1800” (SSB) or “500”, “200”, “100”, “50” (CW)

Pebble HF Operating Instructions

AGC On/Off

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 1.8 AGC
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* to “ON” (SSB) or “OFF” (CW)
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

Noise Reduction

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 1.9 NR
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* to adjust level “0” (OFF) to “8”
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

Attenuator (Analog, Front-End)

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 1.10 ATT
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* to level “0” (OFF) to “-73” dB
Typical values used are “0” or “-13”
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

Attenuator (Digital, Filter Stage)

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 1.11 ATT2
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* to level from “0” (OFF) to “16”
Normal setting is “0” or “1”
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

CW Decoder On/Off

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 2.1 CW Decoder
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* to “ON” or “OFF”
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

Sidetone Volume

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 2.3 CW Side Vol
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* from “-1” (mute) to “16”
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

Keyer Speed

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 2.5 Keyer Speed
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* from “1” to “60” WPM
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

Keyer Mode

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 2.6 Keyer Mode
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* to “Iambic A”, “Iambic B”, or “Straight”

Use “Straight” when external key is not plugged in.

- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

TX Drive (Transmit Audio / Power Level)

- Short Press *Menu Button*, rotate *Tuning Knob* to Menu 3.3 TX Drive
- Short Press *Menu Button* to enable change, rotate *Tuning Knob* from “0” to “8”
Typical settings are “4” for SSB and “8” for CW/Digital
- Short Press *Select Button* to save change (short press *Select Button* again to exit menu)

See the Operator Manual for more Information and Menu Options