
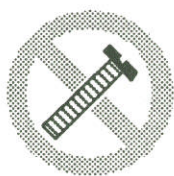


KENWOOD TS-450S

EXPANDED RF M/C

1. Disconnect the Power and antenna.
2. Remove the top and bottom covers from the radio. (14 Screws)
3. Remove the top screws (countersunk) from each side of the front panel.
4. Loosen the bottom screws (countersunk) from each side of the front panel.
5. Carefully pull the top front of the front panel forward to expose the Digital board.
6. Remove the seven screws from the digital board.
7. Disconnect the 5 cables from the digital board.
8. Rotate the board towards the front panel to gain access to the back side of the board.
9. Locate and remove diode D27. Do not pry up the diode. The traces will rip apart.
10. Reassemble the radio.

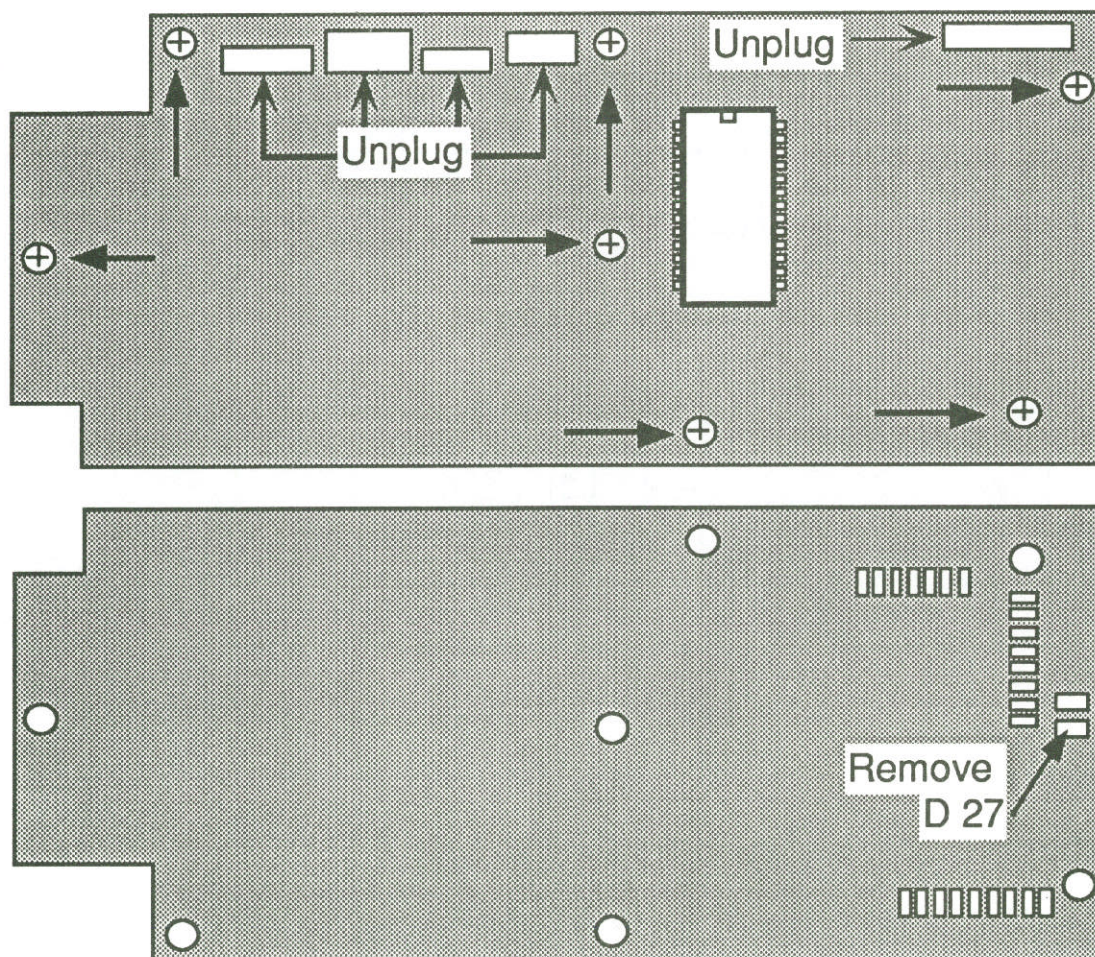

Caution

These modifications have not been tested. The Author, Publisher and all other parties takes NO responsibility or liability for any damage or violation resulting from these modifications. Performing any modification may be a Violation of FCC Rules and will void the warranty of the radio. Use of any modified radio may be a violation of FCC rules. If you have any doubts, DO NOT PERFORM THIS MODIFICATION.

© 1991 artsci inc. all rights reserved. (818) 843-4080 Fax: (818) 846-2298