



HF RADIO COMMUNICATIONS

NGT Transceiver



Getting Started Guide

No part of this guide may be reproduced, transcribed, translated into any language or transmitted in any form whatsoever without the prior written consent of Codan Limited.

© Copyright 2003, 2004, 2005, 2008, 2010 Codan Limited.

Codan part number 15-04127-EN Issue 8, April 2010.

CODAN™, NGT™, *Easitalk*™, CIB™ and CALM™ are trademarks of Codan Limited. Other brand, product, and company names mentioned in this document are trademarks or registered trademarks of their respective holders.

The English version takes precedence over any translated versions.

Introduction

Overview of this guide	1
Accessing the CD	2

1 The handset

Hot keys	6
The channel screen	8

2 Getting started

Switching on the transceiver	10
Switching off the transceiver	10
Setting up basics	11
Selecting a channel	12
Making a basic voice call	13
Making a selective call	14
Scanning channels	17
Switching scanning on or off	17
Pausing scanning	18

3 CES-128 voice encryptor option

Using the CES-128 voice encryptor	20
Switching off the CES-128 voice encryptor	21
Creating a secure key in a Corporate secure index	22
Using a PIN for private communications within an organisation	25
Switching between Global and Corporate secure modes	26
Switching between Corporate secure indexes	27
Erasing all of the secure keys	29
Using the CES-128 voice encryptor in standby mode	30

4 AES-256 digital encryptor option

Using the AES-256 digital encryptor	34
Switching off the AES-256 digital encryptor	35
Using digital mute	36
Changing the data rate	36
Creating a secure key in a secure index	37
Switching between secure indexes	40
Erasing all of the secure keys	42

5 Installation

Mobile stations for NGT <i>AR</i> , <i>SR</i> , <i>AR Voice</i> , and <i>VR</i> Transceivers	44
Cables	47
Mounting a mobile NGT station	48
Connecting a mobile NGT station	50
Fixed stations for NGT <i>AR</i> , <i>SR</i> , <i>AR Voice</i> , and <i>VR</i> Transceivers	53
Cables	56
Mounting a fixed NGT station	56
Connecting a fixed NGT station	58

Appendix A—Entering and editing text

Editing a screen	61
Entering text	62
Changing between alpha and numeric characters	63
Moving the cursor	63
Inserting text	64
Deleting text	64
Saving text changes	64

Appendix B—Using Quick Start

Opening and closing Quick Start	65
Adding/Editing a channel	66
Setting up a scan list	67
Setting the time and date	68

Setting your station self address	69
Adding/Editing an entry in the Address List or Call Book.	70
Deleting an entry	71

Appendix C—Using a GPS receiver

Appendix D—HF radio transmission

Overview	75
Frequency, distance and time of day	77
Channels and modes	78
Networks and scanning.	79
Etiquette for the use of HF radio	80

Appendix E—Definitions

Standards and icons	83
Acronyms and abbreviations	84
Glossary	86
Units	90
Unit multipliers.	91
About this issue.	92

Appendix F—Compliance

Introduction.	94
European R&TTE Directive	95
EMC and safety notices	97
FCC compliance	100
C-tick approval	101
Register of hazardous substances	102

Index

This page has been left blank intentionally.

List of figures



Figure 1:	The handset.	3
Figure 2:	The channel screen in the Channel List	8
Figure 3:	Typical mobile NGT <i>AR</i> or <i>SR</i> station	45
Figure 4:	Typical mobile NGT <i>AR Voice</i> or <i>VR</i> station	46
Figure 5:	Typical fixed NGT <i>AR</i> or <i>SR</i> station	54
Figure 6:	Typical fixed NGT <i>AR Voice</i> or <i>VR</i> station	55
Figure 7:	The reflective properties of the ionosphere	76

This page has been left blank intentionally.

List of tables



Table 1:	Standard hot keys	6
Table 2:	Cables for a typical mobile NGT station	47
Table 3:	Cables for a typical fixed NGT station.	56
Table 4:	Examples of channels and modes.	78
Table 5:	The phonetic alphabet.	81
Table 6:	Earth symbols	99
Table 7:	有毒有害物质列表 (Register of hazardous substances)	102

This page has been left blank intentionally.

Thank you for purchasing a Codan NGT *AR*, *SR*, *AR Voice*, or *VR* Transceiver. With this great product and Codan's supreme after-sales support, you can look forward to many years of clear and reliable HF communication. Please read this guide thoroughly and retain it for future reference. There is an index at the end of this guide to assist you in finding information.

Overview of this guide

This guide provides instructions on how to connect up your NGT *AR*, *SR*, *AR Voice*, or *VR* Transceiver, and how to perform basic setup and operating tasks. It assumes that you have limited knowledge of HF communication and of using an HF transceiver.

Extensive reference material is provided on the CD at the back of this guide.

This guide contains the following sections:

- Section 1** **The handset**—describes the handset and the function of items on the handset
- Section 2** **Getting started**—explains how to use the basic operating features of your transceiver
- Section 3** **CES-128 voice encryptor option**—describes how to use the optional CES-128 voice encryptor feature
- Section 4** **AES-256 digital encryptor option**—describes how to use the optional AES-256 digital encryptor feature
- Section 5** **Installation**—explains briefly how to connect the components of your transceiver
- Appendix A** **Entering and editing text**—explains how to enter and edit text in editable screens
- Appendix B** **Using Quick Start**—explains how to use the Quick Start feature, if enabled

- [Appendix C Using a GPS receiver](#)—explains the information provided by the GPS receiver, if fitted
- [Appendix D HF radio transmission](#)—describes the medium of HF communication and how to use it effectively
- [Appendix E Definitions](#)—explains the terms and abbreviations used in this guide
- [Appendix F Compliance](#)—provides compliance information and safety notices for your transceiver

Accessing the CD


To access the CD:

- Place the CD in the CD drive of your computer.

You can view and search the Reference Manual and Getting Started Guide using the Adobe® Reader® supplied on the CD.

1 The handset

Figure 1: The handset

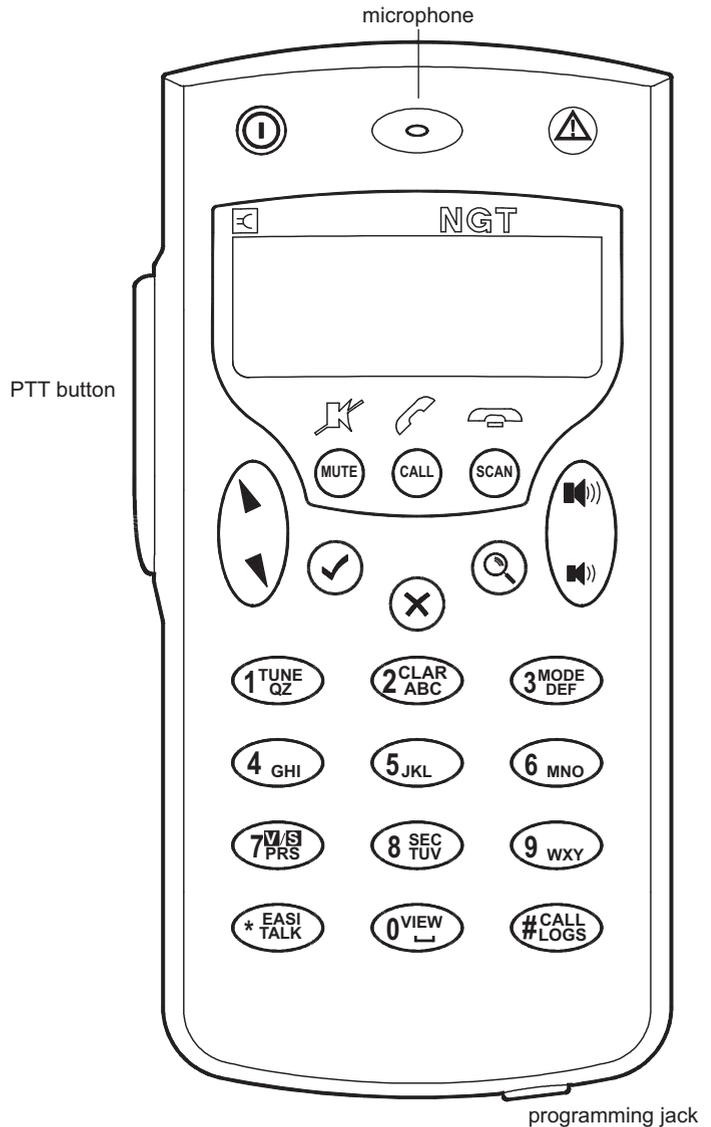

The handset comprises:

- an LCD
- navigation keys (▲, ▼, ✓, ✕, 🔍)
- volume controls (🔊, 🔇)
- **MUTE**, **CALL** and **SCAN** hot keys
- alphanumeric keys (0–9, *, #)
- emergency key (🚨)
- power key (🔋)
- microphone
- PTT button
- programming jack

There are two ways to use the keys on the handset. You can:

- press a key, briefly
- *hold* a key for 2 seconds

The Tick and Cross keys

Press ✓ to:

- select the item on the active line in the list
- save changes
- answer ‘yes’ to prompts

Hold ✓ to edit settings.

Press ✕ to:

- navigate up from settings to entries
- backspace over text
- remove messages on the screen
- cancel changes
- answer ‘no’ to prompts

Hold **X** to go from any location to the home screen. If you have entered text into a setting and want to discard the changes you made, *hold X*.

The scroll keys

The **▲** and **▼** keys are the scroll keys. Use these keys to scroll up or down through any list, to scroll left or right over text, and to increase or decrease a value.

Hot keys

Hot keys enable you to perform a task quickly. The transceiver comes with some standard hot keys programmed; the keys are labelled with the corresponding task performed. You can also create your own hot keys (see the reference material on the enclosed CD).

Table 1: Standard hot keys

Hot key	Function
MUTE	Pressing MUTE toggles mute on or off.
CALL	Pressing CALL starts a call.
SCAN	Pressing SCAN switches off scanning, or if you were in a call, ends the call and switches scanning on.
TUNE	Pressing TUNE displays the PTT to tune screen so you can manually tune the antenna.
CLAR	Pressing CLAR enables you to adjust the receive frequency to compensate for any frequency offset between your transceiver and the remote transceiver.
MODE	Pressing MODE selects the next allowable mode programmed for the channel, usually USB or LSB.
V/S	Pressing V/S toggles the mute type between Voice mute and Selcall mute. NOTE If an AES-256 digital encryptor is fitted to the transceiver and switched on, digital voice only mute (D) may also be selected.
SEC	Pressing or <i>holding</i> SEC enters Secure mode, if the hardware option is fitted, and specific firmware is programmed into the transceiver and enabled. For more information see page 19, CES-128 voice encryptor option and page 33, AES-256 digital encryptor option .
9	Pressing 9 displays your current GPS position, if the hardware option is fitted and enabled.


Table 1: Standard hot keys (cont.)

Hot key	Function
EASITALK	Pressing EASITALK toggles the DSP noise reduction algorithm on or off.
VIEW	Pressing VIEW toggles between the channel screen and the Address List.
CALL LOGS	Pressing CALL LOGS repeatedly steps through a number of call logs: Calls Out, Calls In, then back to the screen from which you began. In these logs, you can view the details of the calls.
 (Emergency)	<i> Holding  begins an automatic Emergency call transmission using call information contained in the Emergency entries in the Address List.</i>
 + 9	Pressing  + 9 enables you to change the default setting for the screen contrast.
 + 0	Pressing  + 0 enables you to change the default setting for the screen and keypad backlighting.

The channel screen

The channel screen is displayed when you press **X** or **VIEW**.

Figure 2: The channel screen in the Channel List

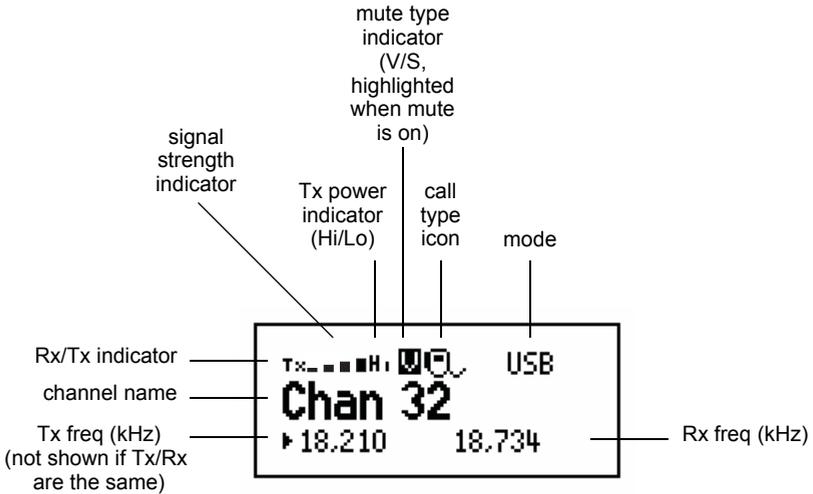

When the transceiver is scanning, the call type icon is replaced by the scanning icon  and the channel information is replaced by **Scanning**.

2 Getting started



This section contains the following topics:

[Switching on the transceiver \(10\)](#)

[Setting up basics \(11\)](#)

[Selecting a channel \(12\)](#)

[Making a basic voice call \(13\)](#)

[Making a selective call \(14\)](#)

[Scanning channels \(17\)](#)

You should not transmit from your transceiver or tune the antenna unless people are beyond the safe working distance of:

WARNING

- 1.5 m (5 ft) of any part of a mobile antenna
- 2 m (7 ft) of any part of a fixed antenna in a data installation of up to 125 W output
- 5 m (17 ft) of any part of a fixed antenna in a data installation of up to 1 kW output

Switching on the transceiver

To switch on the transceiver:

- Press **ⓘ**.

If you are prompted to enter a password, enter your user or administrator password, then press **✓**.

If you enter an incorrect password it is automatically erased. If you enter an incorrect password three times, the transceiver automatically switches off.

When the transceiver is switched on, it runs a self-test that checks the memory, hardware, LCD and keys.

Switching off the transceiver

To switch off the transceiver:

- *Hold* **ⓘ**.

The transceiver is switched off.

Setting up basics

NOTE

Basic information for the transceiver, such as channels, self addresses, time and date, and enabling channels for scanning, should be set up by your system administrator using the NGT System Programmer software. If Quick Start is enabled you can enter some of this information (see [page 65, *Using Quick Start*](#)).

Selecting a channel

To select a channel:

- Press **VIEW** until the channel screen is displayed.
If scanning is on, press **SCAN** to switch it off.
- Scroll through the channels in the list. Stop scrolling when the channel you want is displayed.

The channel is selected.

- If you want to change the sideband or IF filter settings, press **MODE**.

If the mode does not change, there is only one mode for the channel.

NOTE If you have an automatic antenna fitted, press PTT to tune the antenna to the currently selected channel.

Making a basic voice call

To make a basic voice call:

- Select the channel that you want to use (see [page 12, *Selecting a channel*](#)).
- Hold down* PTT then speak, releasing PTT when you have finished speaking.

Muting the transceiver

If you do not want to listen to on-air noise, you can mute the transceiver so that you only hear voice traffic on the channel.

To switch mute on or off:

- Press **MUTE**.

When the channel screen is displayed, the mute status is indicated by a V (Voice) or S (Selcall) at the top centre of the screen.

NOTE If an AES-256 digital encryptor is fitted to the transceiver, Digital Voice Only mute (D) may also be selected.

If the letter is highlighted, mute is on.

If the letter is not highlighted, mute is off.

- Press **V/S** until V is displayed on the channel screen.

The transceiver remains muted until it detects voice traffic on the channel.

Making a selective call

NOTE The call types available depend upon the options installed in your transceiver.

To make a selective call:

- Press **CALL**.
- Enter the address of the station you want to call, scroll to the type of call you want to make, then press **CALL**.

Call type	Icon	Used for...
Channel Test		Testing the audible quality of a channel in a Codan Selcall or Open Selcall network.
Emergency		Sending an emergency alert tone with a call.
Get Position		Requesting the location of a remote transceiver with a GPS receiver connected and enabled, or with a GPS position entered in the My GPS entry in the Address List of the remote transceiver.
Get Status		Requesting diagnostic or configuration information from a remote transceiver.
Message		Sending a message to a remote transceiver.
Phone		Sending a call to a radio/telephone interconnect unit, which connects the call to the public telephone network.
RFDS Emgcy		Sending an emergency call to an RFDS base station (Australia only).

Call type	Icon	Used for...
Selective		Sending a selective call to a remote transceiver.
Send Position		Sending your GPS position to a remote transceiver. A GPS receiver must be connected to and enabled in your transceiver, or a GPS position must be entered in the My GPS entry in the Address List.

- If you are prompted for details about the call, use the information in the following table to enter them, then press **CALL**.

If this prompt is displayed...	Do this...
Select network	<ul style="list-style-type: none"> select the network in which you want to make the call
My address?	<ul style="list-style-type: none"> select or enter the self address from which you want to send the call
Select chan/mode	<p>In an ALE/CALM network:</p> <ul style="list-style-type: none"> select <auto> if you want the transceiver to select the best channel/mode for the call, starting with the channel on which the most recent successful link was established, or select the channel/mode you want to use to make the call <p>In a Codan Selcall network:</p> <ul style="list-style-type: none"> select the channel/mode you want to use to make the call and check that it is clear of voice and data traffic

NOTE

To abort the call before a connection to the other station is made, press PTT.

- ❑ If you made the call in:
 - an ALE/CALM network, wait until a message informs you that the call has been successful (this means your call has been automatically answered by the other station)
 - a Codan Selcall network, wait until a message informs you that the call has been sent and listen for audible beeps transmitted from the other station
- ❑ *Hold down* PTT then speak.
Release PTT when you have finished speaking.
- ❑ To end the call, press **SCAN**.
The transceiver resumes scanning.

Scanning channels

Before you can switch scanning on, you need to allocate some channels to be scanned. If Quick Start is available, you can create a scan list from channels programmed into the transceiver (see [page 65, *Using Quick Start*](#)). If this feature is not available, your system administrator must allocate some channels to a network, then enable scanning of this network.

Switching scanning on or off

To switch scanning on or off:

- Press **SCAN**.

Scanning is toggled on or off.

NOTE **SCAN** is also used to end a call then resume scanning.

When scanning is switched on, mute is also switched on.

If you press PTT while the transceiver is scanning, the scan is paused.

Pausing scanning

To pause scanning:

- Do one of the following:
 - To pause scanning on the current channel/mode, press ✓.
 - To pause scanning and scroll to another channel/mode, press ▲ or ▼.

The channel/modes through which you can scroll are those in the networks that were being scanned. They are not listed alphabetically but in the order in which they were being scanned.

If you do not press a key within 30 seconds, the transceiver automatically resumes scanning.

- While scanning is paused, do one or more of the following:
 - To speak on air, *hold down* PTT.
 - To resume scanning immediately, press ✓.

3 CES-128 voice encryptor option



This section contains the following topics:

[Using the CES-128 voice encryptor \(20\)](#)

[Switching off the CES-128 voice encryptor \(21\)](#)

[Creating a secure key in a Corporate secure index \(22\)](#)

[Using a PIN for private communications within an organisation \(25\)](#)

[Switching between Global and Corporate secure modes \(26\)](#)

[Switching between Corporate secure indexes \(27\)](#)

[Erasing all of the secure keys \(29\)](#)

[Using the CES-128 voice encryptor in standby mode \(30\)](#)

NOTE The CES-128 voice encryptor is an optional feature.

Using the CES-128 voice encryptor


To use the CES-128 voice encryptor:

- Start a call (see [page 14, Making a selective call](#)).
- Press **SEC**.

The transceiver responds with two high short beeps, and displays **Go Secure** with the secure mode and Corporate secure index used. For example:



If you are in the Channel List, the active CES-128 voice encryptor is indicated by the text **Secure <index>** highlighted at the bottom left of the channel screen. For example:

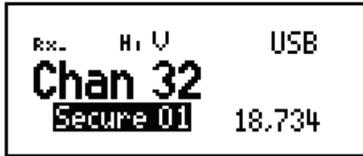


Switching off the CES-128 voice encryptor

To switch off the CES-128 voice encryptor:

- Press SEC.

The transceiver responds with two low short beeps and displays **Go Clear**. For example:

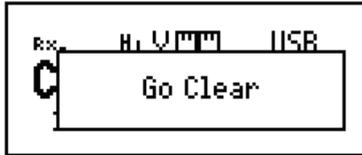


Creating a secure key in a Corporate secure index


NOTE You may create a secure key if your system administrator has enabled this feature in your transceiver.

To create a secure key for Corporate secure index 01:


- Hold* **SEC**.

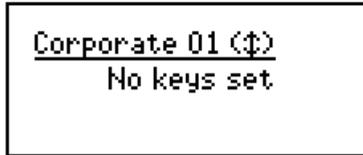

- Scroll to **Edit Key 01**, then press **✓**.

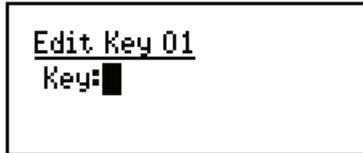


- Enter the secure key for Corporate secure index 01.

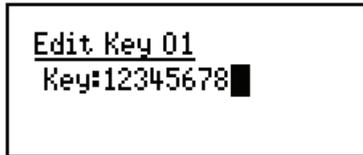

- Press **✓**.

The transceiver goes secure using the key that you entered.

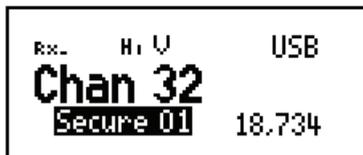

To create a secure key for the next Corporate secure index:

- Hold **SEC**, then scroll to **Edit Key**.

```

Edit Key (F)
  Edit (1-2)
    Press ✓
  
```

- Press ✓.

```

Edit Key (F)
  Index:01
    01 (1-2)
  
```

- Scroll to **Index:02 (New)**.

The transceiver automatically assigns the next Corporate secure index number.

```

Edit Key (F)
  Index:02 (New)
    01 (1-2)
  
```

- Press ✓.

```

Edit Key 02
  Key:█
  
```


- Enter the secure key for the Corporate secure index shown.

```

Edit Key 02
  y:1234567890123456█
  
```

- Press ✓.

The transceiver goes secure using the key that you entered.

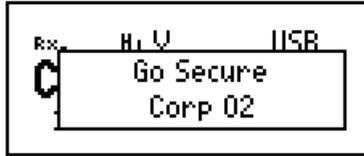

Using a PIN for private communications within an organisation

To use the CES-128 voice encryptor with a PIN:


- Start a call (see [page 14, Making a selective call](#)).
- Hold **SEC** to enter a PIN for the session.



- Enter the 4-digit PIN that you have agreed to use with others for this session, then press **✓**.

CAUTION The PIN must be a number that both parties know and agree upon without mentioning it over the air.

The transceiver responds with two high short beeps, and displays **Go Secure** with the secure mode and Corporate secure index used, and **PIN** to indicate that a PIN is in use. For example:

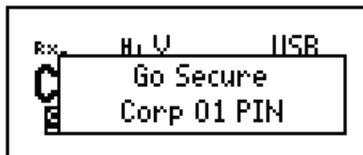

If you are in the Channel List, the active CES-128 voice encryptor is indicated by the text **Secure <index>P** highlighted at the bottom left of the channel screen. For example:



Switching between Global and Corporate secure modes

NOTE You may switch between Global and Corporate secure modes if your system administrator has enabled this feature in your transceiver.

Whenever you switch on the voice encryptor it enters the mode that is set in the Secure Mode entry in the Control List.

To switch between the Global and Corporate secure modes while using the CES-128 voice encryptor:

- Hold **SEC**.



- Use **↵** or **↩** to toggle between **Global** or **Corporate <nn>**.
- If you want to use a PIN, enter the 4-digit PIN that you have agreed to use with others for this session.
- Press **✓**.

NOTE The default secure mode is not changed. Next time you switch on the CES-128 voice encryptor, the default mode is entered.

Switching between Corporate secure indexes

- NOTE** You may switch between Corporate secure indexes if your system administrator has enabled this feature in your transceiver.

To switch between Corporate secure indexes while using the voice encryptor:

- Hold **SEC**, then scroll to **Select Key**.

```

Select Key (Ⓢ)
  01 (1-2)
          Press ✓
  
```

- Press **✓**.

```

Select Key (Ⓢ)
Index: 01      01 (1-2)
  
```

- NOTE** The currently selected Corporate secure index is shown in the bottom line, followed in brackets by the total number of Corporate secure indexes that are programmed with a secure key.


- Enter, or scroll to, the number of the Corporate secure index that you want to use.

```

Select Key (Ⓢ)
Index: 2      01 (1-2)
  
```

- Press ✓.

The transceiver goes secure using the key that you selected.

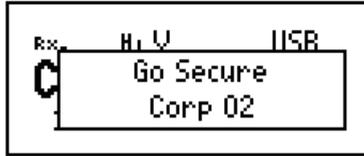


Erasing all of the secure keys

All of the secure keys in the Corporate secure indexes in the transceiver may be erased via a simple hot-key sequence.

NOTE The Base secure key in secure index 0 is not erased.


To erase all secure keys:

- Press + **SEC**.

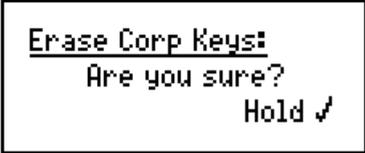

Erase Corp Keys:
Are you sure?
Hold ✓

- Hold ✓.

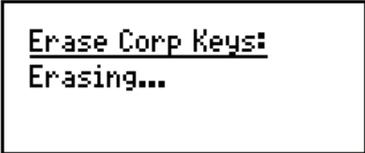

Erase Corp Keys:
Erasing...


Using the CES-128 voice encryptor in standby mode

If you are operating in a communication network that has transceivers that use secure communications, non-secure communications, or both, then use the secure standby mode. When the CES-128 voice encryptor is in standby mode, you can hear all communications on the selected channel that are made by other transceivers in clear mode. If your transceiver detects an encrypted transmission from another station that is in secure mode, your transceiver will exit secure standby mode and go secure so that you can hear the secure, decrypted communication.


To enter standby mode:

- Press **SEC** to switch on the CES-128 voice encryptor.
- Press *****.

The CES-128 voice encryptor switches to standby mode.

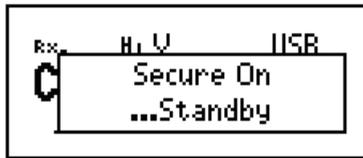

If you are in the Channel List, the standby voice encryptor is indicated by the text **Secure <index>[P]** underlined at the bottom left of the channel screen. For example:

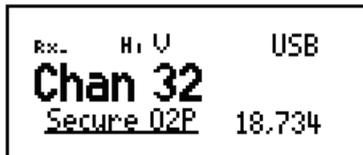

NOTE The transceiver automatically switches from standby mode to secure mode if an encrypted transmission is received.

To exit standby mode:

- Press *****.

The CES-128 voice encryptor switches from standby mode.



This page has been left blank intentionally.

4 AES-256 digital encryptor option



This section contains the following topics:

[Using the AES-256 digital encryptor \(34\)](#)

[Switching off the AES-256 digital encryptor \(35\)](#)

[Using digital mute \(36\)](#)

[Changing the data rate \(36\)](#)

[Creating a secure key in a secure index \(37\)](#)

[Switching between secure indexes \(40\)](#)

[Erasing all of the secure keys \(42\)](#)

NOTE The AES-256 digital encryptor is an optional feature.

Using the AES-256 digital encryptor

To use the encryptor:

- Start a call (see [page 14, Making a selective call](#)).
- Press **SEC**.

The transceiver responds with two high short beeps, and displays **Go Secure** with the secure index and data rate used. For example:




If you are in the Channel List, the active AES-256 digital encryptor is indicated by the text **TEK<index>** at the bottom left of the channel screen. For example:



NOTE If you are using a user-defined prefix for the AES secure key, this is displayed instead of **TEK**.

When a digitally encrypted signal is transmitted or received, the index is highlighted.

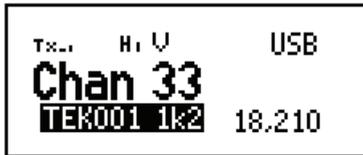


Switching off the AES-256 digital encryptor


To switch off the encryptor:

- Press **SEC**.

The transceiver responds with two low short beeps and displays **Go Clear**. For example:

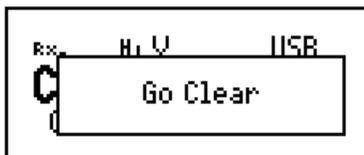

The channel screen displays that the transceiver is no longer secure (**Clr Voice**).

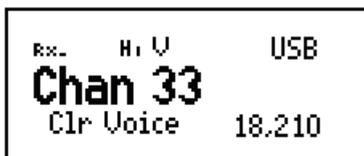

Using digital mute

When the AES-256 digital encryptor is switched on, you have the option of selecting Voice mute (**V**), Selcall mute (**S**), or Digital Voice Only mute (**D**). Digital Voice Only mute enables digitally encrypted voice to be processed through to the user. For information on Selcall mute and Voice mute see the reference material on the enclosed CD.

Changing the data rate

The data rate affects the speed with which digitally encrypted transmissions are sent and received. The data rate is shown as either 1k2 (1 200 b/s) or 2k4 (2 400 b/s) in the centre of the screen. Select 1k2 as the data rate in the first instance, then if good HF propagation conditions exist, the 2k4 rate may be selected.

To change the data rate:

Hold **SEC**.

The currently unused data rate is highlighted.

Do one of the following:


- To change to the new rate, press **✓**.
- To leave the data rate as is, press **✗**.

Creating a secure key in a secure index

NOTE You are able to create or edit the key in secure index 00 at any time. You may create or edit keys in other indexes if your system administrator has enabled this feature in your transceiver.

To create a secure key for secure index 00:

- Hold **SEC**, then scroll to **Select Key**.

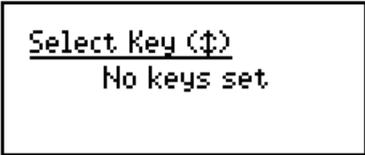

Select Key (0)
No keys set

- Scroll to **Edit Key 00**, then press **✓**.



Edit Key 00
Key: █ #

- Enter the secure key for secure index 00.



Edit Key 00
Key:12AB34CD █ #

- Press ✓.


The transceiver goes secure using the key that you entered.



NOTE When there are less than 100 AES secure keys in the transceiver, the index is shown as a 2-digit number.

To create a secure key for the next secure index:

- Hold **SEC**, then scroll to **Edit Key**.

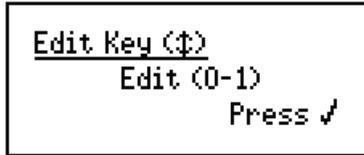


- Press ✓.




NOTE The currently selected secure index is shown in the bottom line, followed in brackets by the total number of secure indexes that are programmed with a secure key.

- Scroll to **Index:01 (New)**.


The transceiver automatically assigns the next secure index number.

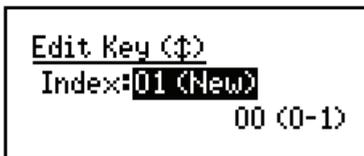

- Press **✓**.

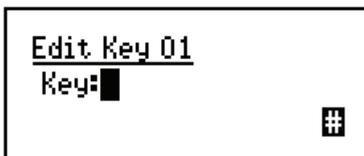

- Enter the secure key for the secure index shown.

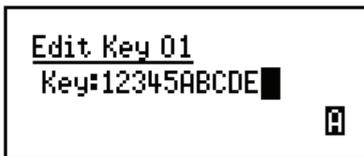

NOTE The AES secure key may contain up to 64 hexadecimal digits. The transceiver automatically places zeros in keys that are shorter than this.

- Press **✓**.


The transceiver goes secure using the key that you entered.




Switching between secure indexes

To switch between secure indexes while using the encryptor:

- Hold **SEC**, then scroll to **Select Key**.

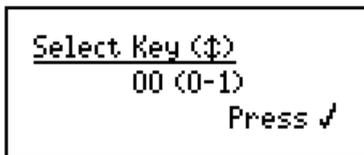


- Press **✓**.

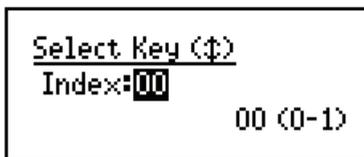

The currently selected secure index is shown in the bottom line, followed in brackets by the total number of secure indexes that are programmed with a secure key.

NOTE

- Enter, or scroll to, the number of the secure index that you want to use.

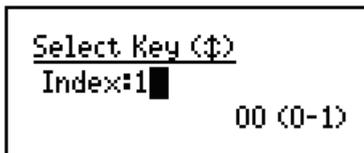

- Press ✓.

The transceiver goes secure using the key in the secure index that you selected.




Erasing all of the secure keys


All of the secure keys in the transceiver may be erased via a simple hot-key sequence.

To erase all secure keys:

- Press **ⓘ** + **SEC**.

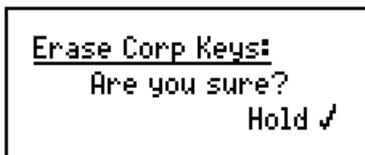

- Hold ✓.

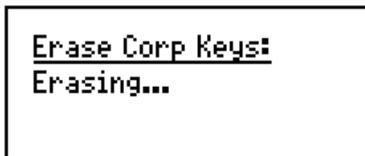

5 Installation



This section contains the following topics:

Mobile stations for NGT AR, SR, AR Voice, and VR Transceivers (44)

Fixed stations for NGT AR, SR, AR Voice, and VR Transceivers (53)

Mobile stations for NGT *AR*, *SR*, *AR Voice*, and *VR* Transceivers

A mobile NGT station typically consists of:

- a handset and cradle
- a junction box (NGT *AR* and *SR* Transceivers only)
- a speaker
- an RF unit and vehicle mounting cradle (includes DC power cable)
- a 12 V DC power supply (battery)
- an automatic tuning antenna

[Figure 3 on page 45](#) shows a typical mobile NGT *AR* or *SR* station.

[Figure 4 on page 46](#) shows a typical mobile NGT *AR Voice* or *VR* station.

Figure 3: Typical mobile NGT AR or SR station


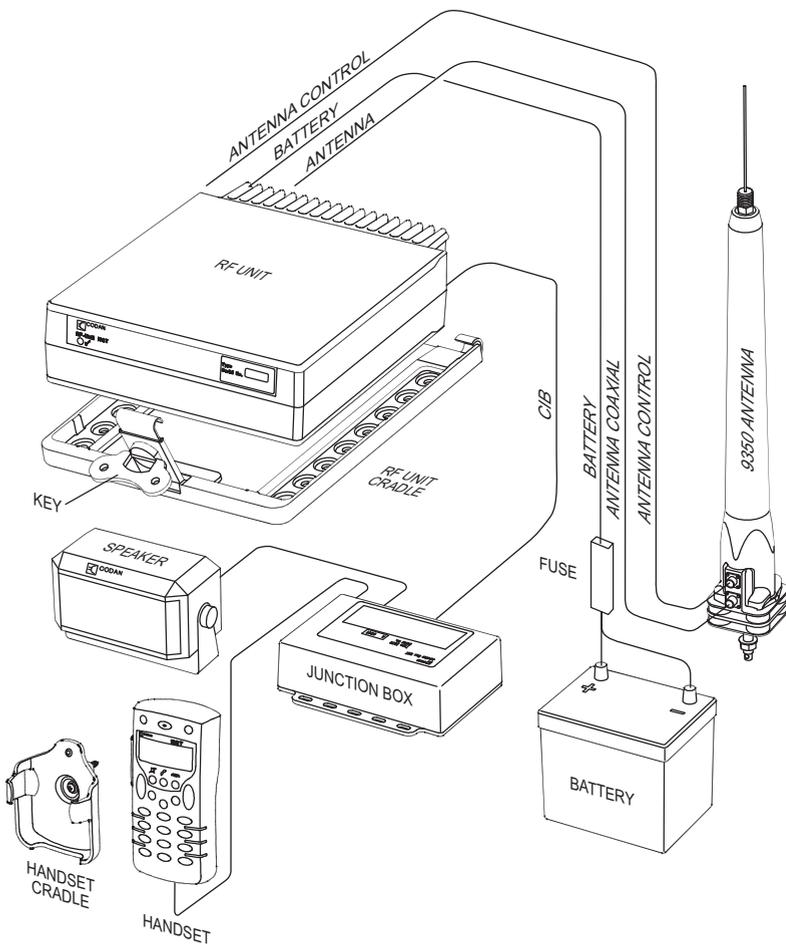


Figure 4: Typical mobile NGT AR Voice or VR station

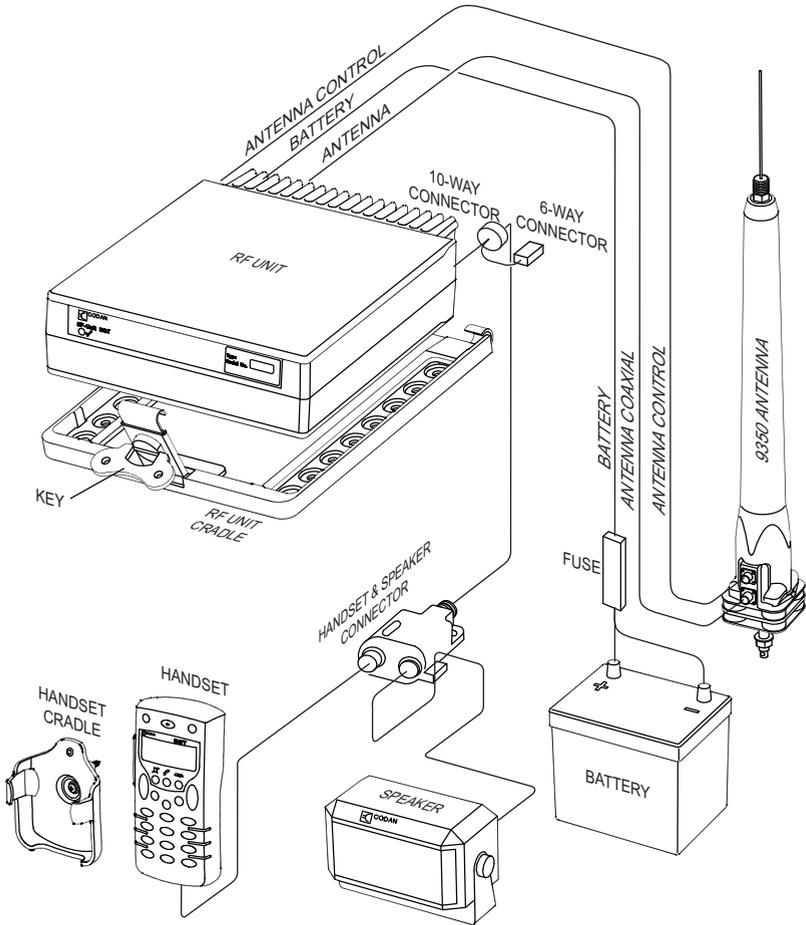

Cables

Table 2: Cables for a typical mobile NGT station

Cable	Symbol	Part number
CIB cable between RF unit and junction box ^a (NGT <i>AR</i> and <i>SR</i> Transceivers only)		08-05610-006
Handset and speaker connector cable ^b (NGT <i>AR Voice</i> and <i>VR</i> Transceivers only)		08-06022-001
Coaxial cable between RF unit and antenna ^c		08-01503-006
Control cable between RF unit and antenna ^c		08-05627-006
DC power supply cable ^b		08-03255

- The part number for this cable corresponds to a standard 6 m CIB cable. The cable is also available in a number of shorter and longer lengths.
- The part number for the cable corresponds to a standard 6 m cable.
- The part number for the cable corresponds to a standard 6 m cable. The cable is also available in a number of shorter and longer lengths.

Mounting a mobile NGT station

Most components of a mobile NGT *AR*, *SR*, *AR Voice*, and *VR* station are provided with their own mounting cradles. For general guidance on suitable locations for equipment and installing these stations see the reference material on the enclosed CD.

Mounting the handset cradle

To mount the handset cradle:

- Mount the handset according to the fitting instructions (Codan part number 15-00129-001) provided with the handset cradle.

Mounting the speaker

To mount the speaker:

- Secure the mounting cradle to the surface with at least two screws.
Ensure there is sufficient space at the rear for the cable.
- Attach the speaker to the cradle with the two screws and rubber washers.

Mounting the junction box (NGT *AR* and *SR* Transceivers only)

To mount the junction box:

- Use cable ties or screws to secure the junction box in a suitable location.

Mounting the handset and speaker connector (NGT AR Voice and VR Transceivers only)

To mount the handset and speaker connector:

- Use cable ties or screws to secure the handset and speaker connector in a suitable location.

Mounting the RF unit

WARNING If you are transferring a fixed station to a mobile station and you have installed rubber feet to the bottom of the RF unit, you must remove the rubber feet before installing it into the mounting cradle.

To mount the RF unit:

- Secure the mounting cradle to the surface with at least four screws, one in each corner of the cradle.

NOTE Ensure there is sufficient space at the rear of the cradle to clear the RF unit heatsink.

- If the key is locked to the base of the cradle, flip the key away from the base until it can be rotated (see [Figure 3 on page 45](#)), then rotate the key in a counterclockwise direction.
- Place the RF unit into the cradle and push it under the tabs at the rear of the cradle, then hold the clamp against the front of the RF unit.
- Rotate the key clockwise, then push the key toward the base of the cradle to lock the RF unit into position.

Connecting a mobile NGT station

Connecting a mobile NGT *AR* or *SR* station

To connect a mobile NGT *AR* or *SR* station:

- ❑ Connect the plug of the handset cable to the  socket on the junction box, then secure the locking ring tightly into position.
- ❑ Connect the plug at the end of the speaker cable to the  socket on the junction box.
- ❑ Connect the socket at the end of the  cable to the plug at the end of the  cable lead from the RF unit, then secure the locking ring tightly into position.
- ❑ Connect the socket at the opposite end of the  cable to the  plug on the junction box, then secure the locking ring tightly into position.
- ❑ Connect the plug at the end of the  cable to the socket at the end of the  cable lead from the RF unit, then secure the locking ring tightly into position.
- ❑ Connect the plug at the opposite end of the  cable to the socket located at the base of the antenna, then secure the locking ring tightly into position.

Connecting a mobile NGT *AR Voice* or *VR* station

To connect a mobile NGT *AR Voice* or *VR* station:

- ❑ Connect the lead from the handset and speaker connector to the 10-way plug on the cable lead from the RF unit, then secure the locking ring tightly into position.
- ❑ Connect the plug of the handset cable to the  socket on the handset and speaker connector, then secure the locking ring tightly into position.
- ❑ Connect the plug at the end of the speaker cable to the  socket on the handset and speaker connector, then secure the cable by pushing it into the slot on the side of the connector (see [Figure 4 on page 46](#)).
- ❑ Connect the plug at the end of the Υ cable to the socket at the end of the Υ cable lead from the RF unit, then secure the locking ring tightly into position.
- ❑ Connect the plug at the opposite end of the Υ cable to the socket located at the base of the antenna, then secure the locking ring tightly into position.

Connecting the control cable to an automatic tuning antenna

To connect the control cable to an antenna:

- Connect the socket at the end of the ⚡ cable into the plug at the base of the antenna, then secure the locking ring tightly into position.
- Fit the plug at the opposite end of the ⚡ cable into the socket at the end of the ⚡ lead from the RF unit.

Connecting the power supply

To connect the transceiver to the battery power supply:

- If you are using a 24 V battery supply, connect the battery to a 24 V to 12 V voltage regulator (Codan part number 15-00508).
- Connect the power supply cable (Codan part number 08-03255) to the plug at the end of the **12 V** cable lead from the RF unit.
- Route the power supply cable according to the instructions supplied with the Vehicle Installation Kit (Codan part number 15-00112).
- Insert the 32 A fuse and holder in the power supply cable at a convenient location, as close as possible to the battery terminals.
- Connect the power supply cable to the battery terminals, black to negative, red to positive.

Connecting ancillary equipment

The NGT *AR* and *SR* Transceiver mobile systems use the junction box for connecting to ancillary equipment.

The 6-way connector on the RF unit of the mobile NGT *AR Voice* Transceiver is available for connecting a GPS receiver.

Fixed stations for NGT *AR*, *SR*, *AR Voice*, and *VR* Transceivers


A fixed NGT station typically consists of:

- a desk console, containing a handset, a goose-neck microphone, a junction box, and a speaker (NGT *AR* and *SR* Transceivers only)
- a handset and cradle (NGT *AR Voice* and *VR* Transceivers only)
- a speaker (NGT *AR Voice* and *VR* Transceivers only)
- an RF unit
- an AC transceiver supply
- a suitable fixed antenna (see the reference material on the enclosed CD)

[Figure 5 on page 54](#) shows a typical fixed NGT *AR* or *SR* station.

[Figure 6 on page 55](#) shows a typical fixed NGT *AR Voice* or *VR* station.


Figure 5: Typical fixed NGT AR or SR station

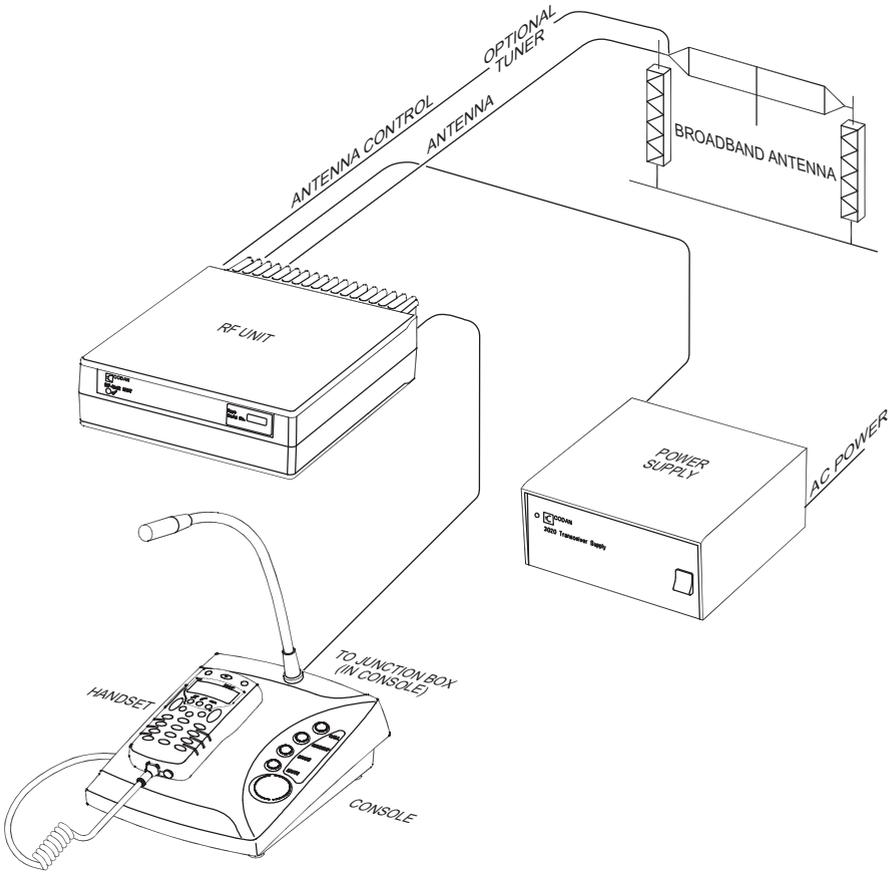

NOTE

The junction box is fitted inside the desk console. The connectors on the junction box are at the rear of the desk console.

Figure 6: Typical fixed NGT AR Voice or VR station

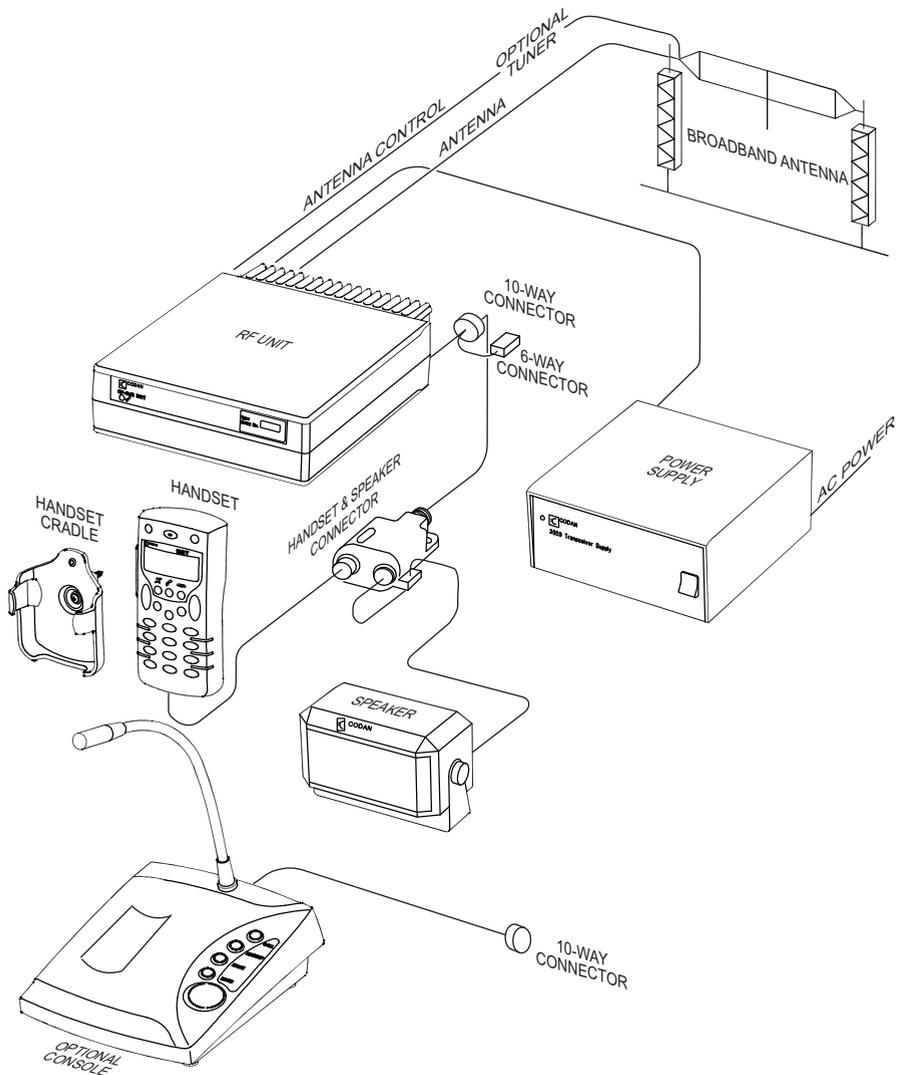

NOTE

The Code 766 Desk Console comes with a 2 m cable that connects directly to the 10-way connector from the RF unit. The console replaces the 6 m handset and speaker connector cable, and external speaker. The handset connects directly to the back of the console.

Cables

Table 3: Cables for a typical fixed NGT station

Cable	Symbol	Part number
CIB cable between RF unit and console ^a (NGT <i>AR</i> and <i>SR</i> Transceivers only)		08-05610-006
Handset and speaker connector cable (NGT <i>AR Voice</i> and <i>VR</i> Transceivers only)		08-06022-001
Coaxial cable between RF unit and antenna ^b		08-01503-030

- The part number for this cable corresponds to a 6 m CIB cable. The cable is also available in a number of shorter or longer lengths.
- The part number for this cable corresponds to a 30 m coaxial cable. The cable is also available in a number of shorter lengths.

Mounting a fixed NGT station

A fixed NGT *AR* or *SR* station is most commonly mounted using a desk console (Codan part number 15-10471). A fixed NGT *AR Voice* or *VR* station may be mounted using a desk console (Codan part number 15-00766). For general guidance on suitable locations for equipment and installing the fixed station see the reference material on the enclosed CD.

Desk console

The pre-assembled NGT Desk Console (Codan part number 15-10471, used with the NGT *AR* and *SR* Transceivers only) combines a handset, a goose-neck microphone, a junction box, an in-built speaker, and a headphone jack (see [Figure 5 on page 54](#)). The Code 766 Desk Console (Codan part number 15-00766, used with the NGT *AR Voice* and *VR* Transceivers only) does not have an internal junction box or attached handset (see [Figure 6 on page 55](#)). The handset connects to the rear of the console. The console cradles the handset.

RF unit and transceiver supply

The RF unit and the transceiver supply are self-contained and are usually stacked loosely. If you want to mount the RF unit and/or the transceiver supply, contact your Codan representative to obtain a rack-mounting unit or the appropriate mounting cradles.

WARNING If you are mounting an RF unit in a cradle, do not fit rubber feet to the bottom of the RF unit.

NOTE If you are transferring a mobile station to a fixed station, and you are not mounting the RF unit in a cradle, rubber feet can be fitted to the bottom of the RF unit. The rubber feet are available from Codan (Codan part number 30-11208-000).

Rack-mounting unit

A rack-mounting unit consists of a 19 inch rack tray. It can be used in conjunction with a desk console, or the handset and cradle, to mount your fixed station.

Connecting a fixed NGT station

Connecting a fixed NGT *AR* or *SR* station

NOTE The handset is supplied connected to the desk console (Codan part number 15-10471).

To connect a fixed NGT *AR* or *SR* station:

- Connect the socket at the end of the  cable to the plug at the end of the  cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the socket at the opposite end of the  cable to the  plug at the rear of the desk console, then secure the locking ring tightly into position.
- Connect the plug at the end of the  cable to the socket at the end of the  cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the plug at the opposite end of the  cable to the socket located at the base of the antenna, then secure the locking ring tightly into position.

Connecting a fixed NGT *AR Voice* or *VR* station

To connect a fixed NGT *AR Voice* or *VR* station:

- Connect the lead from the handset and speaker connector or desk console to the 10-way plug on the cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the plug of the handset cable to the  socket on the handset and speaker connector or to the rear of the optional Code 766 Desk Console, then secure the locking ring tightly into position.
- Do one of the following:
 - If you are using the handset and speaker connector and cable, connect the plug at the end of the speaker cable to the  socket on the handset and speaker connector, then secure the cable by pushing it into the slot on the side of the connector (see [Figure 6 on page 55](#)).
 - If you are using the optional Code 766 Desk Console, connect the 2 m flying lead from the rear of the console to the 10-way connector plug on the cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the plug at the end of the  cable to the socket at the end of the  cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the plug at the opposite end of the  cable to the socket located at the base of the antenna, then secure the locking ring tightly into position.

Connecting an automatic tuner to the RF unit and antenna (optional)

NOTE You may need to install a tuner to improve the efficiency of the antenna in your fixed station (see the reference material on the enclosed CD).

NOTE The tuner used in most applications has connectors at the end of the cables attached to the tuner, as described below. However, you may have a tuner that has sockets on the connector panel of the tuner.

To connect the tuner to the RF unit:

- Connect the plug at the end of the coaxial cable from the tuner to the socket at the end of the Υ cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the plug at the end of the control cable from the tuner to the socket at the end of the ∇ cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the antenna to the antenna connector on the tuner, then secure it tightly into position.

Connecting the transceiver supply

To connect the transceiver to the transceiver supply:

- Connect the DC output from the transceiver supply to the plug at the end of the **12 V** cable lead from the RF unit.
- Connect the transceiver supply to the AC mains supply.

Connecting ancillary equipment

The NGT *AR* and *SR* Transceiver fixed systems use the junction box for connecting to ancillary equipment.


The 6-way connector on the RF unit of the fixed NGT *AR Voice* Transceiver is available for connecting a GPS receiver.

Editing a screen

To gain access to an editable screen:

- Hold* ✓.

A question mark is displayed at the end of the heading to show that you can now enter and/or edit text in the setting.

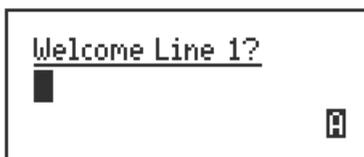


NOTE If text has already been entered on the line it is highlighted.

- Do one of the following:
 - To use the text displayed, press ✓.
 - To enter new text, start typing. When you have entered the text, press ✓.
 - To edit the text displayed, press ✕. The cursor is placed at the end of the line so you can backspace over characters and/or enter new text. When the text is correct, press ✓.

Entering text


To enter text in an editable screen:

- ❑ To enter one of the letters on a key, press the key repeatedly until the letter is displayed.

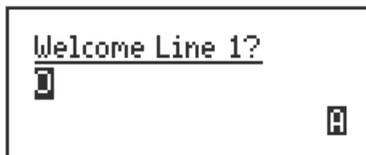


NOTE You can also *hold* the key until the letter you want is displayed, then release the key.

- ❑ To enter another letter on the same key, wait until the cursor moves to the next space...

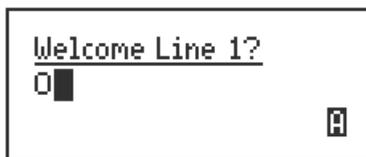


...then press the key repeatedly until the letter you want is displayed.

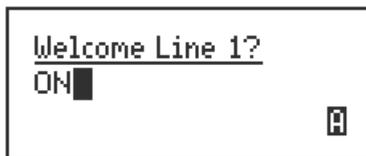

- ❑ To enter a letter on another key, press the key for the letter.

You do not need to wait until the cursor moves to the next space.

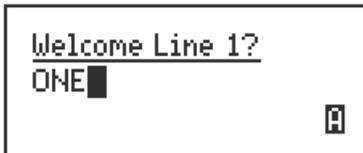

Changing between alpha and numeric characters

To change between upper-case and lower-case letters and numbers in an editable screen:

- ❑ Press **#** to change the character/case indicator at the bottom right of the screen from **A** (upper-case) to **a** (lower-case) to **#** (numbers).

NOTE

When you are prompted to enter a call address, the characters that you can enter are determined by the call systems installed in the transceiver.

Moving the cursor

To move the cursor across the text:

- ❑ Use **▶** or **◀** to move the cursor left or right respectively.

Inserting text

To insert text:

- Use  or  to move the cursor to the point where you want to insert text (or a space), then press the required character key.

NOTE

If you want to insert a space, make sure that **A** or **a** is displayed at the bottom right of the screen before you press **0**, otherwise you will enter a zero.

NOTE

You can enter a special character using *****, or  with  and .

Deleting text

To delete text:

- Use  or  to move the cursor one position to the right of the character that you want to delete, then press .

Saving text changes

To save the changes you have made:

- Press .

The question mark is removed from the heading.

If you do not want to save the text, *hold*  to discard the changes.

Quick Start provides simple methods to configure your transceiver to a basic operating state.

Quick Start is available if your transceiver has not been programmed with a profile, or contains only one station self address and network names from this default list:

- *Voice
- *Selcall
- *CALM
- !Default

When you *hold* , you should see the Quick Start entries, for example, **Add/Edit channel**, **Set scan list** etc. If these entries are not displayed, then Quick Start is not available to you.

NOTE

In countries that do not permit programming of transmit frequencies using the handset, you are not able to add channels using Quick Start; this is achieved using NSP.

For detailed information on programming your transceiver without Quick Start see the reference material on the enclosed CD.

Opening and closing Quick Start

To open Quick Start:

- Hold* .

To close Quick Start:

- Press or *hold* .

Adding/Editing a channel

- NOTE
- If you have option TxD enabled, you are not able to program transmit frequencies.
 - If you have option TxP enabled, this entry is not available.

To add or edit a channel:

- Open Quick Start.
- Scroll to **Add/Edit channel**, then press ✓.
- Enter the name of the channel that you want to create, then press ✓.

NOTE For help with entering text see [page 61](#), *Entering and editing text*.

If you want to use an existing channel, scroll to the channel, then press ✓.

- Enter the receive frequency in kilohertz, then press ✓.

NOTE You can enter the frequency to three decimal places. Press * to enter a decimal point, then continue with entering the frequency.

- Enter the transmit frequency in kilohertz, then press ✓.
- Scroll to the mode combination you want to use, then press ✓.

The transceiver returns to Quick Start.

- If you want to add/edit more channels in your transceiver, scroll to **Add/Edit channel** and repeat this process.

- Close Quick Start, if required.

NOTE If you want to make or receive calls on this new channel, you must add it to your scan list.

Setting up a scan list

To set up a scan list:

- Open Quick Start.
- Scroll to **Set scan list**, then press ✓.

The first channel in the transceiver is displayed.

- If you want to add this channel to the scan list, press ✓.

If you do not want to add this channel to the scan list, press ✕.

When all the channels have been viewed or you have added 15 channels to your scan list, the transceiver returns to Quick Start.

If you do not want to scroll through all the channels in your scan list, *hold* ✓ to return to Quick Start.

- Close Quick Start, if required.

CAUTION Each time you enter **Set scan list**, the resulting scan list overwrites the existing scan list.

Setting the time and date

To set the time and date:

- Open Quick Start.
- Scroll to **Set time/date**, then press ✓.

The display appears with a line under the year.

- Use  or  to change the current setting to the correct value, then press ✓.

The line appears under the month.

- Repeat the previous step until you have made all of the changes to the time and date.

When all the changes have been made, the transceiver returns to Quick Start.

- Close Quick Start, if required.

Setting your station self address

NOTE

When Quick Start is available, any self address that you enter using this method replaces the previous self address. If you want to enter more than one self address, and hence disable the Quick Start features, see the reference material on the enclosed CD.

To set your station self address:

- Open Quick Start.
- Scroll to **Set my address**, then press ✓.
- Enter your station self address (maximum of 10 numeric digits for Codan Selcall networks, or 15 upper-case/numeric characters for ALE/CALM networks), then press ✓.

NOTE

For help with entering text see [page 61](#), *Entering and editing text*.

- Close Quick Start, if required.

Adding/Editing an entry in the Address List or Call Book

To add or edit an address that you call frequently:

- Open Quick Start.
- Scroll to **Address/CallBk**, then press ✓.
- Enter the name of the station or person that you want to add to the list, or use **▶** or **▼** to select an existing entry, then press ✓.

NOTE For help with entering text see [page 61](#), *Entering and editing text*.

- Scroll to the type of call that you want to make, enter the station address that you want to call, then press ✓.
- If you selected **Message?** or **No call type**, enter the message, then press ✓.

If you do not want to select a message, press ✓.

- Scroll to the call system that you want to use to make the call, then press ✓.
- If you selected **Phone?** or **No call type**, select **<blank>** for the phone link that you want to use, then press ✓.

When all the changes have been made to the call address, the transceiver returns to Quick Start.

- If you want to add more call addresses to your Address List or Call Book, scroll to **Address/CallBk** and repeat this process.
- Close Quick Start, if required.

Deleting an entry

To delete addresses, channels or phone links:

- Open Quick Start.
- Scroll to **Delete...**, then press ✓.
- Scroll to the list from which you want to delete an item, then press ✓.
- Scroll to the item you want to delete, then press ✓.

NOTE If you delete a channel from the Channel List, it is deleted automatically from the scan list.

- Close Quick Start, if required.

This page has been left blank intentionally.

Appendix C Using a GPS receiver



Option GPS Enable is available for NGT *AR*, *SR*, and *AR Voice* Transceivers. If you have Option GPS Enable installed, and a GPS receiver connected, you can view your own position, and the distance and bearing to a remote transceiver from which you have received a position.

To access GPS information:

- Press **9** to see the GPS screen.

```
GPS   A  119 m
Aut   S  34°52.82
1     E 138°41.25
```

To view distance and bearing to a remote transceiver:

- Go to an Address List or Call Log entry containing a GPS position of a remote transceiver.

```
Calls In 1
☑ ROADBLOCK:
  1832 km, 125°T
```

The transceiver calculates the distance to the remote transceiver and its bearing from true north with respect to your current location.

This page has been left blank intentionally.

Appendix D HF radio transmission



Overview

The HF band is the range of frequencies between 3 and 30 MHz. HF transceivers usually cover a frequency range of 1.6 to 30 MHz.

Codan HF transceivers transmit on single sidebands. This reduces the power required to send HF signals, and increases the number of channels available within the HF spectrum.

HF transceivers are primarily used for long-range communication where distances of 3000 km (1800 mi) and more are possible. Obstructions such as buildings and mountains have little effect on long-range communication. HF radio can cover such large distances because of the way the transmitted radio signal propagates.

HF radio waves propagate in three ways simultaneously:

- ground wave
- direct wave
- sky wave

Ground wave

The ground wave travels near the ground for short distances, typically up to 100 km (60 mi) over land and 300 km (190 mi) over sea. The distance covered depends upon the operating frequency, transmission power, and type of terrain.

Direct wave


The direct wave travels in a direct line-of-sight from the transmitter to the receiver.

Sky wave

The sky wave is the most important form of HF propagation. The HF radio wave is transmitted toward the sky and is reflected by the ionosphere to a distant receiver on earth.

The reflective properties of the ionosphere change throughout the day, from season to season, and yearly.

Figure 7: The reflective properties of the ionosphere

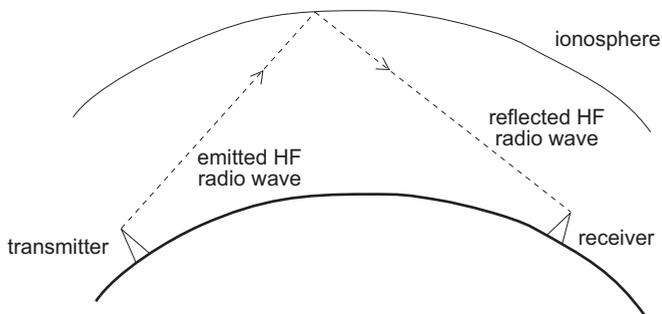

Frequency, distance and time of day

The extent to which an HF radio wave is reflected depends on the frequency that is used. If the frequency is too low, the signal is absorbed by the ionosphere. If the frequency is too high, the signal passes straight through the ionosphere. Within the HF band, low frequencies are generally considered to be in the range of 2 to 10 MHz. High frequencies are above 10 MHz.

A frequency chosen for daytime transmission may not necessarily be suitable for night-time use. During the day, the layers of the ionosphere are thick. The layers absorb lower frequencies and reflect higher frequencies. At night, the ionosphere becomes very thin. The low frequencies that were absorbed during the day are reflected, and the high frequencies that were reflected during the day pass straight through.

Summer HF radio communications usually operate on higher frequencies than those used in winter over the same distance.

Solar activity varies over an 11 year cycle. Higher frequencies need to be used during periods of peak activity.

It is important to remember that you may need to change the frequency you are using to achieve the best communication. The general rules of thumb for HF radio communications are:

- the higher the sun, the higher the frequency
- the further the distance, the higher the frequency

Channels and modes

A channel is a name that is given to a frequency or a pair of frequencies, for example, ‘Channel 1’, ‘4500’ and ‘Headquarters’. The frequencies may be any frequencies within the HF range.

Each channel has one or more modes associated with it. Each mode indicates a sideband that can be used with the channel, such as USB or LSB. When you make a call you need to specify the channel *and* the mode you want to use.

[Table 4](#) shows examples of channels and the information associated with them.

Table 4: Examples of channels and modes

Channel	Receive frequency (kHz)	Transmit frequency (kHz)	Modes
Channel 1	10600	10600	LSB, USB
4500	4500	–	AM
Headquarters	22758	23000	USB

Networks and scanning

A network is two or more stations that use the same frequencies and call system to communicate. The frequencies are allocated by a government authority and enable the network to maintain HF radio communications throughout the day and night.

The call system is the method the network uses to make and receive calls. For example, in networks that use the Codan Selcall or Open Selcall call system to make calls, the user enters the address of the station they want to call, then selects the channel/mode on which to make the call. In networks that use the ALE/CALM call system, the transceiver selects the best channel/mode for the call.

The transceiver can be set to scan the channel/modes used by your network to detect incoming calls. It is recommended that scanning is switched on when you are not using the transceiver to communicate. This ensures that you can receive calls from stations in your HF radio communications network.

Etiquette for the use of HF radio

There is a standard procedure for communicating over HF radio. Before you begin transmitting, switch off scanning, select a channel, then press PTT on the handset to initiate tuning of the antenna. Listen to the channel that you are going to use and ensure that there is no voice or data communication taking place. You may need to wait until the channel is clear or select another channel.

When you first establish communication with another station it is customary to state their call sign and then your own using the phonetic alphabet (see [Table 5 on page 81](#)). For example:

‘Alpha Bravo One, this is Alpha Bravo Two. Do you receive me? Over.’

In this example your call sign is AB2 and you are calling a station with the call sign AB1. A call sign is a group of letters and numbers issued by a government authority to identify a station. The phonetic alphabet is used to ensure that your call sign is understood.

The word ‘over’ is used to signify the end of your transmission. The transceiver may be set up to transmit a short beep when you release the PTT button on the handset. When your conversation with the other party is finished, the party that speaks last should say ‘out’.

Swearing or foul language should not be used—heavy penalties can apply.

Keep communication as short as possible.

Table 5: The phonetic alphabet

Letter	Word	Letter	Word
A	Alpha	N	November
B	Bravo	O	Oscar
C	Charlie	P	Papa
D	Delta	Q	Quebec
E	Echo	R	Romeo
F	Foxtrot	S	Sierra
G	Golf	T	Tango
H	Hotel	U	Uniform
I	India	V	Victor
J	Juliet	W	Whiskey
K	Kilo	X	X-ray
L	Lima	Y	Yankee
M	Mike	Z	Zulu

This page has been left blank intentionally.

Standards and icons

The following standards and icons are used in this guide:

This typeface... Means...

Italic a cross-reference or text requiring emphasis

Bold a menu option in the transceiver, or a button that you press

This icon... Means...

a step within a task

NOTE the text provided next to this icon may be of interest to you

CAUTION proceed with caution as your actions may lead to loss of data, privacy or signal quality

WARNING your actions may cause harm to yourself or the equipment

Acronyms and abbreviations

This term...	Means...
ALE	automatic link establishment
AM	amplitude modulation
CALM	Codan automated link management
CW	carrier wave, continuous wave
DC	direct current
DSP	digital signal processor
EMC	electromagnetic compatibility
ETSI	European Telecommunications Standards Institute
FCC	Federal Communications Commission
GPIO	general purpose input/output
GPS	global positioning system
HF	high frequency
ICNIRP	International Commission on Non-Ionizing Radiation Protection
ID	identification
IF	intermediate frequency
LBT	listen before transmit
LCD	liquid crystal display
LED	light-emitting diode
LQA	link quality analysis
LSB	lower sideband
NSP	NGT system programmer

This term...	Means...
PC	personal computer
PTT	press-to-talk
R&TTE	radio and telecommunications terminal equipment
RF	radio frequency
RFDS	Royal Flying Doctor Service
Rx	receive
SB	sideband
SINAD	(signal + noise + distortion)-to-(noise + distortion) ratio
tcvr	transceiver
Tx	transmit
USB	upper sideband
V	firmware/software version

Glossary

This term...	Means...
active line	The line below the title of a list on the handset screen. Items in the active line are selected by pressing ✓.
address	The HF transceiver equivalent of a telephone number. Your station self address is used by other stations to call you, and it is sent when you make calls to identify you as the caller. It is sometimes referred to as an ID, a station ID, or a self ID.
automatic tuning antenna	An antenna designed for use with multi-channel transceivers. It uses a microcontrolled stepper motor to give continuous tuning over the operating frequency range of the antenna.
call detect time	The length of time during scanning that the transceiver pauses on each channel in order to detect an incoming call. It is the inverse of the scan rate.
channel	Frequencies programmed in the transceiver to transmit and receive signals on air.
Channel Test call	A call that enables you to test the quality of a channel in a Codan Selcall network.
control cable	A cable connecting two items of equipment that allows control information to be passed between the equipment.
Emergency call	A call that enables you to trigger an emergency alarm at a specific station then speak to an operator there.

This term...	Means...
fixed base station	A transceiver that is permanently installed and cannot be moved without significant effort. It consists of a transceiver, a transceiver supply, an antenna, control and accessory devices, ancillary equipment, and appropriate connecting cables.
frequency	The number of cycles per second of a radio wave, usually expressed in kilohertz.
Get Position call	A call that gets the GPS position of a specific station.
Get Status call	A call that gets diagnostic or configuration information about the transceiver at a specific station.
handset	A hand-held device that is used to control the functions of a transceiver. It consists of a microphone, PTT button, display and keypad.
hot key	A key on the handset or desk console that is pre-programmed with a macro that enables you to perform a task quickly.
junction box	The unit in a transceiver to which a handset, RF unit, speaker and related devices are connected. The junction box receives the instructions that a user enters through the handset and sends these instructions to the relevant devices. In an NGT <i>AR Voice</i> or <i>VR</i> Transceiver, the junction box is not required; the handset and speaker connect directly to the handset and speaker connector. In this case, all instructions are processed by the RF unit.

This term...	Means...
listen before transmit	If enabled, the automatic process that the transceiver uses to detect whether or not there is traffic on a channel and, when necessary, select another channel or inform the user that the channel is busy.
macro	A short set of instructions to automate a task you perform with the transceiver. When a macro is assigned to a key, the key becomes a hot key.
Message call	A call that enables you to send a message to a specific station.
mobile station	A station that is usually mounted in a vehicle or is portable and easily transportable. It consists of a transceiver, a power supply, an antenna, control and accessory devices, ancillary equipment, and appropriate connecting cables.
mode	A type of reception or transmission you can use with a channel, comprising a sideband and an IF filter.
network	Two or more stations that use the same frequencies and call system to communicate.
Phone call	A call that enables you to connect to a public telephone network.
PTT button	Press-to-talk button, located on the left side of the handset. This button enables you to communicate during voice calls, switch mute off, cancel voice calls prior to the point where voice can be transmitted, cancel calls where data is being transmitted, and exit out of editable screens without saving changes.

This term...	Means...
revertive	A signal sent by a station in response to a call.
RFDS Emgcy call	A call that enables you to contact the RFDS (NGT <i>AR</i> and <i>AR Voice</i> Transceivers only).
RF unit	The device in a transceiver that modulates audio signals onto radio frequencies that can be transmitted on air, and that demodulates the radio frequencies it receives into audio signals.
Selective call	A call that enables you to contact a specific station, then speak to an operator.
Send Position call	A call that sends your GPS position to a specific station.
sideband	A band of frequencies that is above or below a modulated carrier frequency.
station	A point of communication consisting of a transceiver, a power source, an antenna, ancillary equipment, and appropriate connecting cables.
transceiver	An RF unit, handset, speaker, and appropriate connecting cables. The NGT <i>AR</i> and <i>SR</i> Transceivers also include a junction box.

Units

NOTE Imperial dimensions are in United States Customary Units.

Measurement	Unit	Abbreviation
Length	metre (inch/feet/yard/ mile)	m (in/ft/yd/mi)
Frequency	hertz	Hz
Temperature	degrees Celsius (Fahrenheit)	°C (°F)
Time	second hour	s h
Voltage	volt	V
Weight	gram (pound)	g (lb)

Unit multipliers

NOTE

Units are expressed in accordance with ISO 1000:1992 'SI units and recommendations for the use of their multiples and of certain other units'.

Unit	Name	Multiplier
M	mega	1 000 000
k	kilo	1 000
m	milli	0.001
μ	micro	0.000001

About this issue

This is the eighth issue of the NGT Transceiver Getting Started Guide.

This issue is applicable from firmware V5.11. It describes:

- using the AES-256 digital encryptor
- changes to the CES-128 voice encryptor

Associated documents

This guide is one of a series of documents associated with the NGT *AR*, *SR*, *AR Voice*, and *VR* Transceiver. The other documents are:

- NGT Transceiver Reference Manual (Codan part number 15-04126-EN) supplied on the CD inside the back cover of this guide
- NGT Transceiver System Technical Service Manual (Codan part number 15-02063-EN)
- NGT Transceiver System Repair Guide (Codan part number 15-04143-EN)
- Declaration of Conformity for the NGT *AR* Transceiver (Codan part number 19-40130)
- Declaration of Conformity for the NGT *SR* Transceiver (Codan part number 19-40121)
- Declaration of Conformity for the NGT *AR Voice* Transceiver (Codan part number 19-40123)
- Declaration of Conformity for the NGT *VR* Transceiver (Codan part number 19-40122)
- Declaration of Conformity for the 3020 Transceiver Supply (Codan part number 19-40127)

This section contains the following topics:

[Introduction \(94\)](#)

[European R&TTE Directive \(95\)](#)

[EMC and safety notices \(97\)](#)

[FCC compliance \(100\)](#)

[C-tick approval \(101\)](#)

[Register of hazardous substances \(102\)](#)

Introduction

This section describes how to ensure the NGT Transceiver complies with the European EMC Directive 89/336/EEC and the European Low Voltage Directive 73/23/EEC as called up in the European R&TTE Directive 1999/5/EC.

This section also contains the requirements for FCC compliance and C-tick.

European R&TTE Directive

The NGT Transceiver product range has been tested and complies with the following standards and requirements (articles of the R&TTE Directive):

- Article 3.1b: ETSI EN 301 489-1
- Article 3.1b: ETSI EN 301 489-15
- Article 3.2: Australian type approval according to ECR 209
- Article 3.1a: assessed against ICNIRP and FCC requirements
- Article 3.1a: EN 60950

Product marking and labelling

Any equipment supplied by Codan that satisfies these requirements is identified by the **CE0191** , **CE0191** or **CE** markings on the model label of the product.

Declaration of Conformity and Expert Letter of Opinion

The CE Declarations of Conformity and Expert Letters of Opinion for this product range are listed on [page 92](#), *Associated documents*. These documents can be made available upon request to Codan or a Codan-authorized supplier.

Protection of the radio spectrum

CAUTION Most countries restrict the use of HF radio communications equipment to certain frequency bands and/or require such equipment to be licensed. It is the user's responsibility to check the specific requirements with the appropriate communications authorities. If necessary, contact Codan for more information.

EMC and safety notices

Radiation safety

To ensure optimal transceiver performance and to avoid exposure to excessive electromagnetic fields, the antenna system must be installed according to the instructions provided.

WARNING High voltages exist on the antenna during transmission and tuning. Do not touch the antenna during these activities. RF burns may result.

WARNING Install the grounding system or counterpoise as directed to prevent RF burns from any metal part of the transceiver.

WARNING You should not transmit from your transceiver or tune the antenna unless people are beyond the safe working distance of:

- 1.5 m (5 ft) of any part of a mobile antenna
- 2 m (7 ft) of any part of a fixed antenna in a data installation of up to 125 W output
- 5 m (17 ft) of any part of a fixed antenna in a data installation of up to 1 kW output

Safe working distance is based on continuous exposure to CW-type transmissions, as set out in the ICNIRP Exposure Guidelines (1998) for occupational exposure. Safe working distance can be reduced with normal voice communication.

EMC

To ensure compliance with the EMC Directive is maintained, you must:

- Use standard shielded cables supplied from Codan (where applicable).
- Ensure the covers for the equipment are fitted correctly.

CAUTION If it is necessary to remove the covers at any stage, they must be refitted correctly before using the equipment.

- Cover unused connectors on the junction box (if fitted) and RF unit with the protective caps supplied to prevent electrostatic discharge passing through your NGT equipment.

Electrical safety

To ensure compliance with the European Low Voltage Directive is maintained, you must install and use the NGT Transceiver in accordance with the instructions in the *NGT Transceiver Getting Started Guide* and the *NGT Transceiver Reference Manual*.

When using equipment that is connected directly to the AC mains these precautions must be followed and checked before applying AC power to the unit:

- Use the standard AC mains cable supplied.
- Ensure the covers for the equipment are fitted correctly.

CAUTION If it is necessary for a qualified electronics technician to remove the covers during servicing, they must be refitted correctly before using the equipment.

WARNING A protective earth connection must be included in the mains wiring to the 3020 Transceiver Supply (see below, *Earth symbols*).

The protective cover must always be fitted when the 3020 Transceiver Supply is connected to the AC mains.

Earth symbols

Chassis earth connection points are provided on the NGT Transceiver and 3020 Transceiver Supply. A protective earth is provided in the AC mains wiring of the 3020 Transceiver Supply. This protective earth needs to be connected at the AC mains supply outlet. The symbols shown in [Table 6](#) are used to identify the earths on the equipment.

Table 6: Earth symbols

Symbol	Meaning
	Chassis earth
	Protective earth

FCC compliance

FCC Part 90 certification

The NGT *SR* Transceiver has been tested and certified to FCC Part 90 (FCC identifier code DYYNGT-3).

The NGT *VR* Transceiver has been tested and certified to FCC Part 90 (FCC identifier code DYYNGT-11).

FCC Part 15 compliance

Any modifications made to the NGT *SR* and *VR* Transceiver and 3020 Transceiver Supply that are not approved by the party responsible for compliance may void your equipment's compliance under Part 15 of the FCC rules.

The NGT *SR* and *VR* Transceiver and 3020 Transceiver Supply have been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by switching the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient or relocate the receiving antenna
- increase the separation between the equipment and receiver
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- consult the dealer or an experienced radio/TV technician for help

C-tick approval

The NGT *AR* and *AR Voice* Transceivers meet the requirements of the Australian Communications and Media Authority: Radiocommunications (MF and HF equipment—Land Mobile Service) Standard 2003 (AS/NZS 4770).

Register of hazardous substances

Table 7: 有毒有害物质列表 (Register of hazardous substances)

部件名称 (Component name)	有毒有害物质或元素 (Hazardous substances or elements)					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
NGT SR 电台 (NGT SR Transceiver)						
射频单元 2010 (RF Unit 2010)	X	O	O	O	O	O
转接盒 2030 (Junction Box 2030)	X	O	O	O	O	O
话筒 2020 (Handset 2020)	X	O	O	O	O	O
话筒托架 15-00129 (Handset Cradle Kit 15-00129)	O	O	O	O	O	O
扬声器 (External Speaker)	X	O	O	O	O	O
CIB 电缆 08-05610 (CIB Cable 08-05610)	X	O	O	O	O	O
同轴电缆 08-01503 (Coaxial Cable 08-01503)	O	O	O	O	O	O
地线 08-04515 (Earth Wire 08-04515)	O	O	O	O	O	O
桌控台 15-10471 (Desk Console 15-10471)	X	O	O	O	O	O
车辆安装工具包 15-00130 (Vehicle Installation Kit 15-00130)	O	O	O	O	O	O

Table 7: 有毒有害物质列表 (Register of hazardous substances) (cont.)

部件名称 (Component name)	有毒有害物质或元素 (Hazardous substances or elements)					
NGT SR 电台 (NGT SR Transceiver)	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
主电源 3020 (Power Supply 3020)	X	O	O	O	O	O
橡胶垫 (Rubber Feet)	O	O	O	O	O	O
风扇 (Fan)	X	O	O	O	O	O
参考手册光盘 (Reference Manual CD)	O	O	O	O	O	O
NSP 界面电缆 08-05123-001 (NSP Interface Cable 08-05123-001)	X	O	O	O	O	O
NSP 程序光盘 15-04164-EN (NSP Programmer CD 15-04164-EN)	O	O	O	O	O	O
0	<p>表示该有毒有害物质在该部件的所有均质材料中的含量，均在 SJ/T 11363-2006 标准所规定的限量要求以下。</p> <p>Indicates that this toxic or hazardous substance, contained in all of the homogeneous materials for this part, is below the limit requirement in SJ/T 11363-2006.</p>					
X	<p>表示该有毒有害物质在该部件的至少一种均质材料中的含量，超出 SJ/T 11363-2006 标准所规定的限量要求。</p> <p>Indicates that this toxic or hazardous substance, contained in at least one of the homogeneous materials used for this part, is above the limit requirement in SJ/T 11363-2006.</p>					

怎么阅读制造日期 - 方法如下：

How to read the date of manufacture:

产品序列号中的第一个数字或字母表示该产品在 2000 年或以后的制造年份。举例来说（数字 0-9）0=2000, 1=2001... 之后接着以字母代表制造年份 A=2010, B=2011...

The first character of the serial number provides the year of manufacture starting from the year 2000, that is, 0=2000, 1=2001...A=2010, B=2011...

产品序列号中的第二个数字或字母表示该产品的制造月份。举例来说（数字 1-9）1= 一月份, 2= 二月份... 之后接着以字母 A, B, C 代表剩下的制造月份 A= 十月份, B= 十一月份, C= 十二月份。

The second character of the serial number provides the month of manufacture, that is, 1 to 9, A to C; A=10th month, B=11th month and C=12th month.

A

- Address List
 - adding/editing entries 70
 - calling from 14
- AES-256 digital encryptor
 - data rate
 - changing 36
 - digital mute 36
 - secure key
 - creating 37
 - erasing via handset 42
 - switching between secure indexes 40
 - switching off 35
 - using 34
- ancillary equipment 52, 60

B

- bearing 73

C

- cables
 - fixed station 56
 - mobile station 47
- call sign 80
- call systems
 - ALE/CALM 79
 - Codan Selcall 79
 - Open Selcall 79
- calls
 - from Address List 14
- CES-128 voice encryptor
 - PIN privacy 25
 - secure key
 - creating in a Corporate secure index 22
 - switching between Corporate secure indexes 27
 - switching between Global and Corporate secure modes 26
 - switching off 21
 - using 20
 - in standby mode 30
- channel screen 8

- channels
 - definition 78
 - manual selection 12
- compliance
 - C-tick approval 101
 - EMC and safety notices 97
 - earth symbols 99
 - electrical safety 98
 - EMC 98
 - radiation safety 97
 - FCC 100
 - R&TTE Directive 95
 - declaration of conformity 95
 - product marking and labelling 95
 - protection of the radio spectrum 96
- Corporate secure mode
 - switching to Global secure mode 26

D

- deleting entries 71
- digital mute 36
- direct wave 75
- distance 73

E

- EMC and safety notices
 - compliance
 - earth symbols 99
 - electrical safety 98
 - EMC 98
 - radiation safety 97
- encryption
 - AES-256 33
 - CES-128 19

entering and editing text
 changing between alpha and numeric characters 63
 deleting text 64
 editing a screen 61
 entering special characters 64
 entering text 62
 inserting text 64
 moving the cursor 63
 saving text changes 64

F

FCC compliance 100
fixed station 53
 cables 56
 installing 58
 mounting 56
 19 inch rack-mounting unit 57
 desk console 57
 mounting cradles 57
frequency selection
 depending on distance and time of day 77

G

Global secure mode
 switching to Corporate secure mode 26
GPS 73
ground wave 75

H

handset keys 3
HF radio transmission 75

I

installation 43
 fixed 53
 mobile 44

M

mobile station 44
 cables 47
 installing 50
 mounting 48
 handset cradle 48
 junction box 48

 RF unit 49
 speaker 48
modes 12, 78
mute
 digital 36

N

networks 79

O

option
 AES-256 digital encryptor 33
 CES-128 voice encryptor 19

P

password
 entering 10
phonetic alphabet 81
power on/off 10

Q

Quick Start 65
 adding/editing a channel 66
 adding/editing an entry in the Address List or Call Book 70
 deleting an entry 71
 opening and closing 65
 setting the time and date 68
 setting up a scan list 67
 setting your station self address 69

R

R&TTE Directive
 compliance 95
 declaration of conformity 95
 product marking and labelling 95
 protection of the radio spectrum 96
RoHS 102

S

scan rate, see call detect time 86
scanning channels 17, 79
 pausing channel scanning 18

- secure key
 - creating in a Corporate secure index 22
- selecting
 - a channel 12
 - an item in a list 4
- sky wave 76
- station
 - fixed 53
 - installing 58
 - mounting 56
 - mobile 44
 - installing 50
 - mounting 48
 - mounting
 - handset and speaker connector 49

W

- wave
 - direct 75
 - ground 75
 - sky 76

This page has been left blank intentionally.



www.codan.com.au



Asia Pacific (Head Office)

Codan Limited
81 Graves Street
Newton SA 5074
AUSTRALIA

T: +61 8 8305 0311
F: +61 8 8305 0411

asiasales@codan.com.au

Europe, Middle-East & Africa

Codan (UK) Ltd
Unit C4, Endeavour Place
Coxbridge Business Park
Farnham Surrey GU10 5EH
UNITED KINGDOM

T: +44 1252 717 272
F: +44 1252 717 337

uksales@codan.com.au

Americas

Codan US, Inc.
1 Fishers Road
Pittsford NY 14534
USA

T: +1 585 419 9970
F: +1 585 419 9971

hfsales@codanusinc.com