

MODEL 3-BX-671,
Ch. RC-1125



THE STRATO-WORLD

Specifications

Tuning Ranges

Standard Broadcast "A" Band	540-1600 kc
"B" Band	2.0-4.0 mc
"C" Band	4.0-8.0 mc
31 Meter Spread Band	9.45- 9.85 mc
25 Meter Spread Band	11.55-12.05 mc
19 Meter Spread Band	14.90-15.55 mc
16 Meter Spread Band	17.50-18.20 mc

Intermediate Frequency 455 kc

Power Supply Rating

115 volts, d.c., or 25 to 60 cycles a.c. 20 watts

or

Battery Operation using RCA VS047 Battery

Battery voltage "A" 9 volts, "B" 90 volts

Battery current "A" 56 ma., "B" 14.5 ma.

or

230 volts d.c., or 25 to 60 cycles a.c. using

RK-186 Converter Accessory

Tube Complement

(1) RCA 1U4	R.F. Amplifier
(2) RCA 1L6	Converter
(3) RCA 1U4	I.F. Amplifier
(4) RCA 1U5	Det.-AVC-1st A.F.
(5) RCA 3V4	Output
RCA Stock No. 78101	Selenium Rectifier

Loudspeaker

Size and Type 5 1/4 in. P.M.

Voice coil impedance 3.2 ohms at 400 cycles

Power Output

Undistorted 0.22 watt

Maximum 0.42 watt

Tuning Drive Ratio 11 1/2:1

Weight (Approximate)

Less Battery 16 lbs.

With Battery (RCA VS047) 23 lbs.

Dimensions (Overall)

Height 11 1/2 in. Width 17 1/2 in. Depth 8 in.


Operating Instructions

Rotate POWER-VOLUME knob to right until a click is heard, and advance for about half a turn. Rotate BAND SELECTOR knob until desired band marking on knob is directly beneath the red triangle. A white indicator will appear at right of desired band on dial. To obtain reception on any one of the six Short Wave bands, the telescopic rod antenna must be used. See instructions under "General Information." Rotate TUNING knob until dial pointer indicates desired frequency marking on the desired band. Rotate TREBLE and BASS tone control knobs as desired. Treble tone increases as TREBLE knob is rotated clockwise. BASS tone increases as BASS knob is rotated counter-clockwise.

Headphones — A "PHONES" receptacle, for connection of headphones, is located on the rear of the chassis. Should individual listening be desired, any standard headphone set with standard plug may be inserted, automatically disconnecting the speaker.

Ground Terminal — A terminal for ground connection is located on the rear of the chassis. To improve reception in

weak-signal areas, connect a ground wire from this terminal ("GND") to a cold-water pipe, or other suitable ground. "GND" connection is not necessary when operating on power line.

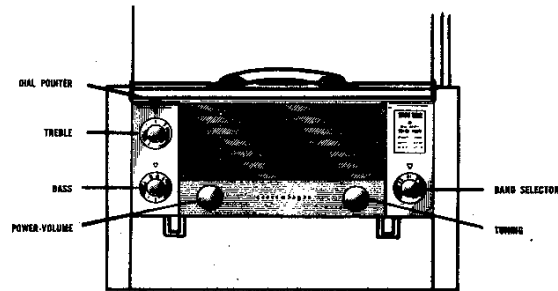

Operating Controls

**MODEL 3-BX-671,
Ch. RC-1125**

Circuit Description

The seven band 3BX671 portable instrument is a sensitive three-way receiver designed to operate from an AC or DC power source, or from a self-contained battery pack. With the addition of an RK-186 converter, the receiver may be operated on 210-250 volts AC or DC. A chassis jack is provided for this converter.

The receiver incorporates a 7 band tuner covering the broadcast band "A band"; two short wave bands, 2-4 mc. and 4-8 mc. "B and C bands"; also four short wave spread bands, 31, 25, 19, and 16 meters. The superheterodyne circuit is used with a tuned R.F. stage preceding the pentagrid converter on all bands; one I.F. stage; a combined AVC, detector, and A.F. stage; and a power amplifier stage. A selenium rectifier is used.


R.F. tuning is done by means of a ganged six section variable capacitor. Three large sections are used for the A, B, and C bands with series tracking capacitors. Also, three small 3 plate sections for electrical band spread are used on the four spread bands. The tuner, including the function switch, coil and trimmer assembly, R.F. and converter tubes and gang capacitor, is a completely detachable unit featuring high efficiency with small physical size. The special design permits access to the coil and trimmer adjustments from the rear.

A headphone jack is located on the chassis rear apron for individual listening. This jack automatically disconnects the speaker when the headphone plug is inserted. The slide rule type dial includes 7 separate scales on a slotted escutcheon to provide speaker openings. Continuously variable treble and bass tone controls are provided. This receiver features 3 separate antenna systems. A large flat loop built within the hinged lid includes a primary for external antenna connection, when desired. A Ferrite rod antenna with a long cable and provided with suction cups to permit mounting on a window or wall for improved pickup in shielded areas is supplied. The preceding antennas are used only on the standard broadcast band. A telescoping vertical rod antenna is provided for use on all short wave bands.

All tubes and the battery may be serviced by opening the hinged back cover. A terminal is provided on the back apron of the cover for an external ground connection, if desired. A line voltage compensator switch is mounted on the chassis rear apron under a caution label of instructions. The switch is to be used only in areas of sub-standard line voltage.

Alignment Fixture


To obtain maximum sensitivity when chassis is reinserted in case after alignment, the alignment fixture shown below should be secured to the tuner side of the chassis during alignment to simulate the effect of the case. The sheet metal clips and hardware on the dust cover base may temporarily be used to hold the fixture to the chassis.

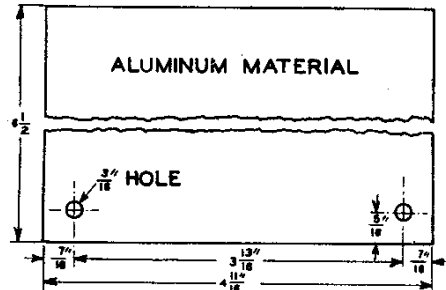


Alignment Fixture

CHASSIS REMOVAL

1. Turn tuning knob until gang is fully closed.
2. Open cabinet back, pull out battery, and disconnect battery plug.
3. Remove pull-off type volume, tuning, band selector, and tone control knobs.
4. Remove the four machine screws holding the chassis to the case.
5. Pull chassis out and simultaneously slightly downward, to enable dial pointer mechanism to clear top back edge of case.

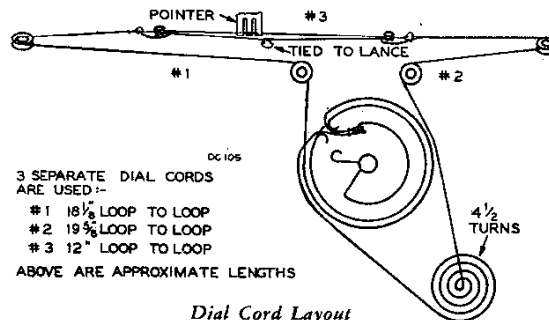

Dial Cord Layout

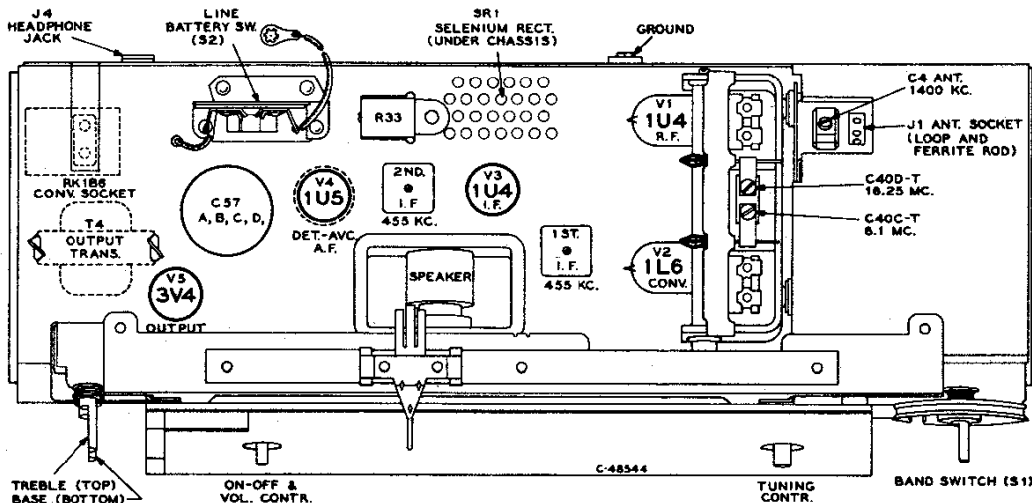

Chassis Top View

MODEL 3-BX-671, Ch. RC-1125

Alignment Procedure

Output Meter Alignment—If this method is used, connect the meter across the voice coil and turn the receiver volume control to maximum.

Test Oscillator—For all alignment operations, connect the low side of the test oscillator to the receiver chassis and keep the oscillator output as low as possible to avoid AVC action.

Close gang and set dial pointer to mark on dial plate. Turn volume and treble tone controls to maximum clockwise position. Turn bass tone control to maximum counterclockwise position.					
STEP	CONNECT HIGH SIDE OF SIG. GEN. TO—	SIGNAL GEN. OUTPUT	DIAL POINTER SETTING	ADJUST FOR MAXIMUM OUTPUT	
1.	Pin #6 of 1U4 I.F. Amp. thru 0.01 mfd.	455 kc	"A" Band	T3 top and bottom cores	
2.	Pin #6 of 1L6 Conv. thru 0.01 mfd.		Quiet point near 1600 kc	T2 top and bottom cores	
3.	Install bottom cover. Secure aluminum alignment fixture in place. Connect 24 mmfd. in series with 22 ohms between sig. generator lead and C39.				
4.	C39, term. 7 on S1D thru dummy load indicated	18.25 mc	16M Band Right hand stop	*C40D-T top of gang	
5.		17.5 mc	16M Band Left hand stop	T11 Osc.	
6.		17.8 mc	16M Band 17.8 mc Signal	Rock gang, —Peak L11 R.F. + L5 Ant.	
7.		14.9 mc	19M Band Left hand stop	T10 Osc.	
8.		15.2 mc	19M Band 15.2 mc Signal	Rock gang, —Peak L12 R.F. + L6 Ant.	
9.		11.55 mc	25M Band Left hand stop	T9 Osc.	
10.		11.8 mc	25M Band 11.8 mc Signal	Rock gang, —Peak L13 R.F. + L7 Ant.	
11.		9.45 mc	31M Band Left hand stop	T8 Osc.	
12.		9.6 mc	31M Band 9.6 mc Signal	Rock gang, —Peak L14 R.F. + L8 Ant.	
13.		8.1 mc	"C" Band Right hand stop	*C40C-T top of gang, C16 R.F. C7 Ant.	
14.		3.9 mc	"C" Band Left hand stop	T7 Osc. L9 R.F. L4 Ant.	
15.		Repeat steps 13 and 14 until maximum gain is obtained.			
16.		4.05 mc	"B" Band Right hand stop	C32 Osc. C18 R.F. C5 Ant.	
17.		1.97 mc	"B" Band Left hand stop	T6 Osc. L10 R.F. L3 Ant.	
18.		Repeat steps 16 and 17 until maximum gain is obtained. Remove alignment fixture and install chassis in cabinet. Plug in loop cable.			
19.	Short length of wire near receiver	1620 kc	"A" Band Right hand stop	C31 Osc.	
20.		1400 kc	"A" Band 1400 kc Signal	C20 R.F. C4 Ant.	
21.		600 kc	"A" Band 600 kc Signal	Rock gang, —Peak T5 Osc. trans. + T1 R.F.	
22.		Repeat steps 19, 20 and 21 until maximum gain is obtained. Exchange loop antenna plug with external Ferrite Rod antenna plug. Extend cable to maximum.			
23.		1400 kc	"A" Band 1400 kc Signal	C43 Ferrite Rod Ant.	

*The tuning range and dial calibration of the succeeding bands depend upon the accuracy of this adjustment. Avoid aligning on image. The local oscillator is 455 kc higher in frequency than the RF on all bands.


Battery operation of the receiver is preferable during alignment; on AC operation, an isolation transformer (117v./117v.) may be necessary for the receiver if the test oscillator is also AC operated.

Critical Lead Dress


1. Dress all filament leads next to chassis.
2. Use short pigtail leads on all by-pass and coupling capacitors associated with R.F. circuits.
3. Dress gang condenser leads direct and short as possible to switch without strain.
4. Connect neutralizing capacitor C50, 0.51 MMFD across converter socket with short leads and away from other components.
5. Dress power line compensator resistor to clear surrounding components and bottom cover.
6. Dress coil pigtail leads away from each other and from coils.
7. Dress blue converter plate lead down to base.
8. Dress volume control leads down to base.


CAUTION—

Do not remove any tubes from the chassis with the set operating and the plug connected to the power line. Damage to tubes may result.

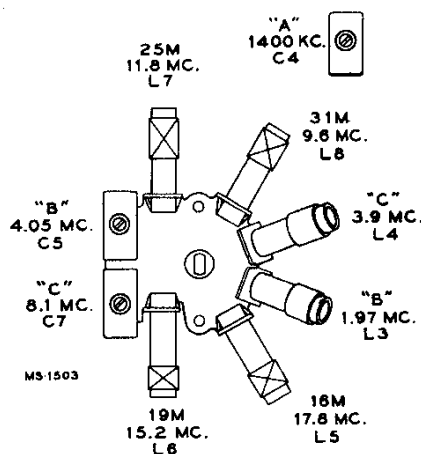

Tuner Adjustment Locations—Antenna

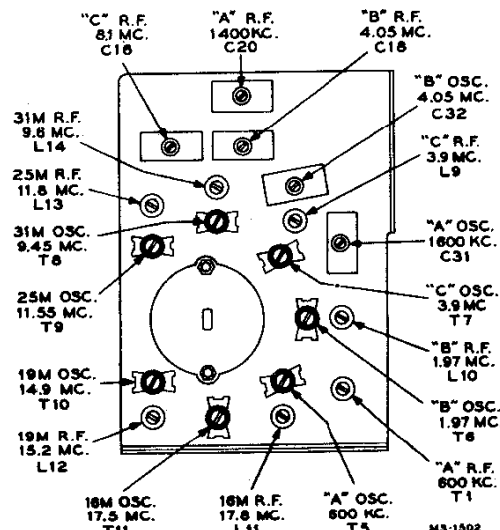


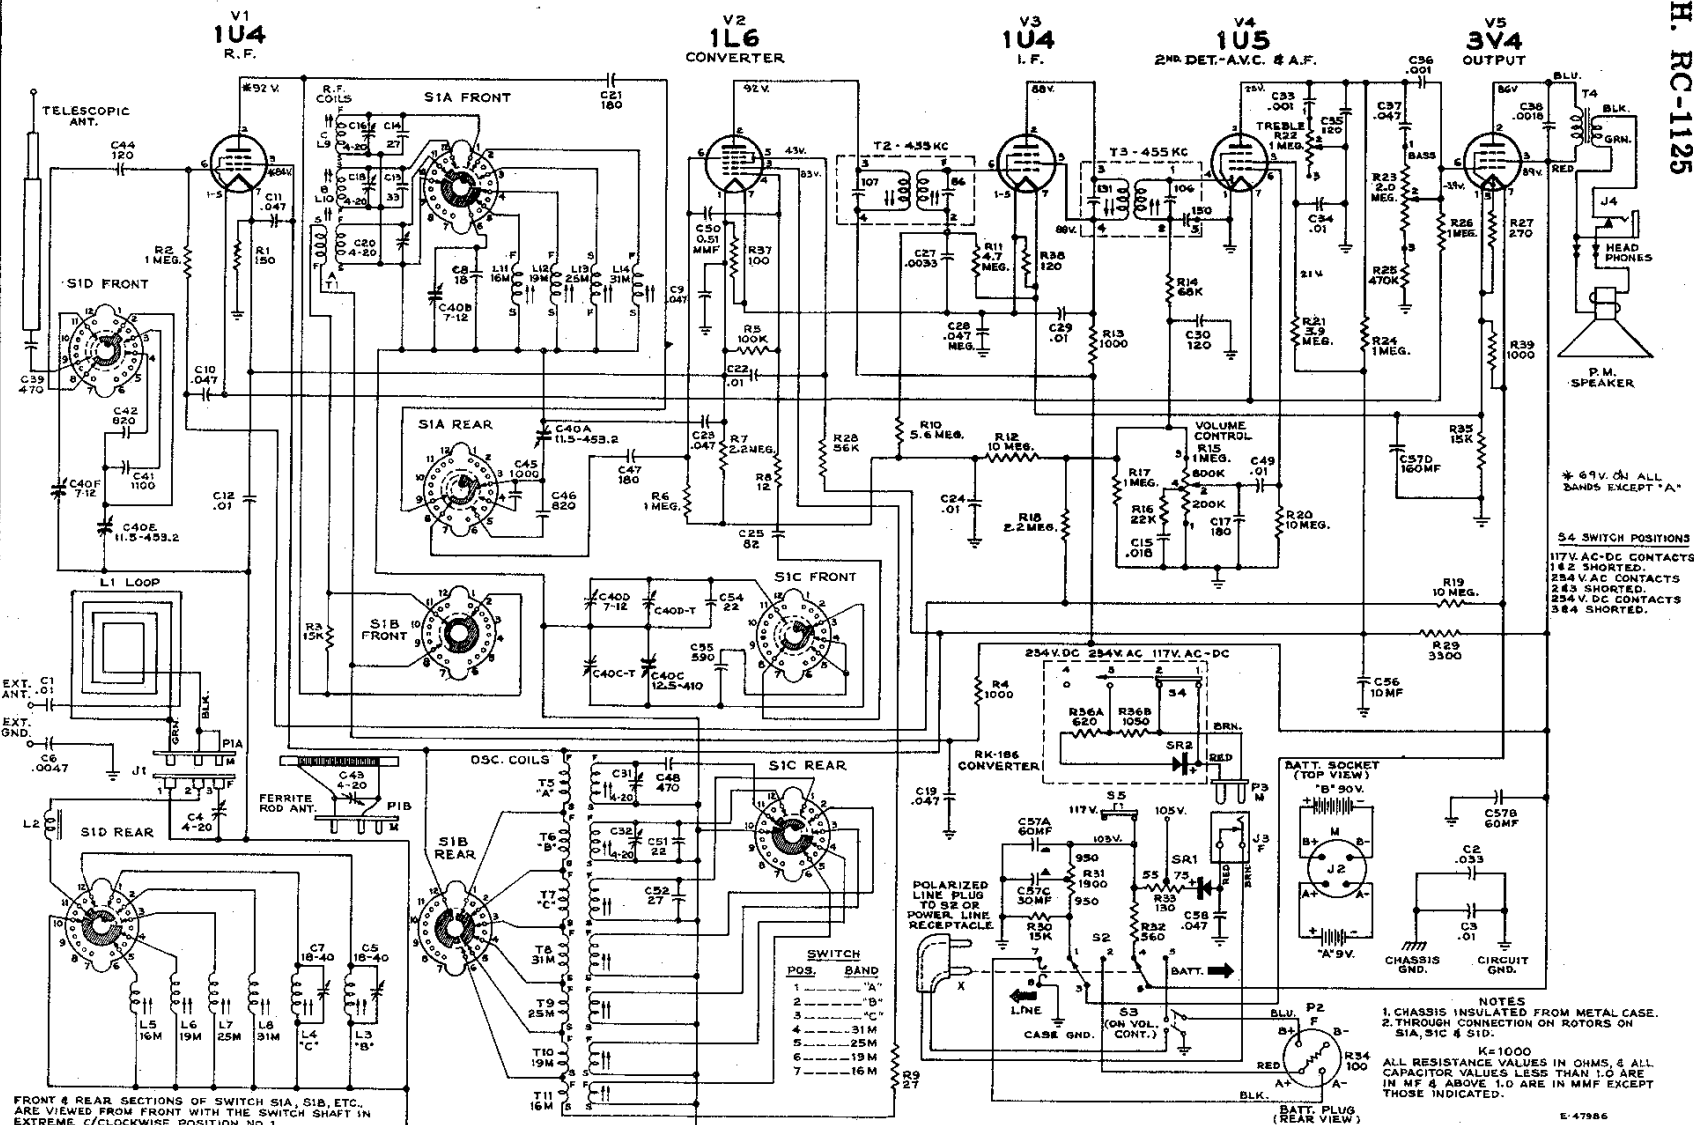

Schematic Diagram—Chassis No. RC-1125

MODEL 3-BX-671, Ch. RC-1125

General Information

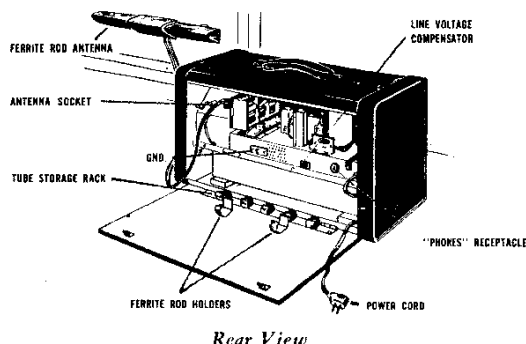

Rear View

AC-DC OPERATION

For 105 to 125 volts, 25-60 cycles AC or 105 to 125 volts DC operation—Be sure that the power line used has the correct voltage and frequency before turning on the receiver. Open case back, remove power cord plug from chassis socket, and insert in outlet. Feed power cord through the notch on the lower right side of the case back.

RK-186 VOLTAGE CONVERTER

For 210 to 250 volts, 25-60 cycles AC or 210 to 250 volts DC operation—Pull open case back and remove L-shaped metal bracket held by single self-tapping screw located between headphone jack and power cord. Insert RK-186 Converter in socket provided with metal tab facing to the rear. Secure RK-186 Converter to chassis by replacing screw through tab hole.

BATTERY OPERATION

Installation of Battery Pack—Insert battery cable plug into battery socket, installing battery pack with plug side facing toward the front.

For Battery Operation—Insert polarized power cord plug all the way into the chassis socket. Store excess power cord neatly to the right side of the battery pack. Close case back securely.

CARE OF INSTRUMENT CASE

To best preserve the appearance and serviceability of the instrument case, keep it clean. For this purpose, any mild soap will do, if applied as a lather and the dirt removed with a dry, clean cloth. Abrasives, commercial cleaning fluids, nail polish remover and the like should not be used.

Should leather become dry from cleaning or aging, the natural oils should be replaced. For restoration purposes, a number of applications of 10 to 20 per cent of sulfonated castor, or neatsfoot, or cod oil may be made as required.

LINE VOLTAGE COMPENSATOR

Weak reception may result from sub-normal power line voltage. If determined as the cause (check voltage rating with power company), the Line Voltage Compensator is provided to improve reception by switching to "LOW LINE VOLTAGE" position. To use, break the caution label seal, and move the switch slot to the right. Use of this feature is not recommended unless the line voltage is 105 volts or less.

USE OF ANTENNAS

Built-In Loop—For Standard Broadcast

Contained in the hinged lid of the case, this antenna is in use as long as it remains plugged into the antenna socket. It is possible to improve reception by rotating the receiver.

Ferrite Rod—For Standard Broadcast—Low Signal/Noise Areas

To improve reception within steel buildings, automobiles, etc., the ferrite rod antenna may be used. Remove loop antenna plug from its socket. Remove ferrite rod antenna from spring clips inside back cover, unwind wire extension, and insert cable plug into antenna socket. The ferrite rod antenna may be secured on a window in a horizontal position, by pressing the suction cups firmly against the glass. Reception may be improved by changing the position of the antenna.

External—For Standard Broadcast—Weak Signal Areas

A terminal for outside antenna connection is located on the hinged lid of the case. Connect a wire to this terminal and suspend approximately 60 to 100 feet in space, at least 50 feet in a horizontal position.

Telescopic Rod—For Short Wave

Concealed within the case on the right, this antenna is used for reception on any one of the six Short Wave bands. To use, press release button on lower right side of case, and antenna top will appear above its opening. Grasp antenna top, and pull up antenna sections until a distinct snap or click results. For best reception, all sections should be fully extended.

NOTE: Short Wave reception is impossible unless bottom (Satin Finish) section of antenna is snapped into its elevated position.

Stock No.	DESCRIPTION	Stock No.	DESCRIPTION
	CHASSIS ASSEMBLIES RC 1125		
78135	Board—Baffle board and grille screen less speaker	78140	33 mmf., $\pm 10\%$, 500 volts (C13)
78104	Board—"Gnd" board	78142	120 mmf., $\pm 10\%$, 500 volts (C30, C35, C44)
78091	Bushing—Fibre bushing for chassis mounting shelf	78137	Capacitor—Fixed, headed-lead:— 0.51 mmf., $\pm 10\%$, 500 volts (C50)
78108	Capacitor—Variable tuning capacitor complete with drive drum (C40A, C40B, C40C, C40D, C40E, C40F, C40C-T, C40D-T)	39644	Capacitor—Fixed, mica:— 470 mmf., $\pm 5\%$, 500 volts (C48)
		76932	470 mmf., $\pm 20\%$, 300 volts (C39)
		74929	590 mmf., $\pm 2\%$, 500 volts (C55)
		78143	820 mmf., $\pm 5\%$, 300 volts (C42, C46)
78146	Capacitor—Capacitor (82 mmf.) and resistor (12 ohms) assembly (C25, R8)	39652	1000 mmf., $\pm 5\%$, 300 volts (C45)
	Capacitor—Adjustable, mica:—	78144	1100 mmf., $\pm 2\%$, 500 volts (C41)
78130	4-20 mmf. (C4, C16, C18, C20)		Capacitor—Electrolytic comprising:— 1 section of 60 mfd., 350 volts, 1 section of 60 mfd., 150 volts, 1 section of 30 mfd., 150 volts, 1 section at 160 mfd., 25 volts (C57A, C57B, C57C, C57D)
78131	4-20 mmf. (C31, C32)		Capacitor—Fixed, electrolytic:— 10 mfd., 150 volts (C56)
78132	20-50 mmf. (C5, C7)	78145	Capacitor—Fixed paper moulded:— .001 mfd., 1000 volts (C33, C36)
73960	Capacitor—Fixed, ceramic, High "K" disc:— 10,000 mmf., $\pm 100\%$, -0% ; 500 volts (C, C12, C22, C24, C29, C34)	75643	.0018 mfd., 1600 volts (C38)
	Capacitor—Fixed, ceramic, non-insulated:	73795	.0033 mfd., 600 volts (C27)
33101	22 mmf., $\pm 10\%$, 500 volts	73920	.0047 mfd., 600 volts (C6)
	Temp. coef. = -750 (C51, C54)	73561	.01 mfd., 400 volts (C49)
72570	27 mmf., $\pm 10\%$, 500 volts	58476	.018 mfd., 400 volts (C15)
	Temp. coef. = -750 (C52)	73552	.033 mfd., 400 volts (C2)
	Capacitor—Fixed, ceramic, insulated, High "K" type:	73558	.047 mfd., 200 volts (C9, C10, C23, C28, C37)
78138	18 mmf., $\pm 10\%$, 500 volts (C8)	73553	.047 mfd., 400 volts (C11, C19)
78139	160 mmf., $\pm 10\%$, 500 volts (C17, C21, C47)	73592	.047 mfd., 600 volts (C58)
	Capacitor—Fixed, ceramic, non-insulated, High "K" type:—	73935	Clip—Mounting clip for I.F. transformer
78141	27 mmf., $\pm 10\%$, 500 volts (C14)		

MODEL 3-BX-671,
Ch. RC-1125

Stock No.	DESCRIPTION	Stock No.	DESCRIPTION
78123	Coil—Antenna coil—"B" band (L3)	74918	Transformer—1st I.F. transformer complete with adjustable core (T2)
78124	Coil—Antenna coil—"C" band (L4)	73037	Transformer—2nd I.F. transformer complete with adjustable core (T3)
78128	Coil—Antenna coil—16 meter band (L5)	78100	Transformer—Output transformer (T4)
78127	Coil—Antenna coil—19 meter band (L6)	33726	Washer—"C" washer for tuning knob shaft
78126	Coil—Antenna coil—25 meter band (L7)		SPEAKER ASSEMBLIES
78125	Coil—Antenna coil—31 meter band (L8)		871933-2
78123	Coil—Loading coil (L2)		
78109	Coil—Oscillator coil—"A" band (T5)	74378	Gasket—Rubber gasket (3/4") for speaker
78110	Coil—Oscillator coil—"B" band (T6)	78147	Speaker—5/8" P.M. speaker complete with cone and voice coil (3.2 ohms)
78111	Coil—Oscillator coil—"C" band (T7)		MISCELLANEOUS
78115	Coil—Oscillator coil—15 meter band (T11)		
78114	Coil—Oscillator coil—19 meter band (T10)	78196	Antenna—Ferrite rod antenna complete with winding
78113	Coil—Oscillator coil—25 meter band (T9)	78187	Antenna—Lid and antenna loop assembly complete (L1, C1)
78112	Coil—Oscillator coil—31 meter band (T8)	78157	Antenna—Telescopic antenna
78116	Coil—RF coil—"A" band (T1)	78184	Back—Case back complete
78117	Coil—RF coil—"B" band (L10)	78158	Bearing—Bearing (phenolic tube) for telescopic antenna
78118	Coil—RF coil—"C" band (L9)	78183	Bearing—Case lid bearing
78122	Coil—RF coil—16 meter band (L11)	78174	Bracket—"U" shape bracket (clevis) for carrying handle links
78121	Coil—RF coil—19 meter band (L12)	78166	Button—Telescopic antenna push button
78120	Coil—RF coil—25 meter band (L13)	78165	Cap—Telescopic antenna screw-on cap
78119	Coil—RF coil—31 meter band (L14)	75967	Capacitor—Adjustable, mica, 4.20 mmf. (C43)
7903	Connector—Earphone jack (J4)	78190	Case—Case only for ferrite rod antenna
71040	Connector—2 contact female connector for 220 volt operation (J3)	78153	Case—Case less sides, handle, links, feet front and back cover
38904	Connector—2 contact female connector for AC line cord	78170	Catch—Case catch
78133	Connector—3 contact female connector for antenna leads (J1)	78186	Catch—Case back catch—part of case back
30567	Connector—4 contact female connector for battery cable (P2)	78185	Clip—Mounting clip for ferrite rod antenna
78094	Control—Bass tone control (R23)	78111	Clip—Clip for case catch—bottom
78093	Control—Treble tone control (R22)	78177	Connector—3 contact male connector for antenna loop and for ferrite rod antenna (PIA, PIB)
78092	Control—Volume control and power switch (R15, S3)	78162	Contact—Bottom contact for telescopic antenna
70022	Cord—Power cord and plug	78163	Contact—Formed spring clip and contact for telescopic antenna—upper
*72953	*Cord—Station selector pointer drive cord (approx. 15" overall)	78164	Contact—Lower contact and push button catch
72953	Cord—Station selector pointer drive cord (approx. 22" overall)	78195	Cover—Bottom cover for ferrite rod antenna
72953	Cord—Station selector pointer or band indicator pointer drive cord (approx. 24" overall)	78191	Cup—Suction cup for ferrite rod antenna case
78242	Cushion—Rubber cushion for baffle board (4 1/8" long)	78159	Cushion—Adhesive cushion for bottom of antenna bearing
78105	Cushion—Rubber cushion for baffle board (10 1/8" long)	75470	Cushion—Rubber cushion for battery support
78097	Eyelet—Station selector pointer drive cords connecting eyelet	78193	Cushion—Rubber spacer cushion (1/2" x 13/16" dia.) for ferrite rod antenna
74838	Grommet—Power cord strain relief (1 set)	78194	Cushion—Rubber spacer cushion (1/2" x 328" I.D. x 13/16" O.D.) for ferrite rod antenna
16058	Grommet—Rubber grommet for mounting gang capacitor	78181	Dial—Dial scale less escutcheon
71851	Grommet—Rubber grommet for speaker mounting	77012	Emblem—"RCA Victor" emblem
78086	Guide—Station selector pointer guide rail and pulley assembly	78182	Escutcheon—Dial scale escutcheon less dial
78099	Nut—Speed nut for tuner shield	78169	Foot—Rubber foot
78098	Nut—Speed nut for baffle board mounting (4 req'd) or for tuner shield	78173	Handle—Carrying handle
78103	Nut—Speed nut (twin type) to fasten pointer bracket	78156	Hinge—Hinge for back cover (2 req'd)
18469	Plate—Bakelite mounting plate for electrolytic	78167	Insulator—Nylon insulator for case lid
78080	Pointer—Band indicator pointer	78171	Latch—Latch for back cover
78087	Pointer—Station selector pointer	78187	Lid—Case lid and antenna loop assembly (L1, C1)
78107	Pulley—Band indicator drive pulley and knob assembly	78175	Link—Carrying handle link
72502	Pulley—Drive cord pulley—part of pointer guide rail or for station selector pointer drive cord pulley	78149	Knob—Bass tone control knob
78101	Rectifier—Selenium rectifier (SR1)	78151	Knob—Range switch knob
78136	Resistor—Wire wound:— comprising 1 section of 75 ohms, 5 watts and 1 section of 55 ohms, 5 watts (R33)	78150	Knob—Treble tone control knob
78102	Resistor—Fixed, composition:— 27 ohms, $\pm 10\%$, 1/2 watt (R9)	78148	Knob—Tuning control or volume control and power switch knob
503027	100 ohms, $\pm 10\%$, 1/2 watt (R34, R37)	78414	Map—World map and time chart
503110	120 ohms, $\pm 10\%$, 1/2 watt (R38)	73203	Nut—Speed nut to fasten "RCA Victor" emblem
503115	150 ohms, $\pm 10\%$, 1/2 watt (R1)	78192	Plate—Bakelite plate for ferrite rod antenna trimmer capacitor
503127	270 ohms, $\pm 10\%$, 1/2 watt (R27)	78172	Plate—Mounting plate for carrying handle
513156	560 ohms, $\pm 10\%$, 1 watt (R32)	78180	Rack—Spere tube rack
503210	1000 ohms, $\pm 10\%$, 1/2 watt (R4, R13, R39)	78183	Screw—#4-40 x 1/4" cross recessed flat head tapping screw to fasten dial to escutcheon
503233	3300 ohms, $\pm 10\%$, 1/2 watt (R29)	77974	Side—Case side—L.H.—complete with leather belting
503315	15,000 ohms, $\pm 10\%$, 1/2 watt (R3, R30, R35)	77975	Side—Case side—R.H.—complete with leather belting
503322	22,000 ohms, $\pm 10\%$, 1/2 watt (R16)	78188	Spring—Case lid spring
503356	56,000 ohms, $\pm 10\%$, 1/2 watt (R28)	78160	Spring—Push-up spring for telescopic antenna
503368	68,000 ohms, $\pm 10\%$, 1/2 watt (R14)	74734	Spring—Spring clip for control knobs
503410	100,000 ohms, $\pm 10\%$, 1/2 watt (R5)	78154	Strap—Leather strap for L.H. case side
503447	470,000 ohms, $\pm 10\%$, 1/2 watt (R25)	78155	Strap—Leather strap for R.H. case side
503510	1 megohm, $\pm 10\%$, 1/2 watt (R2, R6, R17, R24, R26)	78413	Strap—Strap for holding ferrite rod antenna lead
503522	2.2 megohm, $\pm 10\%$, 1/2 watt (R7, R18)	78168	Support—Battery support (wood)
503539	3.5 megohm, $\pm 10\%$, 1/2 watt (R21)	78161	Support—Telescopic antenna bearing support—at top of antenna
503547	4.7 megohm, $\pm 10\%$, 1/2 watt (R11)	77467	Washer—Felt washer for knob
503556	5.6 megohm, $\pm 10\%$, 1/2 watt (R10)	78152	Washer—Insulating washer for control knobs
503610	10 megohm, $\pm 10\%$, 1/2 watt (R12, R19, R20)	78178	Washer—Insulating washer for case lid pivot
78088	Shaft—Tuning knob shaft	78179	Washer—Vellutex washer for dial and bezel mounting
78089	Shield—Bakelite shield for tuner unit	78412	Washer—Vellutex washer for case catch clip
73584	Shield—Tube shield		RK 186 CONVERTER
78134	Socket—Tube socket, miniature, 7 pin, floating	78303	Connector—2 contact male connector (P3)
73117	Socket—Tube socket, miniature, 9 pin, wafers	77958	Rectifier—Selenium rectifier (SR2)
74305	Spring—Band indicator pointer drive cord spring	78302	Resistor—Wire wound, comprising:— 1 section of 620 ohms, 10 watts, and 1 section of 1050 ohms, 5 watts (R36)
76332	Spring—Station selector pointer drive cord spring	78304	Switch—Voltage change switch (S4)
71039	Switch—Battery switch (S2)		
78096	Switch—Weak signal alert switch (S5)		
78106	Switch—Range switch (S1)		

*Note:—72953 is a spool containing 250 ft. of cord.