


F14, F24, F33, F43

My antenna jack is loose or broken. How can I fix it?

Check for a loose antenna jack assembly. Remove the antenna jack and add Loctite® to the antenna jack threads (as shown below). Use an ICOM "Y" spanner (part number 8960000110) to tighten the antenna jack. Resolder the antenna jack to the antenna PCB using lead free solder (silver solder).

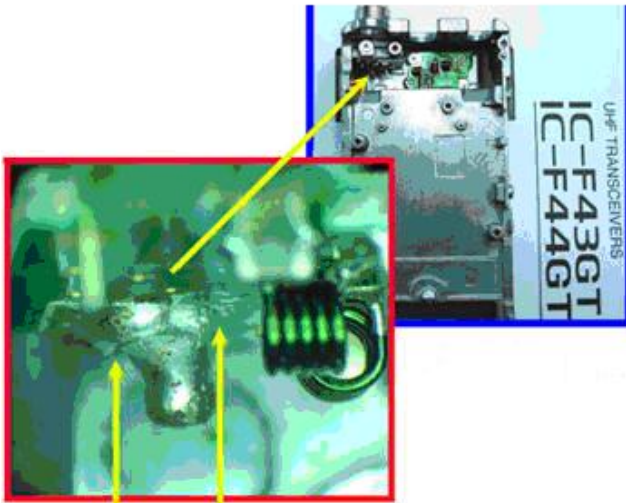

Broken Solder Connection on Antenna and PCB

Loctite Added to Antenna Jack

