

# The NATIONAL NC 400 COMMUNICATIONS RECEIVER



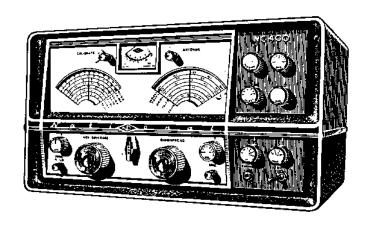

NATIONAL RADIO COMPANY, INC.

# INSTRUCTION MANUAL for the

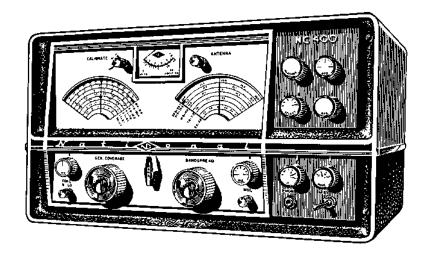

# NATIONAL NC-400 COMMUNICATIONS RECEIVER

#### SECTION 1. DESCRIPTION

#### 1.1 GENERAL

The National Radio Company Model NC-400 is a dual-conversion communications receiver with 18 tubes including rectifier and voltage regulator for the reception of CW, conventional AM, and single-sideband signals. The frequency range of 540 kc to 31 mc is covered in seven bands, and an extreme IF selectivity range from 16 kc to 150 cycles is provided. The bandspread tuning scale is calibrated for the 80, 40, 20, 15 and 10 meter amateur bands.

The receiver is housed in a two-tone metal cabinet of modern functional design. All operating controls and indicators are on the front panel, with test jacks and terminals on the rear chassis panel.

Sensitivity is approximately 1 uv for a 10 db signal-to-noise ratio, and signal circuits are designed to obtain a constant stage gain when tuned through a band or switched from one band to another. Frequency stability is 0.002 percent long-term drift after warm-up. All early tuned circuits are designed to minimize cross-modulation and the generation of spurious frequencies due to overload effects.

#### 1.1.1 Special Features

Single-Sideband Provisions. A pentagrid converter is used as a heterodyne detector with a separate beat oscillator. The beat oscillator may be crystal-controlled if desired. Sideband selection (on standard receivers) is provided by 14 tuned circuits in the second IF section. The center frequency is shifted by a panel selector switch for reception of one sideband or the other.

Fixed-Channel Operation. The HF oscillator is provided with five crystal sockets which may be used for fixed-channel operation of the receiver. Crystal-controlled channels are selected by a front-panel switch. In addition, the HF oscillator may be controlled from an external master oscillator also selected by the front-panel switch. A CALIBRATE-tune switch permits the use of the S-meter to tune the receiver to crystal or external oscillator frequency in the absence of a signal.

Diversity Provisions. A special Diversity Modification Kit is available. It provides external control of all oscillators (HF oscillator, second conversion oscillator, and beat-frequency oscillator). With diversity modifications, rear-panel selection at the receiver makes possible the use of the receiver either as a master receiver or as a slave receiver fed from external oscillator sources. All NC-400 oscillators are designed so that neither auxiliary amplifiers nor special circuits are required for adequate mixer drive when the receiver is diversity-modified. Required external excitation is approximately 0.5 volt (rms).

Detector output, AGC, and IF signal information are available at the rear-panel connectors. The IF output level is 0.01 volts.

Plug-in Units. A plug-in crystal calibrator unit is available to provide crystal-controlled marker frequencies at 100 kc and 1 mc intervals.

The crystal filter in the receiver IF section is plugged in and may be removed for the substitution of a mechanical filter housing which will accept three commercial-type mechanical filters. Panel control of filter selectivity is provided.

#### 1.2 CIRCUIT DESCRIPTION

The NC-400 has two RF amplifier stages with three tuned circuits at the signal frequency. Dual mixers are used for the first conversion stage, one converting to 455 kc for single conversion on the four lower bands, the other to 1,270 kc for double conversion on the three highest bands. The second converter is crystal controlled and converts from 1,720 kc to 455 kc. The high-frequency oscillator circuit may be tuned manually or may be crystal-controlled for fixed-channel operation or may be driven by an external oscillator.

The first IF section has two tuned circuits at 1,720 kc. The second IF section uses three tubes and six tuned circuits at 455 kc for 16 kc, 8 kc, and 4 kc bandwidths: 14 tuned circuits for 3.5 kc bandwidth and single-sideband selection and 10 tuned circuits plus a crystal filter for bandwidths to 150 cycles.

Separate detector, noise limiter and AGC circuits are provided for optimum reception of either AM signals or CW and SSB signals. A heterodyne detector with a pentagrid converter is used for CW or SSB reception, a separate beat oscillator stage providing optimum stability and constant injection level. The beat oscillator may be crystal-controlled by the insertion of a suitable crystal into the socket provided.

A two-stage audio amplifier operates headphones or a speaker and provides a 3.2-ohm unbalanced output and a 600-ohm balanced output. The power supply is integral with the receiver and includes both filament and plate regulation for the HF oscillator.

A functional block diagram of the NC-400 is shown in Figure 1. It relates to the description of the major receiver sections to follow.

#### 1,2,1 RF Amplifier

The two-stage RF amplifier with three tuned circuits is used on all bands. The four-section tuning capacitor has the general coverage and band-spread tuning sections on separate frames. Nilvar plates and high-quality ceramic coil forms contribute to the exceptional frequency stability of the NC-400. Trimmers, padders and other circuit capacitances are carefully selected for zero temperature coefficient or required negative compensation. AGC is applied to both RF amplifier stages as well as to the three IF amplifier stages.


A band-switch section in the cathode circuits of the RF amplifiers selects the proper cathode resistor for these stages to maintain a constant gain on all bands. The manual RF Gain control is in the cathode circuit of the second RF amplifier and two of the IF amplifiers. The receiver frequency range of 540 kc to 31 mc is covered in 7 bands: therefore, each band covers a frequency range of one octave or less, contributing to constant gain over the band and accurate tracking of tuned circuits.

#### 1.2.2 Conversion

The first conversion stage is a dual mixer with two tubes in parallel. A band-switch section selects the appropriate mixer by opening the cathode circuit on the other mixer. Mixer 1 operates on bands 1, 2, 3 and 4, for single conversion on these bands. Excellent image rejection is obtained with the three tuned circuits in the RF amplifier, and dual conversion is not required. The HF oscillator operates 455 kc above the signal, and the mixer provides a 455-kc signal for the second IF section.

Mixer 2 operates on bands 5, 6 and 7. The HF oscillator is 1,720 kc above the signal frequency, and the mixer provides a 1,720-kc signal for the first IF section. A crystal-controlled converter converts the 1,720-kc signal to 455kc for application to the common second IF section.

The HF oscillator may be crystal-controlled for fixed-channel receiver operation when suitable crystals are plugged into the five sockets provided. Panel switches select channels and an S-meter tuning circuit so that the receiver may be tuned to channel frequency in the absence of a signal. An external oscillator may be substituted for the HF oscillator, by using the connector on the chassis rear panel.

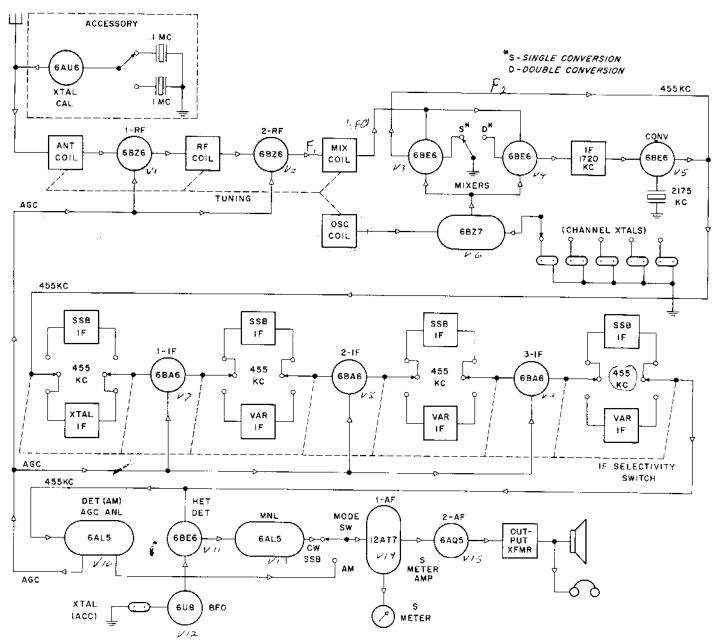

Û

Figure 1. Block Diagram NC-400

#### 1.2.3. IF Amplification

The 1st IF section uses two tuned circuits at 1,720 kc. It is not in operation on the four lowest bands.

The 2nd IF section is essentially a dual IF channel. Although both complete channels are not operated simultaneously, appropriate sections are selected by the IF selector switch to provide the extreme selectivity range offered by the NC-400. The top channel consists of 14 tuned circuits with a resultant bandwidth of 3.5 kc (at 6 db) and is used for SSB reception. The IF selector switch provides for selection of either sideband by switching the center frequency of the 14 tuned circuits. Selected fixed capacitors are added or removed from the tuned circuits to shift tuning from one sideband to the other. The positions marked SB1 and SB2 indicate the sideband selected.

The VS (very sharp) position of the IF selector switch substitutes the crystal filter of the bottom channel for the first IF transformer of the top channel. Selectivity may be increased from 3.5 kc to 150 cycles through the use of the five-position crystal SELECT switch.

With the IF selector switch in the S(sharp), M(medium) or B(broad) positions, the bottom IF channel is used with the crystal circuit by-passed. Six tuned circuits provide bandwidths of 4 kc, 8 kc and 16kc. The tertiary windings on two of the IF transformers in this section are switched to provide this selection.

AGC is applied to all three IF stages. The first two have a switch section in series with the cathode circuit to maintain constant band-to-band gain by appropriate selection of cathode resistors. The manual RF Gain control is connected to the cathode circuits of the first two IF stages as well as in the 2nd RF amplifier. Figure 2 shows the frequency response of the IF section for all positions of the IF selector switch.

#### 1.2.4 Detection

Individual detector and noise-limiter circuits are provided for reception of AM, or CW and SSB signals. The AM detector is a conventional diode circuit followed by a diode automatic noise limiter. The first position of the MODE switch provides AM detection with the automatic noise limiter; the second position removes the automatic noise limiter from the circuit.

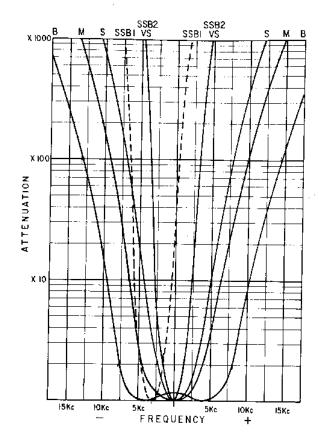


Figure 2. IF Selectivity Curves

For these MODE switch positions the audio amplifier section is connected to the AM detector load circuit and the beat frequency oscillator and heterodyne detector circuits are by-passed. A section of the MODE switch opens the cathode circuit of these stages when receiving AM signals. AGC is supplied by the AM detector circuit and is applied to both RF stages and the three IF stages.

In the SSB position of the MODE switch, the beat frequency oscillator and heterodyne detector are used and the audio amplifier section is connected to the manual noise limiter stage following the heterodyne detector. The AGC circuit from the AM detector is still in operation but is modified for SSB reception as described in Section 1.2.5.

The last position of the MODE switch is for CW reception. The circuit is the same as for SSB reception, but the AGC circuit is grounded. Tone CW (MCW) signals can be received through the use of one of the AM positions.

#### 1.2.5 AGC for SSB Reception

A unique circuit provides fast attack and slow decay of the AGC voltage for reception of SSB signals. The diode detector for AM reception operates continuously in all positions of the MODE switch, and a small do voltage is applied to the diode circuit providing a small amount of delayed AGC. With the MODE switch in the SSB position, a silicon diode is shunted across the AGC filter resistor. The diode polarity is such as to effectively short the resistor during an SSB audio peak, rapidly increasing the AGC voltage. A comparatively large AGC filter capacitor is quickly charged at this time. The capacitor discharges slowly through the filter resistor due to the opposite polarity of the diode. The resultant AGC voltage rises quickly during SSB audio peaks and decreases slowly, preventing the characteristic audio thump and background noise usually associated with SSB reception.

#### 1.2.6 BFO

A separate beat frequency oscillator provides optimum stability and injection level. A conventional BFO frequency control allows pitch adjustment for reception of CW and SSB signals. A crystal socket is provided for crystal control of the BFO, using a 455-kc crystal.

#### 1.2.7 Audio Amplification

The audio amplifier has two-stages and delivers 1 watt of audio power with less than 10 per cent distortion. Two output transformer windings provide a 3.2-ohm unbalanced, and a 600-ohm balanced output connection. The input audio amplifier is a dual triode, with one section used as the S-meter amplifier. A tone control allows suppression of high noise frequencies. An input connection to the audio section is at the accessory socket on the chassis rear panel. Figure 3 shows the frequency response of the audio amplifier.

#### 1.2.8 S-Meter

The S-meter gives the operator a true indication of relative strength of incoming signals. The meter is calibrated in S units from 0 to 9 and in decibels from S-9 to 40 db over S-9. A potentiometer is provided on the chassis to zero-set the meter.

#### 1.3 ACCESSORIES

Crystal Calibrator (XCU 400). A socket for the Crystal Calibrator unit is provided on the receiver chassis. A panel switch selects, 100 kc or 1 mc marker frequencies. Refer to Section 2 for installation and operating instructions.

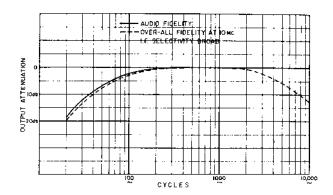


Figure 3. Audio Response

Fixed Channel Operation. Five crystal sockets, permitting crystal control of the HF oscillator, are provided on the receiver chassis. A panel switch selects the crystals for fixed-channel receiver operation. Crystal frequencies are 455 kc above the channel frequency on bands 1, 2, 3 and 4 and 1,720 kc above the signal for bands 5, 6 and 7. The HF oscillator may also be controlled by an external master oscillator selected by a panel switch. An oscillator input jack is provided on the chassis rear panel.

A CALIBRATE-tune switch in the S-meter circuit permits use of the S-meter to tune the receiver to the channel frequencies in the absence of a signal.

Crystal Controlled BFO. For a single-sideband reception the BFO may be crystal-controlled by removing the plug-mounted resistor (P1A) in the BFO circuit and inserting a 455-kc crystal.

Mechanical IF Filter Housing. A commercial-type mechanical filter may be used by removing the plug-in crystal filter and substituting the accessory Mechanical Filter Housing. This housing will accept up to three mechanical filters with bandwidths of 500 cps to 16kc. If desired, matched single-sideband filters may be used in the filter accessory. The Mechanical Filter Housing provides suitable matching circuits and a means of front panel selection of the desired response.

In the panel control OFF position, normal IF responses are obtained.

Diversity Modification. The special Diversity Modification Kit permits internal or external control of all oscillators. The kit includes connectors, rotary switches, switch shaft extensions and a single preamplifier stage. All mounting holes are drilled to permit installation of the added components with a minimum of receiver modification.

When diversity modification is installed, the following additional functions are provided on the chassis rear panel:

1. Intermediate oscillator input/output

- 2. Beat-frequency oscillator input/output
- Intermediate oscillator master/slave switch
- 4. Beat-frequency oscillator master/slave switch
- 5. High-frequency oscillator master/slave switch

The audio section input circuit and the AGC circuit are available at the accessory socket (P2). Jumpers in the accessory plug (P2A) close these circuits for standard receiver operation.

#### SECTION 2. INSTALLATION

#### 2.1 UNPACKING

Model NC-400 Communications Receiver is packed and shipped in accordance with best commercial procedures. No special information is required for unpacking, other than use of normal caution. After unpacking, thoroughly check the equipment for damage or defects that may have occurred in transit. Check all tubes and plug-in components to make sure they are properly seated in their sockets.

#### 2.2 PREPARATION FOR USE

The NC-400 is designed for table or rack-mounted operation. For rack mounting, remove the dust cover and outer panel bezel to expose the receiver panel. The panel edges are drilled for standard rack mounting. Place the receiver in a postion which permits free access of air for ventilation, for either table or rack mounted operation. Refer to Figure 4 for connector and terminal board information.

#### 2.2.1 Power Supply

The NC-400 may be operated from either a 115 v or 230 v 50/60 cycle power main. Before applying power to the receiver, check the position of switch S7 (115-230 v) on top of the chassis near power transformer (T35 in Figure 6). Place switch S7 in the proper position for the power source to be used.

#### 2.2,2 Antenna

The impedance at the input connector J1 is designed to match a 52-ohm coaxial transmission line. The chassis antenna receptacle mates with an Amphenol UHF series cable-plug, catalogue number 83-1SP (JAN-PL259). A single wire antenna may be used; connect the lead-in wire to the cable-plug center terminal and a ground lead to the receiver chassis.

Any of the conventional dipole or beam antennas, with a 50 to 70 ohm transmission line, provide an ideal antenna system. An existing antenna with a 300-ohm balanced line may also be used, provided an antenna coupler or balun is employed to match the antenna to the 52-ohm unbalanced input of the NC-400 receiver.

The exceptional sensitivity and signal-to-noise characteristics of the receiver are fully attained only with proper antenna and ground facilities.

#### NOTE

If the receiver is used in close proximity to the transmitting equipment some provision must be made to short the antenna terminals to ground during transmitting periods to prevent damage to the antenna coils. This is most easily accomplished by means of a relay connected to the antenna terminals and ground. The relay should be located within six inches of the antenna terminal strip to prevent excessive pick-up.

#### 2.2.3 Audio Output

A permanent-magnet dynamic speaker, such as the National type NTS-2 or equivalent, may be connected to the 3.2-ohm terminals of the terminal board TB-2 located on the chassis rear panel. Headphones of the high-impedance type may be plugged into the PHONES jack with a standard plug. The loudspeaker is automatically silenced when the phone plug is inserted.

A 600-ohm terminal is available at TB-2 for receiver operation with a 600-ohm-line. The output transformer winding for this impedance is ungrounded for external circuit application.

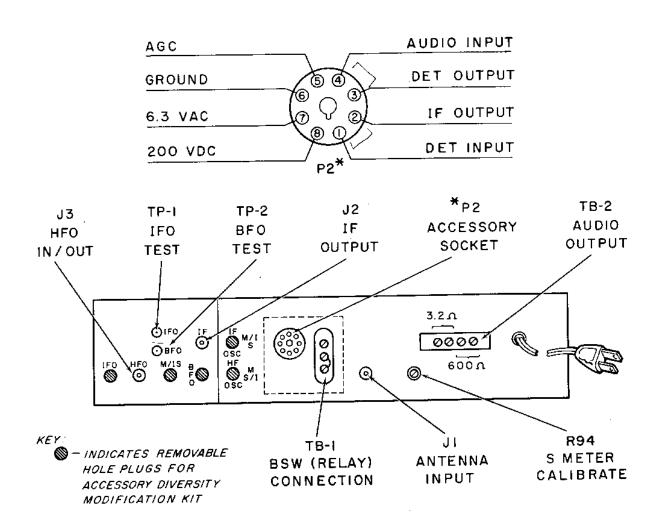


Figure 4. Rear Chassis Panel

#### 2.2.4 Relay Connection

A three terminal connection strip (TB-1) is mounted on the chassis rear panel. These terminals allow external relay control of the receiver's send-receive circuit. The NC-400 is shipped from the factory with a jumper connected between terminals 2 and 3. Relay contacts connected to terminals 1 and 2 will parallel the panel STBY/REC switch (S8) and provide relay control of the switch circuit when placed in the STBY(standby) position. Place panel switch in REC (receive) position to overide the external relay.

Removing the jumper and connecting the relay contacts to terminals 2 and 3 inserts the contacts in series with the panel STBY/REC switch. With this connection the panel switch must be in REC position for relay control of the send-receive circuit. Placing the panel switch in STBY position opens the relay circuit.

#### 2.3 ACCESSORIES

The NC-400 is designed to accommodate several accessory units. Chassis sockets are provided for the accessories described in the following paragraphs. The standard receiver includes a crystal filter unit mounted in sockets, which will also accommodate a mechanical filter housing.

# 2.3.1 Crystal Calibrator

The calibrator socket (P3) is factory wired so that the National XCU-400 Crystal Calibrator unit may be inserted. The CALIBRATE switch (S9), on the receiver panel, selects the choice of marker frequency. Figure 6 shows the location of the calibrator socket on the chassis. Refer to Section 6 for circuit information and operating instructions.

#### 2.3.2 Oscillator Crystal Control

Five crystal sockets for crystal control of the HF Oscillator are located on top of the chassis, as shown in Figure 6. The sockets will accept type HC6/U crystal holders (or equivalent). Refer to Section 3.4 for information regarding the selection of crystal frequencies for the various bands. A panel control permits individual selection of the crystals.

An additional socket (P1) provides for crystal control of the BFO circuit. The location of this socket is indicated in Figure 6. In standard receivers, a plug (P1A) containing a resistor is inserted in this socket at the factory and must be removed when converting to crystal control of the BFO. This socket will accept crystal holders such as the HC6/U (the required crystal frequency is 455 kc).

#### 2.3.3 Mechanical Filter Housing

The standard receiver crystal IF filter is a plug-in unit and is easily removed for replacement by a mechanical-type filter housing. The selectivity and phasing

controls on the crystal filter leave two panel holes when the unit is removed. One hole will receive the selectivity control shaft of the Mechanical Filter Housing and the other is covered with a plug button. Refer to Section 6 for specific installation and operating instructions.

#### 2.3.4 Diversity Modification

The Diversity Modification Kit includes all hardware and components required to make this modification. Major parts and switch sections are partially wired to simplify the circuit changes required. All mounting holes have been drilled in the standard receiver for brackets and connectors. Refer to Section 6 for specific information and installation instructions.

An accessory socket (P2) is available on the chassis rear panel for AGC and audio information required for diversity operation. This socket provides filament and plate power for the operation of miscellaneous equipment, also access to the receiver audio input circuit and detector output circuit.

#### SECTION 3. OPERATION

#### 3.1 GENERAL

The purpose of this section is to explain the operation of the NC-400 and to help the operator to get maximum performance. The operator should familiarize himself thoroughly with the functions of the various controls. These controls are shown in the front-panel view of the receiver, Figure 5 and are referred to in the text in capital letters.

#### 3.2 CONTROLS

The controls are grouped in the following general categories and will be described in this sequence.

- a. RF section
- b. IF and Detector section
- c. Audio section
- d. Accessory

#### 3.2.1 RF Section Controls

BAND Switch. A positive detent mechanism assures precise selection of coils for each of the seven bands. As the BAND knob is turned, targets are positioned on both the general coverage and the bandspread dials to indicate the band in use.

GENERAL COVERAGE Tuning. The general-coverage dial is rim-driven by the panel GENERAL COVERAGE tuning control. This control drives the tuning condenser through a 5 to 3 reduction gear of antibacklash design. Each band is calibrated in megacycles on the dial, and a 0 to 100 logging scale is included. The general coverage dial is calibrated with red marks at 4.0, 7.3, 14.4, 21.5 and 29.7 mc. When the general coverage dial is set to these calibrations the appropriate range will be properly calibrated.

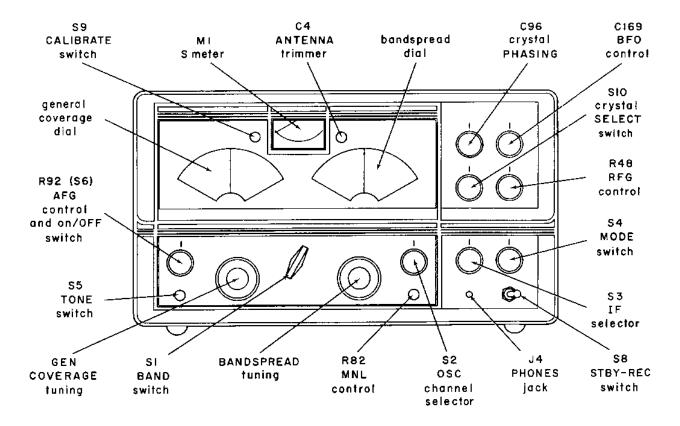


Figure 5. Panel Control Locations

BANDSPREAD Tuning. The bandspread dial and its mechanism are identical to those for general coverage except for the scale calibration which provides bandspread tuning of the amateur bands. A 0 to 100 logging scale is also included. The bandspread dial should be set to the red calibration line corresponding to frequencies of 4.0, 7.3, 14.4, 21.5 and 29.7 mc for proper calibration of the general coverage dial.

ANTENNA Trimmer. The ANTENNA control may be adjusted to match the first RF stage to the impedance of the antenna. After a signal is selected, the trimmer is adjusted for a maximum S-meter reading. If desired, the antenna may be peaked on background noise instead of a signal.

S Meter. The S meter measures signal strength with reference to the local ambient noise level. Because meter readings are related to the position of the RF Gain control, this control must be preset for proper S meter operation. To, set the control, tune the receiver to a clear channel (no station) and adjust for a 0 to 1 S meter reading on background noise.

RFG Control. The RF Gain control adjusts the sensitivity of the receiver by controlling the gain of the

second RF stage and the first two IF stages. Clockwise rotation increases the gain.

#### 3.2.2 IF and Detector Section Controls

IF Selector Switch. The IF selector is a six-position switch providing one crystal and three noncrystal degrees of selectivity, ranging from very sharp for CW reception to broad for high fidelity AM signal reception. The switch also selects either sideband of a SSB signal. The following degrees of selectivity are provided:

| Switch<br>Position                          | Bandpass<br>(at –6 db) | IF Circuit  |
|---|------------------------|---|
| B(broad) M(medium) S(sharp)                 | 16 kc<br>8 kc<br>4 kc  | Crystal filter not operat-<br>ing; six tuned circuits<br>used   |
| VS(very<br>sharp)                           | 3.5 kc                 | 10 tuned circuits; crystal<br>filter provides 5 sharper<br>degrees of selectivity to<br>150-cycle bandwidth |
| $\begin{array}{c} SB_2 \\ SB_1 \end{array}$ | 3.5 kc                 | 14 tuned circuits used;<br>bandwidth is 10 kc, 60 db<br>down  |

Crystal SELECT switch. The crystal SELECT switch provides five degrees of selectivity, from 3.5 kc to 150 cycles, with the crystal filter operating. The 1F selector switch must be in position VS for operation. The selectivity increases progressively as the crystal SELECT switch is advanced to position 5.

Crystal PHASING Control. The crystal filter PHASING control may be used only when the crystal SELECT switch is in position 1 thru 5 and the fF selector switch is in position VS. The PHASING control balances the crystal bridge circuit. The PHASING control may be used to eliminate interfering signals or heterodynes.

MODE Switch. The MODE switch selects the modes of receiver operation as follows:

| Switch Type of Position Reception |           | Circuit                               |
|-----------------------------------|-----------|---------------------------------------|
| ANL (1)<br>AM (2)                 |           | Diode with ANL and AGC Diode with AGC |
| SSB (3)                           | SSB (MNL) | Heterodyne Detector, BFO,<br>MNL, AGC |
| CW (4)                            | CW (MNL)  | Heterodyne Detector, BFO,<br>MNL      |

The BFO circuit operates simultaneously with the heterodyne detector on SSB and CW positions.

MNL Control. The MNL (manual noise limiter) control functions only with the MODE switch in positions SSB and CW. The MNL control is adjusted during SSB or CW reception for optimum noise clipping level. The optimum position will be determined by the relative strength of the received signal and the noise interference. Noise conditions vary with localities and band conditions, so the limiting level is a matter of personal choice. The MNL is double-ended and clips both positive and negative noise peaks.

#### 3.2.3 Audio Section

AFG Control. The AFG (audio frequency gain) control will remove AC power when placed in its extreme counterclockwise position. Turning the AFG control slightly clockwise will actuate the switch and power the receiver. Increasing the clockwise rotation will increase the volume for headphone or loud-speaker operation.

TONE Switch. The TONE switch has two positions, N (normal) and LO (low). In the LO position the higher audio frequencies are attenuated and low fre-

quencies predominate; in the N position the audio response is flat over the usable frequency range of the receiver. The LO position may noticeably improve the readability of AM and SSB signals in the presence of heavy noise interference.

BFO Control. The BFO (beat frequency oscillator) control varies the pitch of the audio tone when receiving CW signals. The BFO control is set so the center mark is aligned with the panel mark for normal CW reception. For SSB reception, the BFO control is adjusted so that the SSB mark is aligned with the panel mark. With the BFO control in this position the IF selector switch will properly select between SB1 and SB2 positions. It is not necessary to move the BFO control when selecting one sideband or the other. See Section 3.3.2 for SSB application.

PHONES Jack. The PHONES jack will accept a standard phone plug. Headphones of the high or low impedance type may be used. The loud-speaker is silenced automatically when the phone plug is inserted.

#### 3.2.4 Accessory Controls

CALIBRATE Switch. The CALIBRATE switch turns the XCU-400 Crystal Calibrator on or off and selects either the 0.1-mc or the 1-mc marker signals. When the XCU-400 Calibrator is plugged into the receiver the Calibrator provides a crystal-controlled test signal every 100 kc or 1 mc, so that dial calibrations may be checked. Refer to Section 6 for instructions for correcting the Crystal Calibrator frequency using station WWV.

Placing the CALIBRATE switch in the TUNE position connects the S meter to the HF oscillator circuit so that the receiver may be tuned to crystal-controlled channel frequencies in the absence of a signal. This position may be used with or without the Crystal Calibrator accessory unit.

HF Channel Selector. The HFO (high frequency oscillator) control is a seven-position switch for selecting normal, crystal-controlled, or externally controlled operation of the HF oscillator. The MAN position of this switch provides continuous manual tuning of the HF oscillator. Positions 1, 2, 3, 4, and 5 select one of five plug-in crystals for fixed-channel operation. Position EXT permits external control of the HF oscillator through the use of the HFO connector on the rear of the chassis. The HF oscillator cathode circuit is connected to the rear panel HFO connector.

STBY-REC Switch. The STBY-REC toggle switch is located on the front panel. In STBY position, this switch opens the plate supply circuit for the RF and IF stages. In REC position, the plate supply circuit is closed to operate the receiver. External relay operation of the STBY-REC switch circuit is described in Section 2.2.4.

#### 3.3. MODES OF OPERATION

Before operating the receiver, turn the power switch ON by turning the AFG control clockwise, and note that the dial lamps light. Initially, set the receiver panel controls as follows:

AFG 1/2 clockwise RFG -- Full clockwise

MNL --- Full counterclockwise

TONE — N

BFO — Center position
MODE — As desired
IF — As desired
SELECT — OFF

PHASING -- Center position

#### 3.3.1 AM Phone Reception

Place the MODE switch in the AM or ANL position. Set the IF selector switch for the desired selectivity (section 3.2.2 describes the IF circuit and selectivity obtained at each switch position). Normally, positions B, M or S will be used, with position VS providing additional selectivity for reception of signals through heavy interference.

When position VS is used, the crystal IF filter is operative and the crystal SELECT and PHASING controls may be used for increased selectivity and rejection of heterodynes or other adjacent channel interference.

The ANTENNA trimmer should be adjusted for maximum signal strength. The TONE switch may be used to reduce high-pitched noise. The AFG control is used to adjust the audio output level and the RFG control may be adjusted for optimum signal reception, depending on received signal strength and background noise. The RFG control must be preset, as described in Section 3.2.1, for correct operation of the S meter.

#### 3.3.2 SSB Reception

Place the MODE switch in position SSB. Set the IF selector switch to position SB<sub>1</sub> or SB<sub>2</sub>. Set the BFO control so the SSB mark is in line with the panel mark.

The RFG control is usually left at the position providing proper S meter operation and the AFG control adjusted for the desired listening level.

Carefully tune the signal until the audio is clear and understandable. If the signal is not readable switch to the opposite sideband and retune the receiver for proper reception.

If the signal received does not have a suppressed carrier, or has only partial suppression, the tuning control may require a small readjustment to zero-beat the transmitted carrier. For signals with fully suppressed carriers (SSSC), the BFO control must be adjusted carefully to duplicate the relation of the suppressed carrier to the received sideband. The proper adjustment gives a natural pitch and quality to the received signal.

For SSSC signal reception, set the AFG control to maximum and adjust the RFG control for desired audio level. The special AGC circuit designed for SSB reception provides effective signal-level control during reception. The MNL control may be adjusted for optimum noise limiting.

#### 3.3.3 CW Reception

Place the MODE switch in position CW. The BFO circuit operates in this position and the AGC is removed. Any IF selector position may be used, but position VS provides crystal filter operation. Maximum selectivity up to 150 cycles is available with the crystal SELECT switch in position 5. The BFO control should be set so the center mark is aligned with the panel mark. Careful tuning is required when maximum crystal selectivity is used, because of the narrow bandpass. The BFO control may be varied to adjust the signal pitch, and the MNL control may be used for noise suppression.

Adjust the crystal PHASING control carefully to obtain the maximum selectivity of 150 cycles. This is evident from the characteristic "ping" of the received code signals. The PHASING control may be used to eliminate interfering signals or heterodynes. Heterodynes well removed from the desired signal will be properly phased out with the PHASING control set near its center position. Heterodynes close to the desired signal will be removed with the PHASING control set approximately 90° right or left of its control position.

For reception of MCW (modulated CW) signals, the MODE switch may be placed in position AM or ANL and the IF selector switch in any desired position. The IF selector switch may be left in position VS and the crystal filter may be used to eliminate interference.

#### 3.4 ACCESSORY CRYSTALS

BFO Crystals. To crystal-control the frequency of the BFO, remove plug PtA from its chassis socket. The socket location is shown in Figure 6. Insert a 455-kc series resonant crystal mounted in a type HC-6/U holder (or equivalent). For CW reception the BFO crystal should be shifted from 455 kc by the desired audio frequency. For single sideband reception the crystal should be selected for approximately 453.5 kc. Minor variations from these frequencies may be desirable for various operating conditions.

Fixed Channel Crystals. Five crystal sockets are available for fixed frequency operation of the HF oscillator. Figure 6 shows the location of these sockets. The socket nearest the front panel coincides with the No. 1 position of the channel OSC (HFO) switch, and the remaining sockets positions 2, 3, 4 and 5 are in direct order. The OSC (HFO) switch is independent of the BAND switch position, and the five fixed-channel crystals may be used on individual frequency bands or all on one band.

Crystal frequency and type for specific channels may be determined by referencing the following:

Crystal Specifications:


#### a. Crystal Description

- 995 kc to 13,500 kc. Series resonant operation on the fundamental frequency of the crystal plate. To be used under controlled temperature conditions. Similar to military specifications for type CR-19/U in MIL-C-3098.
- 13,500 kc to 32,720 kc. Series resonant operation on the third overtone mode of the crystal plate fundamental frequency.
   To be used under uncontrolled temperature conditions. Similar to military specifications for type CR-23/U in MIL-C-3098.
- b. Frequency tolerance: ±0.005% over temperature range of -40°C to +70°C.

#### c. Holder:

The crystal holder shown in sub-paragraph d. is a military type HC-6/U, having a maximum crystal unit capacitance of 7.0 uuf. Crystal socket adapters are available commercially and may be used in mounting crystal holders with a greater pin spacing. The substitute crystal holder must have electrical specification similar to the military type described.

#### d. Crystal Holder Dimensions

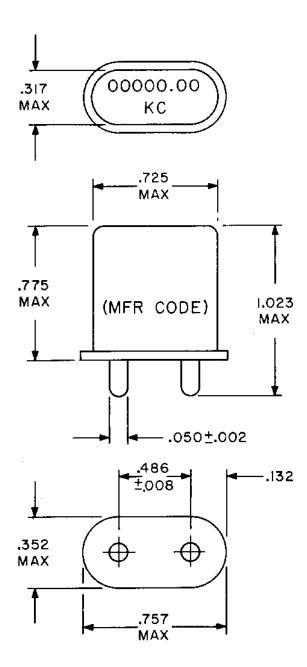

# e. Crystal Frequency Calculation For signal frequencies between 540 and 7,000 kc,

$$fc = fs + 455$$

where: fc = crystal frequency in kc

fs = desired signal frequency in kc. For signal frequencies between 7,000 and 31,000 kc,

$$fc = fs + 1720.$$

#### f. Maximum Series Resistance

#### 1. 995 kc to 13,500 kc.

| From | 800,000    | to | 999.999    | <br>800 | ohms |
|------|------------|----|------------|---------|------|
|      | 1,000.000  | to | 1,249.999  | <br>500 |      |
|      | 1,250,000  | to | 1,499.999  | <br>400 |      |
|      | 1,500.000  | to | 1,749.999  | <br>350 |      |
|      | 1,750.000  | to | 1.999.999  | <br>300 |      |
|      | 2,000,000  | to | 2,249.999  | <br>250 |      |
|      | 2,250,000  | to | 3,749.999  | <br>(50 |      |
|      | 3,750.000  | to | 4,999.999  | <br>100 |      |
|      | 5,000.000  | to | 6,999:999  | <br>50  |      |
|      | 7,000.000  | to | 9,999.999  | <br>30  |      |
|      | 10,000.000 | to | 20,000.000 | <br>25  |      |
|      |            |    |            |         |      |

#### 2. 13,520 kc to 32,720 kc.

From 13,520.000 to 14,999.999 ... 60 ohins 15,000.000 to 32,720.000 ... 40

To tune the receiver to a particular channel frequency in the absence of a signal, place the CALIBRATE switch in tune position. Select the channel crystal and place the BAND switch in the corresponding range. As the receiver is tuned through the signal frequency, the S meter will indicate the oscillator activity. Tune the receiver for maximum reading on the S meter. The receiver is now tuned to the crystal-controlled switch channel. The CALIBRATE switch may be retuned to OFF position for normal S meter operation.

#### SECTION 4. MAINTENANCE

#### 4.1 GENERAL

The NC-400 is designed for continuous duty and should normally require little attention except for tube replacement. The quality of components used and precision factory alignment of the tuned circuits assure dependable operation and consistent performance.

Vacuum tube failure in the receiver may reduce sensitivity, produce intermittent operation or cause complete equipment failure. In this event, all tubes should be tested or replaced with tubes of proven quality. Tubes of the same type may vary enough to affect the alignment of frequency-critical circuits; careful selection may be required. Alignment procedures are discussed in Section 5.

#### 4.2 TROUBLE SHOOTING

In case of breakdown or failure of the receiver, the fault must first be localized to a particular section or stage before repairs can be made. Observation for peculiar control action or for evidence of improperly operating frequency ranges or reception modes may help to localize a malfunction.

The block diagram of the receiver, Figure 1, indicates the signal path from antenna to speaker and shows which stages are in operation for various positions of the circuit switches. When the trouble has been localized to a particular stage or circuit, visual examination of the related components may indicate the defective part. A voltage or resistance check of the suspected circuit should locate the defect. The chart in Figure 7 is a guide to such checks.

Part replacements must have the same value and tolerance as the original parts. Parts replacement in a frequency-critical circuit may require realignment of that circuit.

#### 4.3 VOLTAGE MEASUREMENTS

All measurements shown in Figure 7 are made with a vacuum tube voltmeter. Voltage measurements are made with a 117-volt line. Panel controls are preset before measurements, in the following manner:

| RFG Control        | Full CW      |
|--------------------|--------------|
| AFG Control        | Full CW      |
| TONE Switch        | N            |
| CALIBRATE Switch   | Off          |
| OSC (HFO) Selector | Manual       |
| MNL Control        | Full CCW     |
| IF Selector        | VS           |
| MODE Switch        | CW           |
| Crystal SELECT     | Off          |
| Crystal PHASING    | Any position |
| STBY-REC Switch    | REC          |
| BAND Switch        | Band 5       |
| GENERAL COVERAGE   |              |
|                    |              |

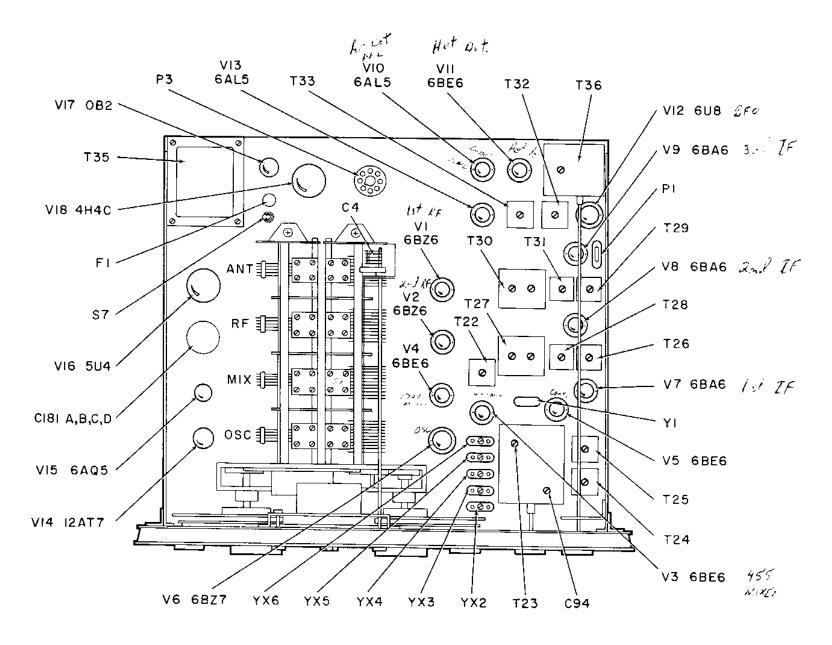
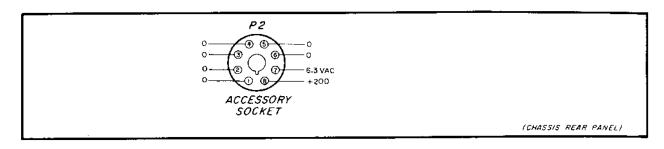


Figure 6. Tube Locations and Alignment Adjustments



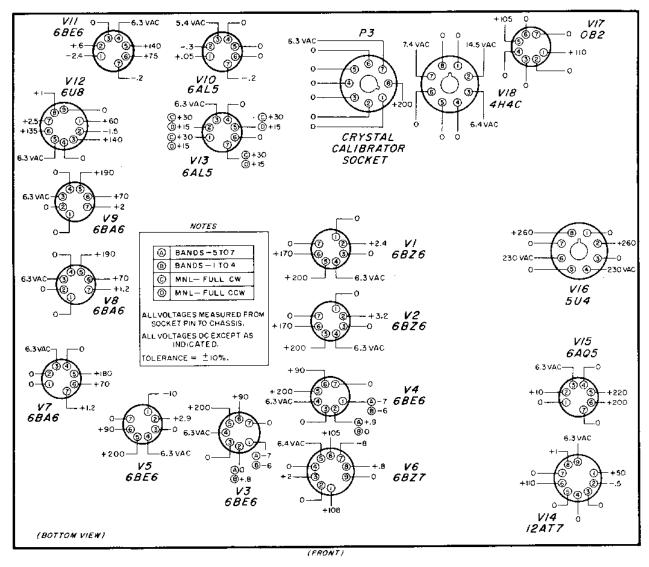


Figure 7. Voltage Measurements

#### SECTION 5. ALIGNMENT

#### 5.1 GENERAL

Alignment of the NC-400 communications receiver requires precision instruments and a thorough understanding of the circuits. This receiver, having double conversion circuits and a dual IF section, presents a more involved alignment procedure than conventional superheterodynes.

Under normal conditions, the receiver will stay in alignment for long periods, but, if tubes or components are replaced or adjustments tampered with, the circuits will require alignment. Alignment should not be attempted unless indicated by receiver malfunction.

The complete alignment of the receiver is divided into two parts --- IF alignment and RF alignment. Adjustments must be made in the sequence given on the alignment chart of Figure 8. Panel controls must be preset as described. A warm-up period of one hour or more is recommended before frequency-determining circuits are aligned. Small changes in the position of alignment screws are sufficient to adjust the circuits, so each adjustment must be performed carefully.

#### 5.2 INSTRUMENTS

The minimum test instruments required for alignment are as follows:

Signal Generator (455 kc to 35 mc)

VTVM (rms)

Headphones (or loud-speaker)

Alignment tools

Headphones are useful during alignment as they provide an aural signal indication which supplements the output meter readings. The Model XCU-400 Crystal Calibrator (accessory) may be used to check dial scale calibration after receiver alignment.

#### 5.3 IF ALIGNMENT

Steps 1 to 7 of Figure 8 list adjustments for alignment of the IF section; step 8 describes the BFO adjustments. Alignment must be made in the sequence given. Refer to Figures 6 and 9 for location of alignment adjustments.

Test Instruments. Connect the signal generator from chassis to the stator of C44 through a 0.01 mfd condenser. Connect the VTVM as an output indicator across the 3.2 ohm terminals of TB-2. Except for the BFO adjustment, the signal generator output is modulated (400 cy 30%).

Remove AGC. Short pins 5 and 6 on the accessory plug P2A, to ground the AGC bus circuit.

Preset Controls. Set all panel controls as follows:

| BAND                  | Band 1                                  |
|-----------------------|---|
|                       |   |
| MODE                  | AM                                      |
| AFG                   | Full CW                                 |
| RFG                   | Full CW                                 |
| \$TBY/REC             | REC                                     |
| BFO                   | To mark                                 |
| PHASING               | Central                                 |
| Crystal SELECT        | OFF                                     |
| ANTTENTALA            | Anumbara                                |
| ANTENNA               | Mily where                              |
| IF                    | -                                       |
| IF                    | VS                                      |
|                       | VS<br>MAN                               |
| IF                    | VS<br>MAN<br>Full CCW                   |
| IF OSC (HFO) MNL TONE | VS<br>MAN<br>Full CCW<br>N              |
| IF                    | VS<br>MAN<br>Full CCW<br>N<br>To HF end |

During alignment adjustments, reduce the output level of the signal generator to prevent circuit overload. If the receiver is badly misaligned, it may be necessary to connect the signal generator to the <u>grid</u> of the <u>third</u> IF stage and align the last IF transformer and successively align the other IF circuits, working forward to the mixer grid.

Steps 2, 4 and 8 require tuning the signal generator ±200 cy from 455 kc to locate the crystal resonance for IF alignment at the frequency of the crystal filter. This frequency is indicated by a sharp rise in the output level

Repeat each adjustment step to verify the circuit alignment.

#### 5.4 RF ALIGNMENT

Steps 9 to 22 of Figure 8 indicate the alignment required for the HFO, mixer, RF and antenna stages. Alignment for each band must be performed in the step sequence given. Figures 6 and 9 show locations of the adjustments.

Test Instruments. Connect the signal generator to the antenna input connector (]1); the VTVM remains across the 3.2 ohm terminals of TB-2.

Remove AGC. Pins 5 and 6 are shorted at plug P2 to ground the AGC bus.

#### NOTE

Before attempting the RF Alignment procedure:

- Place the general coverage tuning dial in its full counterclockwise position (low frequency end).
   This should place the general coverage capacitor within one rotational degree of its completely meshed position.
- Place the bandspread tuning dial in its full counterclockwise position (low frequency end). This should place the bandspread capacitor in its fully meshed position.

Preset Controls. Set all panel controls as follows:

| MNL              | Full CCW     |
|------------------|--------------|
| TONE             | N            |
| General Coverage | As indicated |
| Bandspread       | At "SET"     |
| CALIBRATE        | OFF          |

Each BAND requires trimmer and inductance adjustments. To adjust the step 10 inductance, change the position of the loop at the coil end. HFO adjustments may have to be repeated several times, because the inductance adjustments affect the previous trimmer adjustment. Reduce the output level of the signal generator during alignment to prevent circuit overload. The RFG control may also be used to reduce the signal level.

All HFO circuit adjustments require setting the receiver dial to the alignment frequency, and adjusting the oscillator alignment screws until the signal is received. The mixer, RF and antenna circuits are then adjusted for maximum signal level.

Image Check. The HF oscillator in the NC-400 receiver is designed to operate above the signal frequency. It is possible to misadjust the oscillator circuits so that the HFO is operating below the signal frequency. After aligning the HFO circuit (for a given band), verify correct oscillator operation by tuning the signal generator to the image frequency for that band. The image should occur 3.44 mc above the signal frequency on bands 5, 6 and 7 and 910 kc above the signal on bands 1, 2, 3 and 4. If the image is below the signal instead of above, the oscillator frequency is incorrect and the circuit must be realigned.

# IF ALIGNMENT CHART

| STEP | GEN.<br>FREQ.  | IF<br>SELECT | BAND | CRYSTAL<br>SELECT | ADJUST                         | ADJUST FOR           |
|------|----------------|--------------|------|-------------------|--------------------------------|----------------------|
| 1    | 455 kc         | VS           | 1    | OFF               | T32, T31, T29, T28, T26        | Maximum output       |
| . 2  | Xtal (*)       |              | 11   | 5                 | T32, T31, T29, T26, T28<br>T23 | Max. (at Xtal freq.) |
| 3    | 457 kc         | .,           |      | t                 | L11                            | Maximum output       |
| 4    | Xtal (*)       | 1,           |      | OFF               | C94                            | Max. (at Xtal freq.) |
| 5    | 455 kc         | SB2          |      | OFF               | T25, T24                       | Maximum output       |
| 6    | 455 <b>k</b> c | s            | .,   | OFF               | T27, T30, T33                  | Maximum output       |
| 7    | 1720 kc        | vs           | 5    | OFF               | <b>T2</b> 2                    | Maximum output       |
| - 8  | Xtal (*)       | <b>*</b> 1   | 1    | OFF               | T36 (BFO) no mod.              | Adjust for zero beat |

# RF ALIGNMENT CHART

| STEP | BAND | FREQ.  | HFO<br>ADJUST | ADJUST FOR<br>MAXIMUM OUTPUT    | NOTE               |
|------|------|--------|---------------|---------------------------------|--------------------|
| 9    | 7    | 30 mc  | C81           | C38, C19, ANTENNA trimmer       | Check image        |
| 10   | 7    | 20 mc  | <b>L</b> 9    | T21, T14, T7 (loop in coil end) | Repeat steps 10-11 |
| 11   | 6    | 20 mc  | C80           | C37, C18, ANTENNA trimmer       | Check image        |
| 12   | 6    | 12 mc  | <u>L</u> 8.   | T20, T13, T6                    | Repeat steps 12-13 |
| 13   | 5    | 12 mc  | C79           | C36, C17, ANTENNA trimmer       | Check image        |
| 14   | 5    | 7.5 mc | L7            | T19, T12, <u>T</u> 5            | Repeat steps 14-15 |
| 15   | 4    | 7 mc   | C78           | C35, C16, ANTENNA trimmer       | Check image        |
| 16   | 4    | 4.2 mc | L6            | Ti8, Ti1, T4                    | Repeat steps 16-17 |
| 17   | 3    | 4 mc   | C77           | C34, C15, ANTENNA trimmer       | Check image        |
| 18   | 3    | 2.5 mc | <b>L</b> 5    | T17, T10, T3                    | Repeat steps 18-19 |
| 19   | 2    | 2 mc   | C76           | C33, C14, ANTENNA trimmer       | Check image        |
| 20   | 2    | 1.2 mc | L4            | T16, T9, T2                     | Repeat steps 20-21 |
| 21   | 1    | 1 mc   | C75           | C32, C13, ANTENNA trimmer       | Check image        |
| 22   | 1    | .6 mc  | L <u>3</u>    | T15, T8, T1                     | Repeat steps 22-23 |

(\*) 455 kc ±200 cy.

Figure 8. Alignment Chart

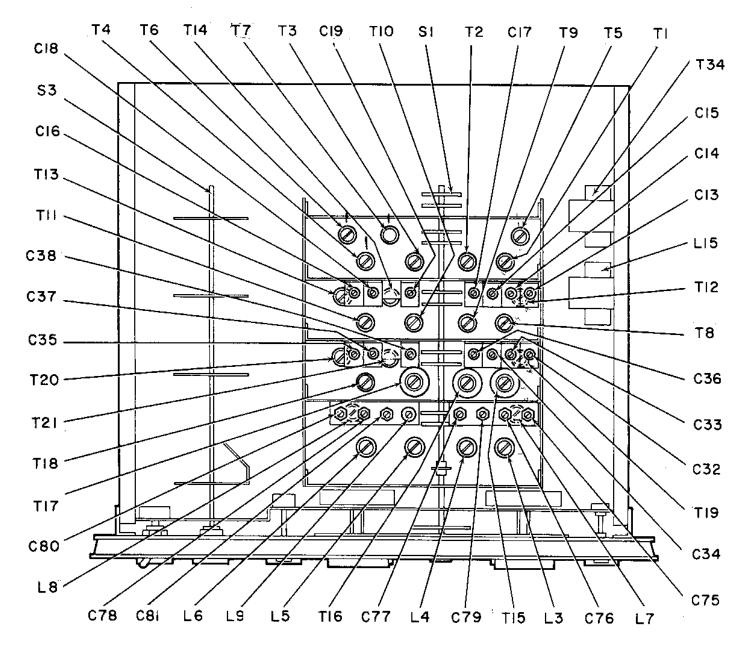


Figure 9. Alignment Adjustments (Bottom Chassis)

# SECTION 6. ACCESSORIES

#### 6.1 CRYSTAL CALIBRATOR UNIT (XCU-400)

General. The model XCU-400 Crystal Calibrator unit is designed for operation with the NC-400 communications receiver. Each calibrator is factory-adjusted to zero beat with station WWV, and will accurately provide 100 kc and 1 mc marker frequencies for the NC-400 receiver.

Installation. To install the calibrator, plug it into the socket, P3, on the top of the chassis (see Figure 6).

Operation. The XCU-400 Crystal Calibrator provides an accurate means of checking the frequency calibration of the NC-400 receiver dials. The CALIBRATE switch, on the receiver panel, provides selection of the 100-kc or 1-me marker frequencies. The OFF position removes B-plus from the calibrator. The TUNE position of this switch is not used for calibrator operation.

Calibrator Check. The NC-400 receiver provides a control for adjusting the crystals in the calibrator to WWV, by an adjustment (CI, Figure 10) in an opening in the calibrator case. Check the adjustment by tuning station WWV on the receiver, turning the CALIBRATE switch to the 100 kc position, and zero beating with WWV. A small readjustment of CI may be required to compensate for crystal and component aging over long periods.

#### XCU-400 PARTS LIST

| SYM-<br>BOL | DESCRIPTION   | NATCO TYPE        |
|-------------|---|-------------------|
| C1          | Capacitor, Variable:<br>5-30 mmf                      | A-50034-1         |
| C2          | Capacitor, Ceramic: 0.02 mfd, 4 no lsmit -0%          | 2-C63-Z5V-203-GMV |
| C3          | Capacitor, <u>Mica:</u><br>100 mmf, ±10%,<br>500 wvdc | NCS-15-101-K-5    |
| C4          | Same as C2  |                   |
| C5          | Capacitor, Mica:<br>10mmf ±10%,<br>500 wvdc           | NCS-15-100-K-5    |
| L1          | Inductor, Fixed:<br>160 microhenries                  | ASB-1136          |
| L2          | Inductor, Fixed:<br>4.7 millihenries                  | B-17308           |

| SYM-<br>BOL | DESCRIPTION  | NATCO TYPE     |
|-------------|--|----------------|
| Pı          | Plug, Octal  | K-785-1        |
| RI          | Resistor, Fixed:<br>4.7 megohms,<br>+20%, 1/2 watt | RC-20-BF-475-M |
| R2          | Resistor, Fixed:<br>470 K ohm, ±20%,<br>1/2 watt   | RC-20-BF-474-M |
| R3          | Resistor, Fixed:<br>100 K ohm, ±20%,<br>1/2 watt   | RC-20-BF-104-M |
| V1          | Tube: type 6AU6                                    |                |
| Yı          | Crystal, Quartz: 1 mc                              | B-19865        |
| Y2          | Crystal, Quartz<br>100 kc                          | A-16126        |

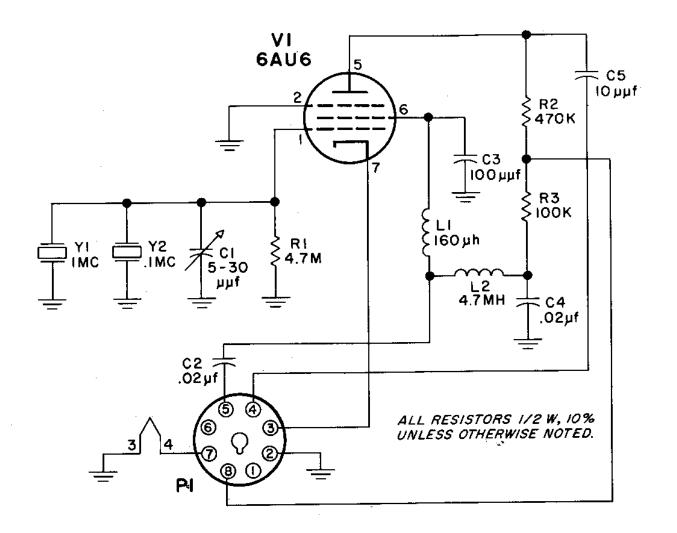


Figure 10. Schematic, XCU-400 Crystal Calibrator

#### 6.2 MECHANICAL FILTER HOUSING

General. The Model MFH-400 Mechanical Filter Housing is designed for operation in the NC-400 receiver in place of the plug-in crystal filter. The housing accepts up to three commercial-type mechanical filters. The unit provides suitable matching circuits for the filters and allows front panel selection of selectivities ranging from 16 kc to 500 cps or SSB dependent upon filter unit installed.

Installation. To install the mechanical filter unit, perform the following steps.

Remove the PHASING and SELECT control

knobs from the crystal filter control shafts. Remove the shaft extensions.

- b. Remove the retaining lock nuts (3).
- c. Unplug the crystal filter unit from the receiver chassis.
  - d. Insert the mechanical filter into the chassis plugs.
  - e. Replace lock nuts removed in step b.
- f. Reinstall a shaft extension on the mechanical filter SELECT shaft and replace the SELECT control knob on this shaft, indexing the knob to the panel mark.
- g. Plug the remaining shaft hole with the button provided.

Operation. The mechanical filter operates with the receiver IF switch in positions VS, S, M and B. The first position of the SELECT switch is OFF. This removes the mechanical filters from the circuit and substitutes a single tuned circuit. Positions one, two and three provide various bandpasses depending upon the mechanical filters installed.

Adjustments. The Model MHF-400 Mechanical Filter is tested and adjusted at the factory and should not require readjustment when installed in the NC-400 receiver. Holes are provided in the filter case for alignment adjustments of the input, output and the OFF position circuits. If realignment is necessary after prolonged service, the following adjustments may be made using the receiver S-meter as an alignment indicator.

- a. Short-circuit pins 5 and 6 of accessory plug P2A to remove the AGC action.
- b. Tune the receiver to a station of low signal strength with the IF switch in VS position and the mechanical filter SELECT switch in its sharpest position.
- c. Tune in the station for greatest S-meter reading and adjust C2 and C5 in the mechanical filter for an increase in meter reading.
- d. Set the SELECT switch to OFF position and adjust L1 for greatest meter reading.
  - e. Remove the short at plug P2A.

#### MECHANICAL FILTER PARTS LIST

| SYM-<br>BOL | DESCRIPTION                                    | NATCO TYPE     |
|-------------|--|----------------|
| C1          | Capacitor, Mica:<br>.001 mfd, ±10%,<br>500wvdc | NCS-20-102-K-5 |
| C2          | Capacitor, Trimmer:<br>5-80 mmf                | A-12312-2      |
| C3          | Capacitor, Mica:<br>68 mmf, ±10%,<br>500wvdc   | NCS-15-680-K-5 |
| C4          | Capacitor, Mica:<br>470 mmf, ±10%,<br>500 wvdc | NCS-20-471-K-5 |
| C5          | Same as C2                                     |                |
| C6          | Same as C1                                     |                |
| FL1         | Filter, Mechanical                             |                |
| FL2         | Filter, Mechanical                             |                |

| SYM-<br>BOL | DESCRIPTION                                       | NATCO TYPE     |
|-------------|---|----------------|
| FL3         | Filter, Mechanical                                |                |
| Lı          | Inductor, Variable                                | B-50015        |
| Pt          | Connector   | B-24849        |
| P2          | Same as PI  |                |
| Rı          | Resistor, Fixed:<br>27 K ohms, ±10%,<br>1/2 watt  | RC-20-BF-273-K |
| R2          | Resistor, Fixed:<br>2.7 K ohms, ±10%,<br>1/2 watt | RC-20-BF-272-K |
| R3          | Resistor, Fixed:<br>470 K ohms, ±10%,<br>1/2 watt | RC-20-BF-474-K |
| S1          | Switch, Selector                                  | C-50006        |

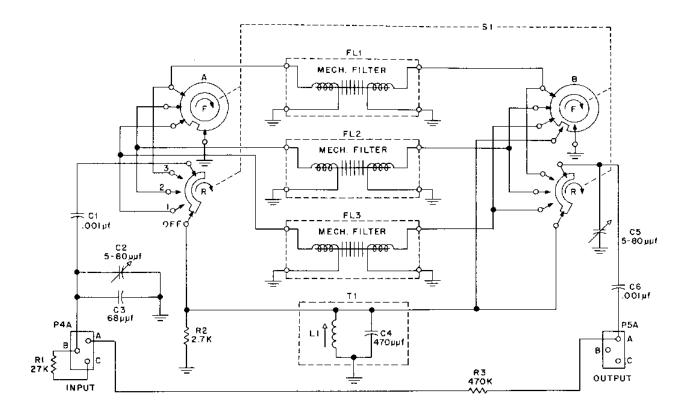


Figure 11. Schematic, MFH Mechanical Filter Housing

#### 6.3 DIVERSITY MODIFICATION KIT

General. The Model DMK Diversity Kit is available on special order for diversity conversion of the NC-400 receiver. The kit includes all components, partially wired circuits and the necessary instructions for easy conversion of the receiver. Receptacles to be mounted in the receiver are standard Amphenol UHF receptacles, catalogue 83-1R. These mate with Amphenol cable connectors, catalogue 83-1SP.

An IF output circuit is provided on the chassis rear panel for use where IF signals are required in diversity combiners. AGC output is supplied to pin 5 of Accessory Socket P2. Detector output is provided at pin 2 of P2 and is jumped to pin 1 of P2 by means of plug P2A supplying normal audio feed in the receiver. In diversity applications it is possible to parallel detector loads of two receivers by interconnecting pin 2 of the respective accessory sockets. The jumper between pins 1 and 2 may be broken on one of the two receivers, in the diversity application, in order that both detectors feed a common detector load and audio circuits. It is also possible to break these jumpers in both receivers of a diversity set-up, interconnect pin 2 of both receivers and use a common external detector load. In this event it is possible to break the jumper between pins 3 and 4 of one or both receivers and feed pin 4 with the audio signal obtained from the external detector load or diversity combiner.

# NC-400 PARTS LIST

#### CAPACITORS

| SYM-<br>BOL | DESCRIPTION   | NATCO TYPE            |
|-------------|---|-----------------------|
| C1          | Mica: 22 mmf,   | NCS-15-220-K-3        |
| C2          | ±10%, 300 wvdc<br>Mica: 68 mmf,                                 | NCS-15-680-K-3        |
| C3          | $\pm 10\%$ , 300 wvdc<br>Mica: 100 mmf,<br>$\pm 10\%$ , 300wvdc | NCS-15-101-K-3        |
| C4 ·        | Variable: 5-50 mmf<br>(Ant. Trim.)                              | B-19781-A             |
| C5          | Variable: 10-30 mmf<br>(Band Spread)                            | C-20612               |
| C6          | Variable: 10-200mmf<br>(Gen'l. Cov.)                            | C-20611               |
| C7          | Ceramic: 0.01 mfd,<br>+22%-75%,<br>500 wvdc                     | 2-C14-Z5V-103-<br>GMV |
| C8          | Ceramic: 0.003 mfd,<br>±22%, 500 wvdc                           | 2-C14-Z5S-332-M       |
| C9          | Same as C7  |                       |
| C10         | Same as C7  |                       |
| C11         | Same as C7  |                       |
| C12         | Mica: 1.5 mmf,<br>±0.5 mmf,<br>300 wvdc                         | NCS-15-1R5-X-3        |
| C13         | Variable: 5-80 mmf<br>(Trim.)                                   | B-20687-1             |
| C14         | Same as C13   |                       |
| C15         | Same as C13   |                       |
| C16         | Variable: 5-80 mmf<br>(Trim.)                                   | B-2068 <b>7-2</b>     |
| C17         | Same as C13   |                       |
| C18         | Same as C16   |                       |
| C19         | Same as C16   |                       |
| C20         | Same as C1  |                       |
| C21         | Mica: 33 mmf,<br>±10%, 300 wvdc                                 | NCS-15-330-K-3        |
| C22         | Mica: 56 mmf,<br>±5%, 300 wvdc                                  | NCS-15-560-J-3        |
| C23         | Mica: 150 mmf,<br>±2%, 300 wvdc                                 | NCS-15-151-G-3        |
| C24         | Same as C5  |                       |
| C25         | Same as C6  |                       |
| C26         | Same as C7  |                       |

| SYM- | DESCRIPTION  | NATCO TYPE            |
|------|--|-----------------------|
| BOL  |  | 22.00 - 2.00          |
| C27  | Mica: 470 mmf,                                     | NCS-20-471-M-5        |
|      | ±20%, 500 wvdε                                     |                       |
| C28  | Same as C7   |                       |
| C29  | Same as C7   |                       |
| C30  | Same as C7   |                       |
| C31  | Same as C12  |                       |
| C32  | Same as C13  |                       |
| C33  | Same as C13  |                       |
| C34  | Same as C13  |                       |
| C35  | Same as C16  |                       |
| C36  | Same as C13  |                       |
| C37  | Same as C16  |                       |
| C38  | Same as C16  |                       |
| C39  | Paper: 0.47 mfd,<br>400 vdcw, ±20%                 | NCP-4-474-M           |
| C40  | Mica: 10 mmf,<br>±0.5 mmf, 300 wvdc                | NCS-15-100-X-3        |
| C41  | Mica: 56 mmf,<br>±5%, 300 wvdc                     | NCS-15-560-J-3        |
| C42  | Mica: 150 mmf,<br>±2%; 300 wvdc                    | NCS-15-151-G-3        |
| C43  | Same as C5   |                       |
| C44  | Same as C6   |                       |
| C45  | Mica: 47 mmf,<br>±10%, 500 wvdc                    | NCS-15-470-K-5        |
| C46  | Same as C7   |                       |
| C47  | Same as C7   |                       |
| C48  | Same as C7   |                       |
| C49  | Same as C7   |                       |
| C50  | Mica: 510 mmf,<br>±5%, 300 wvdc                    | S-659-I               |
| C51  | Same as C7   |                       |
| C52  | Same as C50  |                       |
| C53  | Same as C7   |                       |
| C54  | Ceramic: 33 mmf,<br>±10%, 500 wvdc                 | 2-C11-Z5P-330-K       |
| C55  | Ceramic: 470 mmf,<br>±10%, 500 wvdc                | 2-C61-Z5P-471-K       |
| C56  | Same as C7   |                       |
| C57  | Ceramic: 0.02 mfd,<br>+ no limit, -0%,<br>500 wvdc | 2-C14-Z5V-203-<br>GMV |

# CAPACITORS (CONT'D)

| SYM- | ·                                   |                  |
|------|-------------------------------------|------------------|
| BOL  | DESCRIPTION                         | NATCO TYPE       |
|      | Same as C7                          |                  |
| C58  | Mica: 0.001 mfd.                    | NCS-20-102-M-5   |
| C39  | ±20%, 500 wvdc                      | NC3-20-102-M-3   |
| C60  | Same as C27                         |                  |
| C61  | Same as C7                          |                  |
| C62  | Same as C59                         |                  |
| C63  | Same as C7                          |                  |
| C64  | Same as C59                         |                  |
| C65  | Same as C5                          |                  |
| C66  | Same as C6                          |                  |
| C67  | Same as C7                          |                  |
| C68  | Ceramic: 4 mmf,                     | CCC-20-UJ-040-C  |
|      | ±0.25 mmf,                          | CCC-20-0 j-040-C |
|      | 500 wvdc                            |                  |
| C69  | Ceramic: 5 mmf,                     | D-825-D-483      |
|      | $\pm$ 0.25 mmf,                     |                  |
|      | 500 wvdc                            |                  |
| C70  | Ceramic: 5 mmf,                     | CCC-20-UJ-050-C  |
|      | ±0.25 mmf,<br>500 wydc              |                  |
| C71  | Same as C1                          |                  |
| C71  |                                     | NCCALOTOKO       |
| C/2  | Mica: 27 mmf,<br>±10%, 300 wvdc     | NCS-15-270-K-3   |
| C73  | Same as C41                         |                  |
| C74  | Same as C23                         |                  |
| C75  | Variable: 3-32 mmf                  | B-20688-1        |
| C76  | Same as C75                         | D 20000 1        |
| C77  | Variable:                           | B-20688-2        |
|      | 2.3-14.2 mmf                        | 20000 2          |
| C78  | Same as C75                         |                  |
| C79  | Same as C75                         |                  |
| C80  | Same as C75                         |                  |
| C81  | Same as C75                         |                  |
| C82  | Mica: 320 mmf,                      | NCS-15-321-G-3   |
|      | ±2%, 300 wvdc                       |                  |
| C83  | Mica: 570 mmf,                      | NCS-15-571-G-3   |
|      | ±2%, 300 wvdc                       |                  |
| C84  | Mica: 1230 mmf,                     | NCS-19-1231-G-3  |
|      | ±2%, 300 wvdc                       | NGC 10 1001 I 0  |
| C85  | Mica: 1990 mmf,<br>±5%, 300 wvdc    | NCS-19-1991-J-3  |
| C86  | $\pm 3\%$ , 300 wvdc<br>Same as C84 |                  |
| ₩.00 | Jame as C84                         |                  |

|             |  | ·——             |
|-------------|--|-----------------|
| SYM-<br>BOL | DESCRIPTION                                    | NATCO TYPE      |
| C87         | Same as C85                                    | ·               |
| C88         | Mica: 2830 mmf,<br>±5%, 300 wvdc               | NCS-19-2831-J-3 |
| C89         | Mica: 270 mmf,<br>±10%, 500 wvdc               | NCS-20-271-K-5  |
| C90         | Ceramic: 5 mmf,<br>±0.5 mmf, 500 wvdc          | CCC-21-CK-050-D |
| C91         | Same as C7                                     |                 |
| C92         | Mica: 68 mmf,<br>±5%, 500 wvdc                 | NCS-15-680-J-5  |
| C93         | Same as C92                                    |                 |
| C94         | Variable: 3.5-35 mmf<br>(Trím.)                | A-12312-1       |
| C95         | Mica: 270 mmf,<br>±5%, 500 wvdc                | S-659-3         |
| C96         | Variable: 4-14 mmf                             | B-19985         |
| C97         | Ceramic: 7 mmf,<br>±.5 mmf, 500 wvdc           | CCC-20-CK-070-D |
| C98         | Mica: 68 mmf,<br>±10%, 500 wvdc                | NCS-15-680-K-5  |
| C99         | Ceramic: 3 mmf,<br>±.5 mmf, 500 wvdc           | CCC-20-CK-030-D |
| C100        | Same as C90                                    |                 |
| C101        | Same as C95                                    |                 |
| C102        | Ceramic: 10 mmf,<br><u>+</u> 1.0 mmf, 500 wvdc | CCC-20-CK-100-F |
| C103        | Ceramic: 25 mmf,<br>±10%, 500 wvdc             | CCC-20-CK-250-K |
| C104        | Same as C95                                    |                 |
| C105        | Same as C103                                   |                 |
| C106        | Mica: 56 mmf,<br>±10%, 500 wvdc                | NCS-15-560-K-5  |
| C107        | Same as C90                                    |                 |
| C108        | Same as C95                                    |                 |
| C109        | Same as C90                                    |                 |
| C110        | Same as C7                                     |                 |
| C111        | Same as C57                                    |                 |
| C112        | Same as C7                                     |                 |
| C113        | Same as C57                                    | -               |
| C114        | Same as C95                                    |                 |
| C115        | Same as C90                                    |                 |

# CAPACITORS (CONT'D)

| SYM-         |                               |                                  |
|--------------|-------------------------------|----------------------------------|
| BOL          | DESCRIPTION                   | NATCO TYPE                       |
| C116         | Mica: 510 mmf,                | H-500-5                          |
| 01.0         | ±5%, 500 wvdc                 |                                  |
| C117         | Same as C90                   | :                                |
| C118         | Same as C95                   |                                  |
| C119         | Same as C95                   |                                  |
| C120         | Same as C116                  |                                  |
| C121         | Same as C90                   | ·                                |
| C122         | Same as C7                    |                                  |
| C123         | Same as C95                   |                                  |
| C124         | Same as C90                   |                                  |
| C125         | Same as C57                   |                                  |
| C126         | Same as C7                    |                                  |
| C127         | Same as C57                   |                                  |
| C128         | Same as C95                   |                                  |
| C129         | Same as C90                   |                                  |
| C130         | Same as C116                  |                                  |
| C131         | Same as C90                   |                                  |
| C132         | Same as C95                   |                                  |
| C133         | Same as C95                   |                                  |
| C134         | Same as C116                  |                                  |
| C135         | Same as C90                   |                                  |
| C136         | Same as C7                    |                                  |
| C137         | Same as C95                   |                                  |
| C138         | Same as C90                   | •                                |
| C139         | Same as C57                   |                                  |
| C140         | Same as C57                   |                                  |
| C141         | Same as C57                   |                                  |
| C142         | Same as C90                   |                                  |
| C143         | Same as C95                   |                                  |
| C144         | Same as C7                    |                                  |
| C145         |                               |                                  |
| C146         | Ceramic: 100 mmf,             | 2-C62- <b>Z</b> 5P-102- <b>K</b> |
|              | $\pm 10\%$ , 500 wydc         | NICC 15 101 W -                  |
| C147         | Mica: 100 mmf,                | NCS-15-101-K-5                   |
| C140         | ±10%, 500 wvdc                |                                  |
| C148<br>C149 | Same as C95<br>Mica: 510 mmf, | CM-13-D-511-K                    |
| (149         | $\pm 10\%$ , 500 wvdc         | CMI-13-D-711-IX                  |
| C150         | Paper: 0.1 mfd,               | NCP-4-104-M                      |
|              | 400 wvdc, +20%                |                                  |
| C151         | Same as C147                  |                                  |

|             |   | · · · ·           |
|-------------|---|-------------------|
| SYM-<br>BOL | DESCRIPTION   | NATCO TYPE        |
| C152        | Mica: 3 mmf,<br>+0.5 mmf, 500 wvdc                        | NCS-15-030-X-5    |
| C153        | Same as C7  |                   |
| C154        | Same as C55   |                   |
| C155        | Paper: 0.022 mfd,<br>±20%, 200 wvdc                       | NCP-2-223-M       |
| C156        | Same as C7  |                   |
| C157        | Same as C7  |                   |
| C158        | Paper: 1.0 mfd,<br>±20%, 50 wvdc                          | B-25548           |
| C159        | Same as C55   |                   |
| C160        | Same as C7  |                   |
| C161        | Same as C146  |                   |
| C162        | Mica: 470 mmf,<br>±5%, 500 wvdc                           | NCS-20-471-J-5    |
| C163        | Same as C7  |                   |
| C164        | Mica: 220 mmf,<br>±10%, 500 wvdc                          | NCS-20-221-K-5    |
| C165        | Same as C150  | ļ                 |
| C166        | Mica: 390 mmf,<br>±5%, 500 wvdc                           | NCS-20-391-J-5    |
| C167        | Same as C57   |                   |
| C168        | Şame as C150  |                   |
| C169        | Variable: 3.5-9 mmf                                       | B-19781-3         |
| C170        | Same as C7  |                   |
| C171        | Ceramic: 22 mmf,<br>±5%, 500 wvdc                         | CCC-20-UJ-220-J-5 |
| C172        | Same as C57   |                   |
| C173        | Same as C155  |                   |
| C174        | Same as C57   |                   |
| C175        | Same as C7  |                   |
| C176        | Same as C57   |                   |
| C177        | Deleted   | 1//7.50           |
| C178        | Mica: 0.001 mfd,<br>1000 vdc                              | J-667-50          |
| C179        | Same as C178  |                   |
| C180        | Same as C178  |                   |
| C181        | Electrolytic:<br>20-20-40 mfd, 300 vdc<br>20 mfd, 250 vdc |                   |

#### RESISTORS\*

| SYM- | DESCRIPTION               | NATCO TYPE              | SYM- | DECCRIPTION                       | NATEO TARE     |
|------|---------------------------|-------------------------|------|-----------------------------------|----------------|
| BOL  |                           | NATCO TTPE              | BOL  | DESCRIPTION                       | NATCO TYPE     |
| Rı   | Fixed: 470 K ohms,        | RC-20-BF-474-M          | R33  | Fixed: 100 ohms                   | RC-20-BF-101-K |
|      | <u>+-</u> 20%             |                         | R34  | Fixed: 470 ohms,                  | RC-20-BF-471-M |
| R2   | Fixed: 180 ohms           | RC-20-BF-181-K          |      | ±20%                              |                |
| R3   | Fixed: 10 K ohms          | RC-20-BF-103-K          | R35  | Fixed: 68 ohms                    | RC-20-BF-680-K |
| R4   | Fixed: 1200 ohms          | RC-20-BF-122 <b>-</b> K | R36  | Fixed: 330 ohms                   | RC-20-BF-331-K |
| R5   | Fixed: 220 ohms,<br>±20%  | RC-20-BF-221-M          | R37  | Fixed: 47 ohms,<br>±20%           | RC-20-BF-470-M |
| R6   | Fixed: 270 ohms           | RC-20-BF-271-K          | R38  | Fixed: 15 ohms                    | RC-20-BF-150-K |
| R7   | Same as R1                |                         | R39  | Fixed: 100 ohms,                  | RC-20-BF-101-M |
| R8   | Same as R2                |                         |      | <u>+</u> 20%                      |                |
| R9   | Same as R3                |                         | R40  | Same as R39                       |                |
| R10  | Fixed: 680 ohms           | RC-20-BF-681-K          | R41  | Same as R23                       |                |
| R11  | Fixed: 4700 ohms          | RC-20-BF-472-K          | R42  | Same as R1                        |                |
| R12  | Same as R11               |                         | R43  | Fixed: 33 ohms                    | RC-20-BF-330-K |
| R13  | Fixed: 3300 ohms          | RC-20-BF-332-K          | R44  | Fixed: 120 ohms                   | RC-20-BF-121-K |
| R14  | Fixed: 2700 ohms          | RC-20-BF-272-K          | R45  | Same as R27                       |                |
| R15  | Same as R5                |                         | R46  | Same as R23                       |                |
| R16  | Same as R2                |                         | R47  | Same as R1                        |                |
| R17  | Fixed: 1 megohm,<br>±20%  | RC-20-BF-105-M          | R48  | Variable: 8 K ohms,<br>wire-wound | B20660         |
| R18  | Fixed: 150 ohms           | RC-20-BF-151-K          | R49  | Same as R43                       |                |
| R19  | Same as R1                |                         | R50  | Fixed: 47 K ohms,                 | RC-42-BF-473-K |
| R20  | Same as R18               |                         |      | 2 watt                            |                |
| R21  | Same as, R17              |                         | R51  | Same as R44                       |                |
| R22  | Same as RII               |                         | R52  | Same as R27                       |                |
| R23  | Fixed: 2200 ohms,<br>±20% | RC-20-BF-222-M          | R53  | Same as R23                       |                |
| R24  | Fixed: 22 ohms,           | RC-20-BF-220-M          | R54  | Same as R1                        |                |
|      | ±20%                      |                         | R55  | Fixed: 220 ohms                   | RC-20-BF-221-K |
| R25  | Same as R1                |                         | R56  | Same as R28                       |                |
| R26  | Fixed: 470 ohms           | RC-20-BF-471-K          | R57  | Fixed: 33 K ohms                  | RC-20-BF-333-K |
| R27  | Fixed: 47 K ohms          | RC-20-BF-473-K          | R58  | Same as R23                       | DO DT /        |
| R28  | Fixed: 100 K ohms         | RC-20-BF-104-K          | R59  | Fixed: 150 K ohms                 | RC-20-BF-154-K |
| R29  | Same as R17               |                         | R60  | Same as R17                       | no so ne /=/-  |
| R30  | Fixed: 47 ohms            | RC-20-BF-470-K          | R61  | Fixed: 470 K ohms                 | RC-20-BF-474-K |
| R31  | Fixed: 18 K ohms          | RC-20-BF-183-K          | R62  | Same as R28                       |                |
| R32  | Same as R31               |                         |      |                                   |                |
| L    | <u> </u>                  |                         |      |                                   | <del> </del>   |

<sup>\*</sup>All resistors 1/2 watt, 10% tolerance unless noted otherwise.

# RESISTORS (CONT'D)\*

| SYM-<br>BOL | DESCRIPTION                   | NATCO TYPE     |
|-------------|-------------------------------|----------------|
| R63         | Same as R27                   |                |
| R64         | Same as R61                   |                |
| R65         | Same as R1                    |                |
| R66         | Fixed: 68 K ohms              | RC-20-BF-683-K |
| <b>R</b> 67 | Same as R59                   |                |
| R68         | Same as R33                   |                |
| <b>R</b> 69 | Fixed: 270 K ohms,<br>±20%    | RC-20-BF-274-M |
| R70         | Same as R17                   |                |
| R71         | Fixed: 1500 ohms,<br>±20%     | RC-20-BF-152-M |
| R72         | Same as R6                    |                |
| IR73        | Fixed: 22 K ohms              | RC-20-BF-223-K |
| R74         | Fixed: 1800 ohms,<br>1/4 watt | RC-09-BF-182-K |
| <b>R</b> 75 | Fixed: 270 K ohms             | RC-20-BF-274-K |
| <b>R</b> 76 | Same as R57                   |                |
| <b>R</b> 77 | Same as R23                   |                |
| R78         | Same as R6                    |                |
| <b>R</b> 79 | Fixed: 220 K ohms,<br>±20%    | RC-20-BF-224-M |
| R80         | Same as R26                   |                |
| R81         | Same as R79                   |                |
| R82         | Variable:<br>100 K ohms       | A-20679        |
| R83         | Same as R73                   |                |
| R84         | Fixed: 270 ohms               | RC-20-BF-271-K |
| !           |                               |                |
| i           |                               |                |
|             |                               |                |
|             |                               |                |
|             |                               |                |
|             |                               |                |

| SYM-<br>BOL | DESCRIPTION                              | NATCO TYPE        |
|-------------|--|-------------------|
| R85         | Same as R27                              |                   |
| R86         | Fixed: 10 K ohms,<br>±20%                | RC-20-BF-103-M    |
| R87         | Same as R61                              |                   |
| R88         | Same as R28                              |                   |
| <b>R8</b> 9 | Same as R34                              |                   |
| R90         | Fixed: 10 megohm,<br>±20%                | RC-20-BF-106-M    |
| <b>R</b> 91 | Same as R90                              |                   |
| R92         | Variable:<br>500 K ohms                  | C-20673           |
| R93         | Fixed: 1000 ohms                         | RC-20-BF-102-K    |
| R94         | Variable: 1000 ohms                      | B-27657           |
| R95         | Same as R1                               |                   |
| <b>R</b> 96 | Same as R79                              |                   |
| <b>R</b> 97 | Fixed: 18 megohms                        | RC-20-BF-186-K    |
| R98         | Fixed: 270 ohms,                         | RC-42-BF-271-K    |
|             | 2 watt                                   |                   |
| <b>R</b> 99 | Fixed: 22 ohms,                          | RC-42-BF-220-M    |
| 7.00        | 2 watt, ±20%                             | TD 17/3/ 7        |
| R100        | Fixed: 150 ohms,<br>7 watt               | <b>B-17436</b> -7 |
| R101        | Fixed: 2300 ohms,<br>10 watt, wire-wound | B-17436-6         |
| R102        | Fixed: 2.2 ohms,<br>1 watt, wire-wound   | K-098-24          |
| R103        | Fixed: 3.9 ohms,<br>1 watt, wire-wound   | K-098-33          |
|             |  |                   |
|             |  |                   |
|             |  |                   |
|             |  |                   |
|             |  |                   |
|             |  |                   |
|             |  |                   |

<sup>\*</sup>All resistors 1/2 watt, 10% tolerance unless noted otherwise.

# MISCELLANEOUS

| SYM-<br>BOL | DESCRIPTION                                      | NATCO TYPE |
|-------------|--|------------|
| CR1         | Rectifier, 1N1692<br>Silicon Diode               |            |
| F1          | Fuse: 2 amps, 250 v                              | A-13806-1  |
| I1          | Lamp, Panel:                                     | NPL-47     |
| 11          | 0.15 amps, 6.3 v                                 |            |
| <b>I</b> 2  | Same as I1                                       |            |
| 13          | Same as I1                                       |            |
| Jı          | Connector, Coaxial:<br>(Ant.) AMPH. UHF<br>83-1R | B-27680    |
| J2          | Same as J1 (IF)                                  |            |
| J3          | Same as J1 (HFO)                                 |            |
| J4          | Jack, Phones:                                    | A-12241    |
| Lı          | RF Choke:  | SA-3001    |
| L2          | 10 microhenries<br>RF Choke:                     | SA-3080    |
| <b>L</b> 3  | 2. millihenries<br>Inductor, Variable:<br>Band 1 | B-25857    |
| L4          | Inductor, Variable:<br>Band 2                    | B-25858    |
| L5          | Inductor, Variable:<br>Band 3                    | B-25859    |
| L6          | Inductor, Variable:<br>Band 4                    | B-25860    |
| L7          | Inductor, Variable:<br>Band 5                    | B-25861    |
| L8          | Inductor, Variable:<br>Band 6                    | B-25862    |
| L9          | Inductor, Variable:<br>Band 7                    | B-25863    |
| L10         | Choke:<br>1.1 microhenries                       | SA-3992    |
| L11         | Inductor, Variable:<br>0.9 microhenries          | B-20671    |
| L12         | Same as L10                                      |            |
| L13         | Same as L10                                      |            |
| L14         | Same as L2                                       |            |
| L15         | Choke, Filter: 4 henries                         | B-20788    |
| Mi          | Meter, S: 0-1 ma.                                | C-25545    |
| P1          | Socket, Crystal                                  | SB-2813    |
| PIA         | Plug, Cathode                                    | B-20682    |

| SYM-<br>BOL | DESCRIPTION                       | NATCO TYPE |
|-------------|-----------------------------------|------------|
| P2          | Socket, Accessory                 | B-27674-2  |
| P2A         | Plug, Accessory                   | A-27620    |
| Р3          | Socket, Calibrator:<br>Same as P2 |            |
| P4          | Plug, Crystal Filter<br>Input     |            |
| P5          | Plug, Crystal Filter<br>Output    |            |
| Sı          | Switch, BAND                      |            |
| S2          | Switch, OSC<br>Channel Selector   |            |
| S3          | Switch, IF Selector               |            |
| S4          | Switch, MODE                      |            |
| <b>S</b> 5  | Switch, TONE                      | B-20674    |
| S6          | Switch, On/OFF:<br>Part of R92    |            |
| \$7         | Switch, 115 v 230 v<br>line       | B-27662    |
| S8          | Switch, STBY/REC                  | B-27663    |
| <b>S</b> 9  | Switch,<br>CALIBRATE              | B-25541    |
| T1          | Coil, Antenna:<br>Band 1          | B-25871    |
| T2          | Coil, Antenna:<br>Band 2          | B-25872    |
| Т3          | Coil, Antenna:<br>Band 3          | B-25873    |
| <b>T</b> 4  | Coil, Antenna:<br>Band 4          | B-25874    |
| <b>T</b> 5  | Coil, Antenna:<br>Band 5          | B-25875    |
| Т6          | Coil, Antenna:<br>Band 6          | B-25876    |
| Т7          | Coil, Antenna:<br>Band 7          | B-25877    |
| T8          | Coil, RF: Band 1                  | B-25864    |
| T9          | Coil, RF: Band 2                  | B-25865    |
| T10         | Coil, RF: Band 3                  | B-25866    |
| Tii         | Coil, RF: Band 4                  | B-25867    |
| T12         | Coil, RF: Band 5                  | B-25868    |
| T13         | Coil, RF: Band 6                  | B-25869    |
| T14         | Coil, RF: Band 7                  | B-25870    |

# MISCELLANEOUS (CONT'D)

|   | CVM         |                               |                 |  |  |
|---|-------------|-------------------------------|-----------------|--|--|
|   | SYM-<br>BOL | DESCRIPTION                   | NATCO TYPE      |  |  |
|   | Ti5         | Coil, Mixer: Band 1           | B-25850         |  |  |
|   | T16         | Coil, Mixer: Band 2           | B-25851         |  |  |
|   | T17         | Coil, Mixer: Band 3           | B-25852         |  |  |
|   | 718         | Coil, Mixer: Band 4           | B-25853         |  |  |
|   | T19         | Coil, Mixer: Band 5           | B-25854         |  |  |
|   | T20         | Coil, Mixer: Band 6           | B-25855         |  |  |
|   | T21         | Coil, Mixer: Band 7           | B-25856         |  |  |
|   | 722         | Transformer, 1F:<br>1720 kc   | <b>SA</b> -9122 |  |  |
|   | T23         | Transformer, IF:<br>455 kc    | B-20672         |  |  |
|   | T24         | Transformer, IF:<br>455 kc    | SA-9123         |  |  |
|   | T25         | Same as T24                   |                 |  |  |
|   | T26         | Same as T24                   |                 |  |  |
|   | T27         | Transformer, IF:<br>455 kc    | SA-5343         |  |  |
| 1 | T28         | Same as T24                   |                 |  |  |
|   | T29         | Same as T24                   |                 |  |  |
| ļ | T30         | Same as T27                   |                 |  |  |
| 1 | T31         | Same as T24                   |                 |  |  |
|   | T32         | Same as T24                   |                 |  |  |
|   | T33         | Transformer, IF               | B-25078         |  |  |
|   | T34         | Transformer,<br>Audio Output  | B-20649         |  |  |
|   | T35         | Transformer, Power            | B-20789         |  |  |
| 1 | TB1         | Panel,                        | B-20681-3       |  |  |
|   | .           | Terminal, BSW                 |                 |  |  |
| 1 | TB2         | Panel,                        | B-20681-2       |  |  |
| l | 1           | Terminal, Audio               | - 444           |  |  |
|   | TP1         | Jack, Tip IFO:<br>Amph. 78-1P | B-27664-1       |  |  |
| 1 |             | 1                             |                 |  |  |
| ١ |             |                               |                 |  |  |
| l |             |                               |                 |  |  |
| l |             |                               |                 |  |  |
| 1 |             |                               |                 |  |  |
| l | ļ           |                               |                 |  |  |
| l |             |                               |                 |  |  |
|   | - 1         | İ                             |                 |  |  |
| l |             | İ                             |                 |  |  |
| ı |             | ľ                             | 1               |  |  |

| SYM-<br>BOL | DESCRIPTION                   | NATCO TYPE |
|-------------|-------------------------------|------------|
| T'P2        | Jack, Tip BFO:<br>Amph. 78-1P | B-27664-1  |
| VI          | Tube: type 6BZ6               |            |
| V2          | Same as V1                    |            |
| V3          | Tube: type 6BE6               |            |
| V4          | Same as V3                    |            |
| V5          | Same as V3                    |            |
| V6          | Tube: type 6BZ7               |            |
| V7          | Tube: type 6BA6               |            |
| V8          | Same as V7                    |            |
| V9          | Same as V7                    |            |
| V10         | Tube: type 6AL5               |            |
| V11         | Same as V3                    |            |
| V12         | Tube: type 6U8                |            |
| V13         | Same as V10                   | ļ          |
| V14         | Tube: type 12AT7              |            |
| V15         | Tube: type 6AQ5               |            |
| V16         | Tube: type 5U4GB              |            |
| V17         | Tube: type 0B2                |            |
| V18         | Tube: type 4H4C               |            |
| Yı          | Crystal, Quartz:<br>1275 kc   | B-20670    |
| <b>Y</b> 7  | Crystal, Quartz:<br>455 kc    | В-19815-2  |
| YX1         | Socket, Crystal               | SB-2813    |
| YX2         | Same as YX1                   |            |
| YX3         | Same as YX1                   |            |
| YX4         | Same as YX1                   |            |
| YX5         | Same as YX1                   |            |
| YX6         | Same as YX1                   |            |
|             |                               |            |
|             |                               |            |
|             |                               |            |
|             |                               |            |
| :           |                               |            |
|             |                               |            |
|             |                               |            |
|             |                               |            |
| .           |                               |            |
|             |                               |            |
|             |                               |            |

#### CODE #S-5U4

NOTE: This Silicon Rectifier Tube Replacement has a negligible voltage drop based upon an impedance of less than 10 ohms. To limit the output voltage to the same as that obtained with the vacuum tube being replaced and protect against surge currents, insert in series with the center tap of the secondary of the power transformer the following resistor:

|   | When<br>replacing<br>Tube Type | Use following<br>Resistor<br>(in ohms) | Suggested<br>Wattage<br>Rating |     |
|---|--------------------------------|--|--------------------------------|-----|
|   | 5A\$4                          | 21                                     | 25                             |     |
|   | 5AU4                           | 30                                     | 10                             |     |
|   | 5AW4                           | 153                                    | 5                              |     |
|   | 5T4                            | 150                                    | 10                             |     |
|   | 5U4G                           | 170<br>21                              | 10                             | . 0 |
|   | 5U4GB                          |  | 25                             |     |
|   | 5V4GA                          | 100                                    | <del></del>                    | Ť   |
|   | 5V4G                           | 100                                    | 5                              |     |
|   | 5W4                            | 50                                     | 1 -                            |     |
|   | 5W4GTG                         | 50                                     | 1                              |     |
|   | 5Y3                            | 50                                     | 2                              |     |
|   | 5Y3GT                          | 50                                     | 2                              |     |
| 3 | 5Z4                            | 50                                     | <del></del>                    |     |

#### MAXIMUM RATINGS

AC anode supply voltage
(RMS) per section (F,W, Center Tap) 550 volts.


#### SPECIFICATIONS (per section)


 Max. forward voltage drop @ 400 ma, DC
 6.0 volts.

 Mex. inverse current @ 1550 VDC
 2.5 uAmp.

#### BASE DIAGRAM (Bottom View)



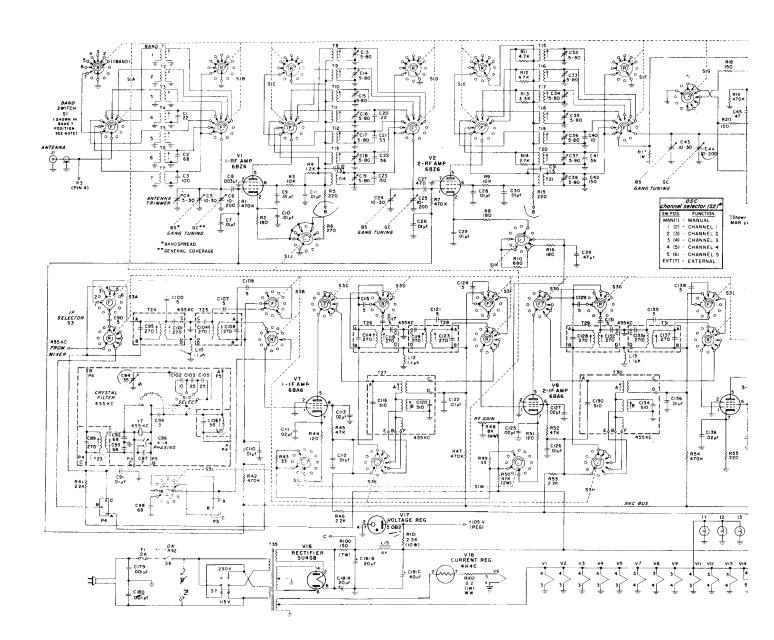

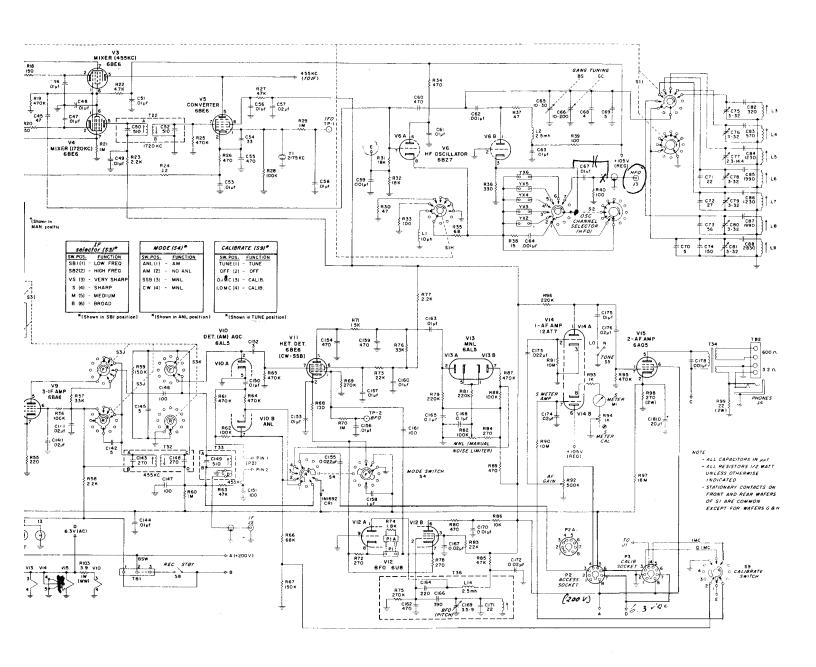

# TABLE OF CONTENTS

| Title            |     |   | Page |
|------------------|-----|---|------|
| Section          | 1   | DESCRIPTION                               |      |
|                  | 1.1 |   |      |
|                  | 1.2 |   |      |
| •                | 1.3 | Accessories                               | 5    |
| Section          | 2   | INSTALLATION                              |      |
|                  | 2,1 | 1 0                                       |      |
|                  | 2.2 |   | 6    |
|                  | 2.3 | Accessories                               | 7    |
| Section          | 3   | OPERATION                                 |      |
|                  | 3.1 |   |      |
|                  | 3.2 |   |      |
|                  | 3.3 |   |      |
|                  | 3.4 | Accessory Crystals                        | 12   |
| Section          | 4   | MAINTENANCE                               |      |
|                  | 4.1 |   |      |
|                  | 4.2 | Trouble-shooting                          |      |
|                  | 4.3 | Voltage Measurements                      | 13   |
| Section          | 5   | ALIGNMENT                                 |      |
|                  | 5.1 | General                                   | 16   |
|                  | 5.2 | Instruments                               | 16   |
|                  | 5.3 | IF Alignment                              | 16   |
|                  | 5.4 | RF Alignment                              | 17   |
| Section          | 6   | ACCESSORIES                               |      |
|                  | 6,1 | Crystal Calibrator Unit (XCU-400)         | 20   |
|                  | 6.2 | Mechanical Filter Housing                 |      |
|                  | 6.3 | Diversity Modification Kit                | 23   |
|                  |     | LIST OF ILLUSTRATIONS                     |      |
|                  |     | LIST OF ILLUSTRATIONS                     |      |
| E) ann an        |     |   | age  |
| Figure<br>Figure |     | Block Diagram NC-400                      | 3    |
| Figure           | 2   | IF Selectivity Curves                     | 4    |
| Figure<br>Figure | 3   | Audio Response                            | 5    |
| •                |     | Rear Chassis Panel                        | 7    |
| Figure           | _   | Panel Control Locations                   | 9    |
| Figure           | 6   | Tube Locations and Alignment Adjustments. | 14   |
| Figure           | 7   | Voltage Measurements                      | 15   |
| Figure           | 8   | Alignment Chart                           | 18   |
| Figure           | 9   | Alignment Adjustments (Bottom Chassis)    | 19   |
| Figure 1         |     | Schematic, XCU-400 Crystal Calibrator     | 21   |
| Figure 1         | 1   | Schematic, MFH Mechanical Filter Housing  | 23   |

# **NATIONAL NC-400**

# COMMUNICATIONS RECEIVER

#### **SPECIFICATIONS**

| FREQUENCY R | .ANGE |
|-------------|-------|
|-------------|-------|

 Band
 1
 0.54
 to
 1.1
 mc

 Band
 2
 1.1
 to
 2.1
 mc

 Band
 3
 2.1
 to
 4.1
 mc

 Band
 4
 4.1
 to
 7.0
 mc

 Band
 5
 6.9
 to
 12.2
 mc

 Band
 6
 11.8
 to
 20.4
 mc

 Band
 7
 19.6
 to
 31.0
 mc

#### TYPE OF RECEPTION

AM, SSB, and CW

#### SENSITIVITY

Approximately 1 uv for 10 db signal-noise ratio

#### FREQUENCY STABILITY

Long term drift .002% after warmup

#### RF INPUT

Single-ended coaxial, 52 ohm with antenna trimmer.

#### AUDIO OUTPUT

Impedance 3.2 and 600 ohms, 1 watt, distortion less than 10%.

#### POWER REQUIREMENTS

115/230 volts ac 60 cycle, 138 watts.

#### ACCESSORIES

Crystal Calibrator (plug-in) for 100 kc and 1 mc. Panel switch selection.

Diversity Modification Kit

Mechanical Filter Housing (plug-in)

Plug-in crystals (5) for fixed channel HF oscillator control

Plug-in crystal for BFO control

#### IMAGE REJECTION

Band 1 100 db (or more).
Band 2 100 db
Band 3 85 db
Band 4 65 db
Band 5 95 db
Band 6 90 db
Band 7 80 db

#### SELECTIVITY (IF)

16 kc to 150 cycles with crystal filter.

Broad 16 kc

Medium 8 kc

Sharp 4 kc

Very { 3.5 kc to 150 cy using sharp { crystal filter

SSB { 3.5 kc (at 6 db down) 10.0 kc (at 60 db down)

#### TUBE COMPLEMENT

1st RF amplifier 6BZ6 6BZ6 2nd RF amplifier 6BE6 1st Mixer (455 kc) 1st Mixer (1720 kc) 6BE6 6BE6 2nd Converter/oscillator 6BZ7 HF oscillator 1st IF amplifier 6BA6 6BA6 2nd IF amplifier 6BA6 3rd IF amplifier 6AL5 AM detector/ANL Heterodyne detector 6**BE**6 GAL5 Manual noise limiter 6U8 **BFO** 1st AF/S-meter amplifier 12AT7 6AQ5 Audio output Filament current regulator 4H4C Voltage regulator OB2 5U4GB Rectifier

NOTE: Matching loud-speaker available