

Thank you for purchasing an Icom CT-17 COMMUNICATION INTERFACE-V (CI-V) LEVEL CONVERTER. Up to 4 Icom CI-V transceivers or receivers can be controlled using the CT-17.

For maximum performance, please read these instructions thoroughly.

CONNECTIONS

CAUTION: Turn the power OFF when connecting to the transceiver (or receiver) and personal computer.

- ① Connect the supplied mini-plug cable to the transceiver (or receiver) and an RS-232C cable to your computer.
 - An RS-232C cable must be purchased separately.
- ② Connect a regulated DC power to the [9-15 V DC IN] jack using the supplied DC power cable.
- ③ Turn the computer power ON. Set the same baud rate of your computer's RS-232C terminal for the connecting transceiver/receiver. Refer to your computer instruction manual.
 - The standard Icom CI-V baud rate is 1200 bps.
- ④ Turn the transceiver and receiver power ON. Apply 9-15 V DC (20 mA) power to the CT-17.

NOTE: If the transceiver or receiver is set near the computer, computer noise may be received.

ADDRESS NUMBERS


Address number of the transceiver/receiver is preset in set mode, address switch or address connector. The Icom standard address numbers are as follows:

Model	Address number	Model	Address number
IC-781	26	IC-R9000	2A
IC-775	46	IC-R7100	34
IC-765	2C	IC-R7000	08
IC-761	1E	IC-R72	32
IC-738	44	IC-1275A/E	18
IC-737/A	3C	IC-970A/E/H	2E
IC-736	40	IC-820H	42
IC-735	04	IC-575A/H	16
IC-729	3A	IC-475A/E/H	14
IC-728	38	IC-375A	12
IC-726	30	IC-275A/E/H	10
IC-725	28		
IC-707	3E	Controller	E0


*Refer to the radio's instruction manual if your radio is not listed in the above table.

CI-V DATA FORMAT


CONTROLLER TO RADIO

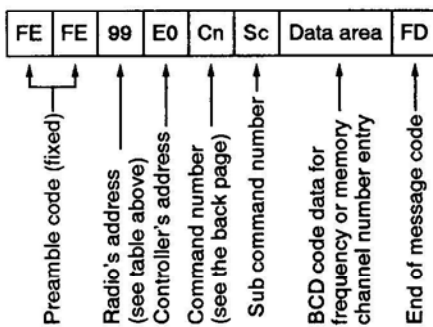


RADIO TO CONTROLLER

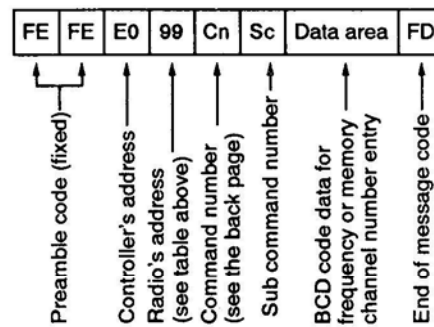

OK MESSAGE TO CONTROLLER

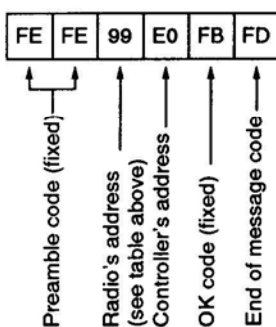

NG MESSAGE TO CONTROLLER

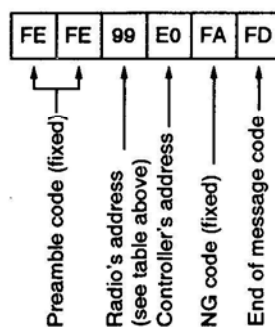

DATA EXAMPLE FOR FREQUENCY

Setting or reading 144.123456 MHz

Data area =

56	34	12	44	01
----	----	----	----	----

Setting or reading 7.123456 MHz

Data area =

56	34	12	07	00
----	----	----	----	----

SUB COMMAND TABLE

■ MODE DATA (Cn: 01/06)

Mode	Sub command	Passband data [pd]		
		Wide	Narrow*2	Middle*2
LSB	00	01	02	02
USB	01	01	02	02
AM	02	01	02	02
CW	03	01	02	02
RTTY	04	01	02	02
FM	05	01	02	02
Wide FM	06	—	—	
SSB*1	0500	—	—	

NOTE: Some modes are not available depending on radios.

*1IC-R7000 only.

*2Middle available for the IC-R9000 only, and "03" is used for "narrow."

■ MEMORY CHANNEL DATA (Cn: 08)

Sub command [mc]	Description
—	When no memory channel number is specified, the previously used channel is selected.
00-99	Selects specified memory channel.
0100-9999	Selects specified memory channel. [Example]: Mch 123 = 0123 Refer to the tables below for special channels.

■ SPECIAL CHANNELS (Cn: 08)

Special channels	Channel data
P1 (scan edge)	0100
P2 (scan edge)	0101
Call channel	0102

■ SPECIAL CHANNELS FOR IC-R9000/R7100 (Cn: 08)

Scan edge channel	Channel data		Scan edge channel	Channel data	
	IC-R9000	IC-R7100		IC-R9000	IC-R7100
0P1	1000	0900	5P1	1010	0910
0P2	1001	0901	5P2	1011	0911
1P1	1002	0902	6P1	1012	0912
1P2	1003	0903	6P2	1013	0913
2P1	1004	0904	7P1	1014	0914
2P2	1005	0905	7P2	1015	0915
3P1	1006	0906	8P1	1016	0916
3P2	1007	0907	8P2	1017	0917
4P1	1008	0908	9P1	1018	0918
4P2	1009	0909	9P2	1019	0919

